

User Manual

SSM 6000 CONTINUOUS



This manual contains information concerning installation, operation and maintenance/service of the analyzer system.



Certain activities – such as replacing hardware components or changing internal settings – may only be carried out by qualified personnel.

The manufacturer reserves the right to implement modifications at any time in order to adapt the user manual to the latest state of the art. Any reproduction or distribution of the user manual or any parts thereof, including translated versions, are subject to written approval.

The manufacturer does not assume any liability for errors or omissions, if any, in this documentation. Any liability for direct or indirect losses or damage arising in conjunction with the delivery or use of this documentation is excluded to the extent permitted by law.

This device left the factory in an impeccable, safe condition. In order to maintain this condition and in order to ensure safe operation, users must proceed in accordance with the information and warnings in this manual.



Please read this manual carefully before setting the device into operation!

All brands and their respective owners referred to in this manual are recognized and accepted. The manufacturer does not claim any rights with regard to such brands.

Table of contents

GENERAL SAFETY INFORMATION	9
1 INTRODUCTION	11
1.1 Description and use of the device	11
1.2 Importance of the measured variables	12
2 HARDWARE DESCRIPTION	13
2.1 Measuring characteristics	13
2.2 Elements of the analyzer	13
2.2.1 Process flow chart and measuring process	14
2.2.2 Display and control panel	16
2.2.3 Measuring-gas filter	17
2.2.4 Flow rate display and control	17
2.2.5 Measuring gas cooler (option)	18
2.2.6 Housing rinsing	18
2.2.7 Gas connections / safety features	19
2.2.8 Measuring-point switch (option)	19
2.2.9 Automatic shut-off valve (option)	20
2.2.10 Electrical connections	21
3 HARDWARE INSTALLATION	22
3.1 Requirements for the plant of installation, power supply	22
3.2 Measuring input and output conditions, calibration gases	22
3.3 Scope of delivery, rating plate and test certificates	23
3.4 Dimension drawing of the SSM 6000 system	24
3.5 Installing the gas analyzer	25
3.5.1 Unpacking and assembling the gas analyzer	25
3.5.2 Electrical connections	25
3.5.3 Connecting the gas pipes	29
4 USING THE GAS ANALYZER	31
4.1 Function keys	31
4.2 Starting a measurement	32
4.3 Menu structure	34

5	MENU AND FUNCTION OVERVIEW	35
5.1	Measuring parameters	35
5.1.1	Measuring interval	35
5.1.2	Alarm values	36
5.1.3	Single measurement	36
5.2	Calibration parameters	37
5.2.1	Gas types	37
5.2.2	Calibration gas concentrations	37
5.2.3	Start calibration	37
5.3	Device options	38
5.3.1	Datalogger	38
5.3.2	Analog measured-value outputs	43
5.3.3	Sensor data	44
5.3.4	Operation mode AUTO/MANUELL	45
5.3.5	DEVICE ID	45
5.3.6	Select language	45
5.3.7	Date/Time	45
6	SETTING INTO OPERATION	46
6.1	Switching the gas analyzer on	46
6.2	Setting operating parameters	46
6.2.1	Setting date and time	46
6.2.2	Setting alarm values	46
6.2.3	Setting the measuring interval	47
6.2.4	Other settings	47
6.3	Checking the interface functions	48
6.4	Performing a test measurement	48
6.5	Starting normal measuring operations	49
7	CALIBRATION	50
7.1	General information	50
7.2	Calibration setup and calibration gases	50
7.3	Recording the actual condition	51
7.4	Calibration procedure	52
7.5	Check measurement	53
7.6	Resuming measuring operations	53
7.7	Calibrating the oxygen sensor	54

8	MAINTENANCE, REPAIR, CUSTOMER SERVICE	55
9	STATUS MESSAGES, TROUBLE-SHOOTING	57
9.1	Limit-value alarms	57
9.2	Trouble-shooting	57
10	WARRANTY CONDITIONS	58
11	APPENDIX	59
11.1	Technical specifications	61
11.2	Parts subject to wear and tear; spare parts	63
11.3	Declarations of conformity	64
11.4	Accessory connection cables	68
11.4.1	PORT 1 connection cable	68
11.4.2	PORT 2 connection cable	69
11.5	Connection diagrams – Analyzer versions A / B	71

The description of the **PROFIBUS interface** can be found at the end of this documentation.

General safety information

The following safety information must always be observed during operation as well as during any maintenance and repair work on this device. Non-compliance with safety measures or any other information or warnings contained in this user manual constitutes a violation of safety standards underlying the design, manufacture and proper use of the device.

Non-compliance with such information can cause hazards for users and/or damage to the device! The manufacturer does not accept any liability for losses or damage caused by non-compliance with such safety measures on the part of the customer.

In order to avoid any additional hazards, unauthorized modification of the device is not permitted. In the event that repair work is necessary, the device should be returned to our technical office after prior notification.

Users are not permitted to open the device. Certain activities – such as replacing hardware components or internal settings – may only be carried out by qualified personnel.

Devices which are suspected to be at fault or defective must be switched off and protected against unauthorized access until the necessary repair/service work has been performed by expert personnel.



When working in explosive or flammable environments, do not operate the device without additional protection measures!



Proceed in accordance with the safety instructions applicable to the respective gases and calibration gas bottles or cylinders!

Prior to performing any work on gas ducts or pipes, flush these with ambient air or nitrogen (N₂) in order to avoid any hazard due to toxic, explosive, flammable or harmful components of the measuring gas.

When connecting the device, make sure that the correct mains voltage is available, and proceed in accordance with the information in the section titled "Requirements for the place of installation, power supply".

The analyzer is a safety-class 1 device, i.e. it is fitted with an earthing connection. Any interruption of the PE conductor inside or outside the device, or opening of the PE connection can make the device a hazard. Deliberate interruption of the PE conductor is not permitted.

The device comes with a power cable with earthed-contact plug and may only be connected to an earthed-contact receptacle. The protective effect may not be rendered ineffective by using an extension cable without PE conductor.



Before performing any fault-finding or repair work, or before replacing any parts, disconnect the device from any voltage sources! In the event that work must be performed on the live, opened device, this may only be carried out by an informed expert who must be familiar with the related risks and hazards!

1 Introduction

1.1 Description and use of the device

The SSM 6000 was specifically developed for analyzing biogenous process gases, such as biogas, sewage purification gas or landfill gas. It is designed for the requirements of regular process control directly at plants and equipment and to this effect combines quality sensor equipment for continuous gas analysis with multi-stage gas processing technology.

The full version is capable of analyzing the main gas types, i.e. methane, hydrogen sulphide, oxygen and carbon dioxide respectively. The analyzer features ease of operation and a clear-cut display structure.

In terms of time and frequency of use, the SSM 6000 family can draw on the largest experience of all biogas analyzers available on the market. The first analyzer developed in Europe specifically for continuous operation in biogas plants belongs to the SSM family and has been in use since 1998. Several hundred SSM gas analyzers have been delivered up to now.

The demanding, strongly varying measuring conditions in biogas plants mean exacting requirements for gas analyzers for continuous operation. Like in so many applications in biogas process technology, optimum adaptation to the difficult medium is the decisive test. In order to increase service life, measuring precision and, above all, operational safety, Pronova has integrated a host of additional functions into its SSM 6000 Classic which, in their totality, are quite unusual on the market:

- Limitation of the maximum hydrogen sulphide concentration at the H₂S sensor (equipment specification is SSM6000 classic)
- Multi-stage measuring-gas processing, including measuring-gas cooling to 5°C for dehumidification sample gas (option)
- Pressure and temperature compensation of measured values
- Detonation protection EN 12874, housing rinsing in conjunction with the option measuring cooler

Hydrogen sulphide is measured by means of electrochemical sensors. Already at typical gas concentrations in biogas plants, sensors of this kind can be subject to saturation with a reduction of signals and increased sensor wear or even sensor failure. The SSM 6000 Classic prevents this by microprocessor-controlled, concentration-dependent dilution of measuring gases which keeps the H₂S gas concentration at the sensor at a level of below 25 ppm – even at levels of several 1000 ppm in the biogas. The sensor hence always works in its optimum load range.

Advantages: Wide measuring range of 0 – 5000 ppm without exposing the sensor to excessive load or strain
 Increased long running stability
 Lower operating costs thanks to extended service life
 Increased reliability of the measurement

Biogas contains components which are harmful for the sensors and system components, in particular, hydrogen sulphide which has an aggressive action in conjunction with humidity. The SSM 6000 Classic hence comes with a measuring-gas cooler in order to reduce high humidity levels and protect the sensors. The SSM6000 LT analyzer version is available with an optional measuring-gas cooler.

Advantage: Reduced susceptibility to failure
 Lower operating costs thanks to extended service life
 Avoidance of volumetric errors thanks to constant measuring-gas dew point

Precision infrared sensors (IR sensors) are used to measure methane (CH₄) and carbon dioxide (CO₂). However, the measured values supplied by these sensors are strongly dependent on temperature and air pressure due to the underlying measuring process. Changes in air pressure due to changing climatic conditions, for example, can already cause relative changes in measured values in the order of up to 10%. Changes of a similar magnitude also occur if a device is calibrated, for example, in Berlin (40 m above mean sea level) and operated at an altitude of 600 m above mean sea level. With the SSM 6000, IR measurements are generally subjected to temperature and pressure compensation.

Advantage: Increased measuring precision.

Gas mixtures with critical concentration relationships between methane and oxygen are flammable. Although critical gas mixtures of this kind are very rare in biogas plants, the utmost must be done in order to avoid the risk of ignition. In the SSM 6000, a detonation protection unit separates the analyzer from the biogas plant. Furthermore, the interior of the device is flushed with ambient air, so that no flammable gas mixture can occur in the device even in the case of pipe leaks.

Advantage: Increased safety.

1.2 Importance of the measured variables

Methane CH₄

Methane is the only energy carrier in biogas worth mentioning. A high yield is hence vital for the profitability of the plant. Furthermore, the methane concentration provides important information concerning the fermentation process and hence the condition of the biogas plant. A decreasing concentration is the first sign of a disturbed fermentation process. Continuous monitoring of the methane content hence makes it possible to search for and identify the causes of a problem at an early stage. Depending on the purpose for which the biogas is used, the methane content must be within certain limits, for example, in order to permit its safe use as a fuel in pilot injection units or in gas-fuelled spark ignition engines. Too high or low a methane content can cause damage to the motor. Furthermore, too low a methane content strongly affects economic efficiency.

Hydrogen sulphide H₂S

The block cogeneration plant burns the hydrogen sulphide contained in biogas to form SO_x from which sulphurous or sulphuric acid are produced in the presence of water. These acids lead to corrosion of those parts of your plant (for example, pilot injection unit or gas-fuelled spark ignition engine) which contain nonferrous heavy metals. This is why hydrogen sulphide must be eliminated to the largest extent possible.

Regular measurement of the hydrogen sulphide content provides a good indication of how good the biogas "desulphurization" process is working.

Oxygen O₂

In most plants, desulphurization of the biogas is accomplished by injecting additional ambient air oxygen into the process. Experience has shown that an ambient air oxygen content of more than 5Vol.% does not lead to any further reduction of the hydrogen sulphide content by biological degradation. Furthermore, higher concentration can reduce the reaction capability of bacteria and a flammable gas mixture can occur in the fermenter. Monitoring the oxygen content in the biogas hence makes sense. If too high a hydrogen sulphide level is measured even though the oxygen content is within the optimum range, insufficient desulphurization must then be due to other causes. Possible explanations then include too low an ambient temperature for the bacteria or too short a contact time during which the bacteria is exposed to the biogas.

Carbon dioxide CO₂

Besides methane, carbon dioxide is the second largest quantitative component of biogas. Both components account for around 98% of the volume. This is, however, only an approximate value because other gases, such as ammonia (NH₃) or hydrogen (H₂), can be produced in more than insignificant concentrations during the fermentation process and hence occur in biogas. The total concentration of methane, carbon dioxide, oxygen and nitrogen contained in the injected air should amount to around 100Vol.%. The nitrogen concentration corresponds to around 3.8 times the O₂ concentration.

Hydrogen H₂

The determination of the hydrogen content is becoming increasingly important for the assessment of the conversion processes in the fermenter. Hydrogen is a pre-product and/or intermediate product of methane during the process of anaerobic decomposition, so that monitoring of the hydrogen concentration enables an even faster detection of disturbances during the fermentation process.

2 HARDWARE DESCRIPTION

2.1 Measuring characteristics


The SSM 6000 Continuous analyzer was developed for the continuous measurement of CH₄, O₂, CO₂ and for the discontinuous determination of H₂S and H₂ concentrations in biogenic gases. The table below contains details concerning measuring ranges, etc.

Gas type	Measuring range	Resolution	Precision	Measuring method	Other
CH ₄	0 ... 100 Vol.%	0,1 Vol.%	±2% FS	Two-beam IR	Temperature and pressure compensation
H ₂ S	0 ... 5.000 ppm	1 / 5 ppm	±5% FS	Electrochemical	Dilution stages 1:200/40/10/0
	0 ... 1.000 ppm	1 ppm	±5% FS	Electrochemical	Without Dilution
H ₂	0 ... 1.000 ppm	1 ppm	±5% FS	Electrochemical	Without Dilution (instead of H ₂ S)
O ₂	0 ... 25 Vol.%	0,1 Vol.%	±2% FS	Electrochemical	
CO ₂	0 ... 100 Vol.%	0,1 Vol.%	±2% FS	Two-beam IR	Temperature and pressure compensation

* The H₂S measuring range depends on the analyzer version. H₂S and H₂ measurement is carried out as a discontinuous process.

The following sections deal with operation, calibration and menu structure of the analyzer.

2.2 Elements of the analyzer

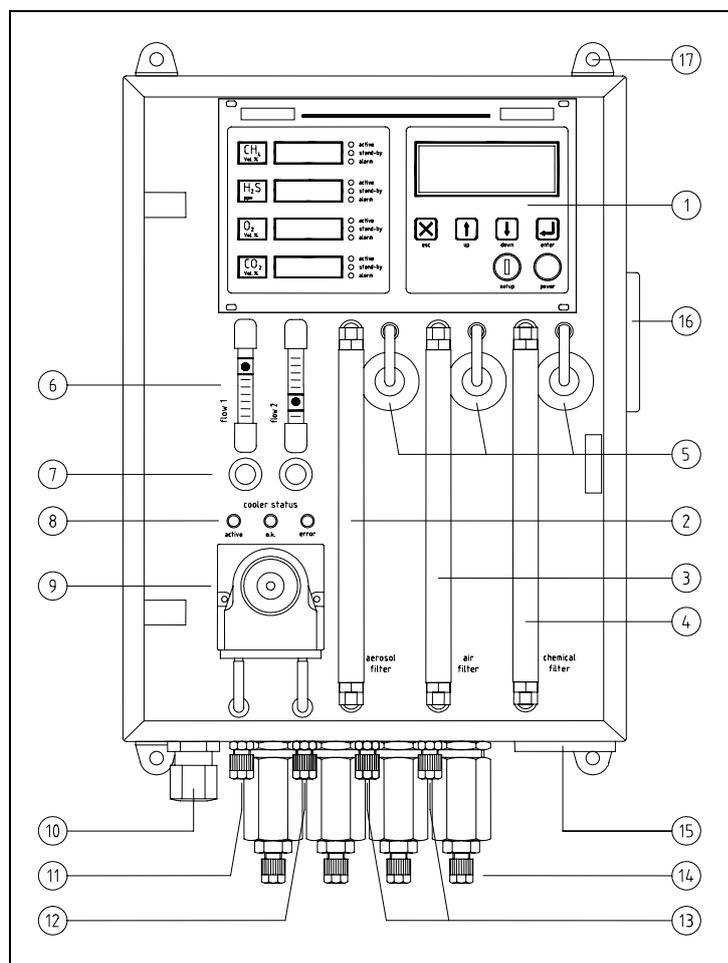

The front panel of the analyzer contains all the controls necessary for operation:

- 1 Control and display panel
- 2 Aerosol filter
- 3 Air filter
- 4 Chemical filter
- 5 Fine dust filter
- 6 Flowmeter
- 7 Needle valves
- 8 Measuring-gas input with detonation protection
- 9 Measuring-gas outputs
- 10 Screw-type cable connection with power cable
- 11 Interfaces
- 12 Wall-mount support
- 13 Status display LEDs for measuring-gas cooler
- 14 Condensate pump
- 15 Condensate output
- 16 Ventilation air inlet
- 17 Ventilation air outlet

All electrical connections and gas connections are located on the underside of the device.

Fig.: Front view of the analyzer

2.2.1 Process flow chart and measuring process

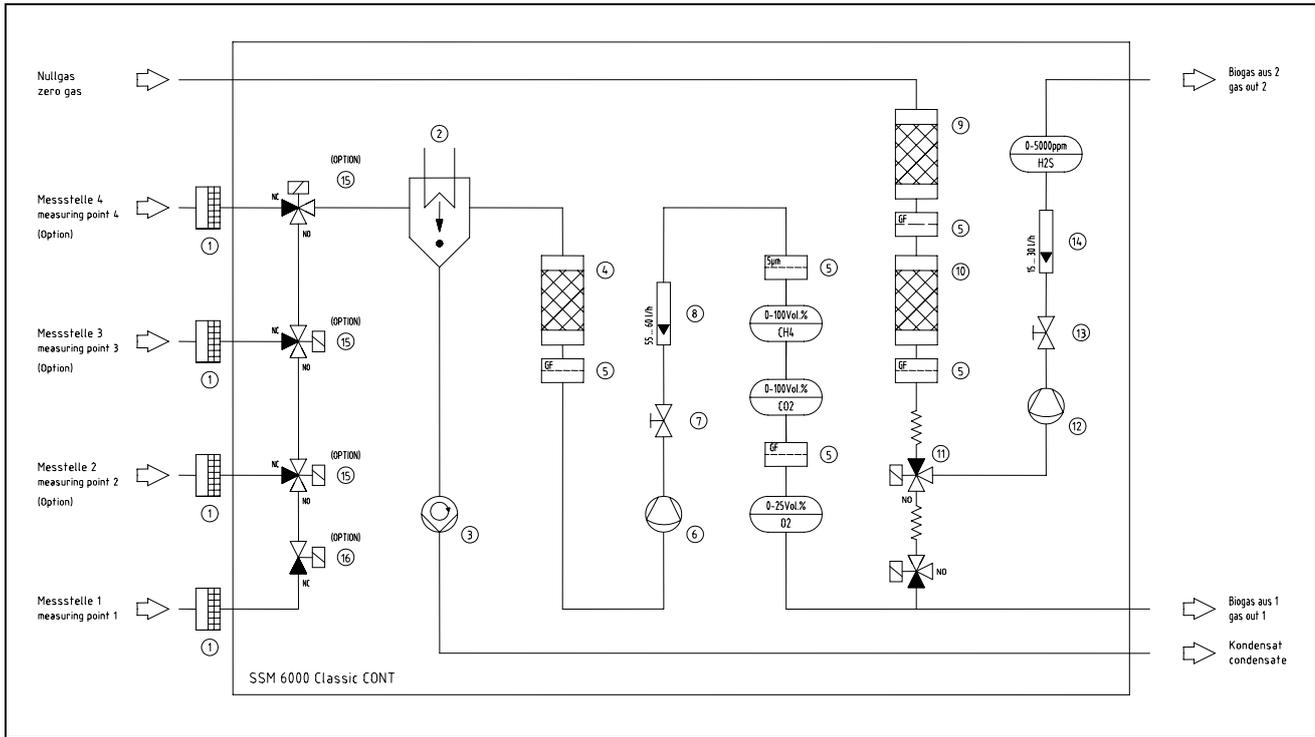


Fig.: Process flow chart SSM6000Classic continuous

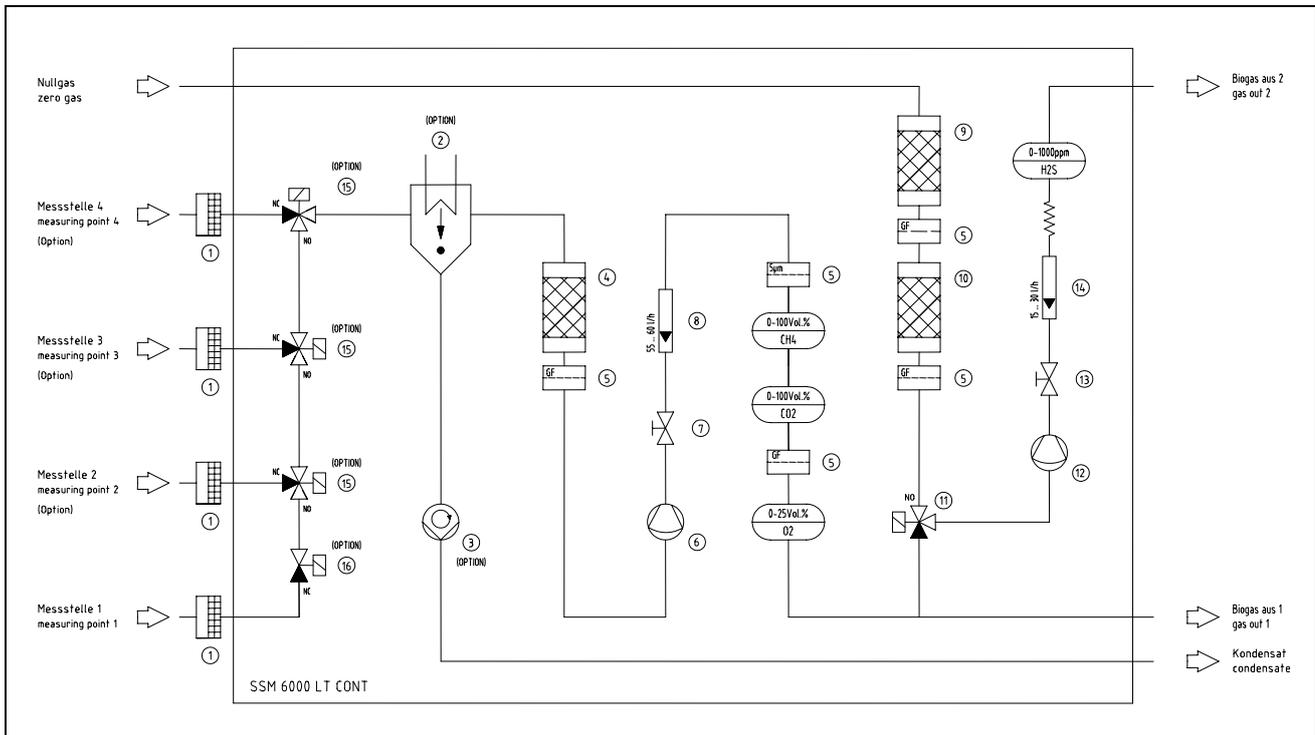


Fig.: Process flow chart SSM6000LT continuous

- | | | |
|------------------------------|-------------------------------|------------------------------------|
| 1 Detonation protection | 7 Needle valve (flow1) | 13 Needle valve (flow2) |
| 2 Measuring-gas cooler | 8 Flowmeter (flow1) | 14 Flowmeter (flow2) |
| 3 Hose pump | 9 Chemical filter | 15 Measuring-point switch (option) |
| 4 Aerosol filter | 10 Air filter | 16 Shut-off valve (Option) |
| 5 Fine dust filter | 11 3/2-way solenoid valve | |
| 6 Measuring-gas pump (flow1) | 12 Measuring-gas pump (flow2) | |

The measuring gas is initially drawn in through the safety device (1) of the selected measuring point (15) and cooled down to 5°C in the measuring-gas cooler (2). The hose pump (3) pumps the resultant condensate to the condensate discharge. The condensate must be collected and disposed of by the equipment user. In order to remove dirt particles from the measuring gas, the dehumidified measuring gas is directed through the aerosol filter (4) at the downstream end of the cooler. The measuring-gas pump (6) pumps the processed measuring gas through the "flow 1" flowmeter (8) with needle valve (7) to the CH₄, CO₂ and O₂ sensor and is subsequently discharged through the "Gas out 1" outlet. These three gases are continuously measured, so that the current gas concentrations are at all times displayed at the analyzer.

Since H₂S measurement is a discontinuous process, the analyzer includes a second gas path. Following expiration of a set measuring interval, filtered ambient air is first pumped to the H₂S sensor in order to determine its zero point. The chemical filter (9) and the air filter (10) eliminate foreign particles from the zero gas.

Depending on the H₂S concentration in the biogas, this is then followed by several dilution stages in the case of the SSM6000 Classic analyzer version where defined amounts of ambient air are added to the biogas. As a result, the H₂ sensor will never be exposed to more than 25 ppm irrespective of the H₂S concentration in the biogas.

In the case of the SSM6000 LT analyzer version, the biogas is directed to the H₂S sensor undiluted. In order not to overstrain the sensor, the average H₂S concentration should be significantly lower than 200 ppm. The H₂S measuring range of the SSM6000 LT totals 1000 ppm.

The measuring-gas volume through the H₂S channel is set at around 30 liters per hour by means of the "flow 2" flowmeter (14) and the needle valve (13) of the analyzer. Since H₂S measurement is a discontinuous process, the volume flow can only be set during an H₂S measuring cycle. The measuring gas of the H₂S measurement is discharged into the open through the "Gas out 2" outlet.

The pipes and hoses used to discharge the measuring gas should be as short as possible and extend separately into the open!

In the following analyzer version, all gas types are measured continuously. In order not to overstrain the H₂S sensor, the average H₂S concentration should not exceed 50 ppm. The service life of the H₂S sensor can only be vaguely defined with this configuration. No warranty is hence assumed for the H₂S sensor.


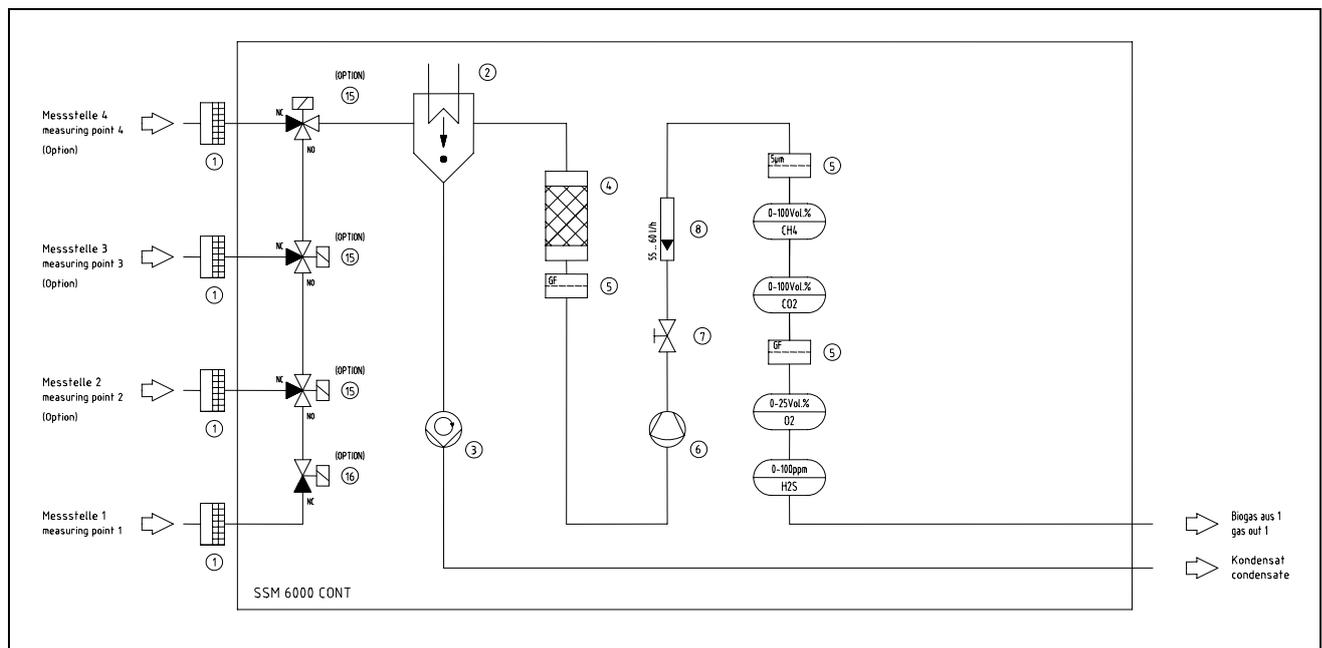


Fig.: Process flow chart SSM6000 continuous

2.2.2 Display and control panel

The measured values are displayed for each gas type on the four-digit LED panels in the respective unit (Vol.% and ppm, respectively). In the case of devices with reduced functionality, the displays of gas types not included in the functionality remain inactive.

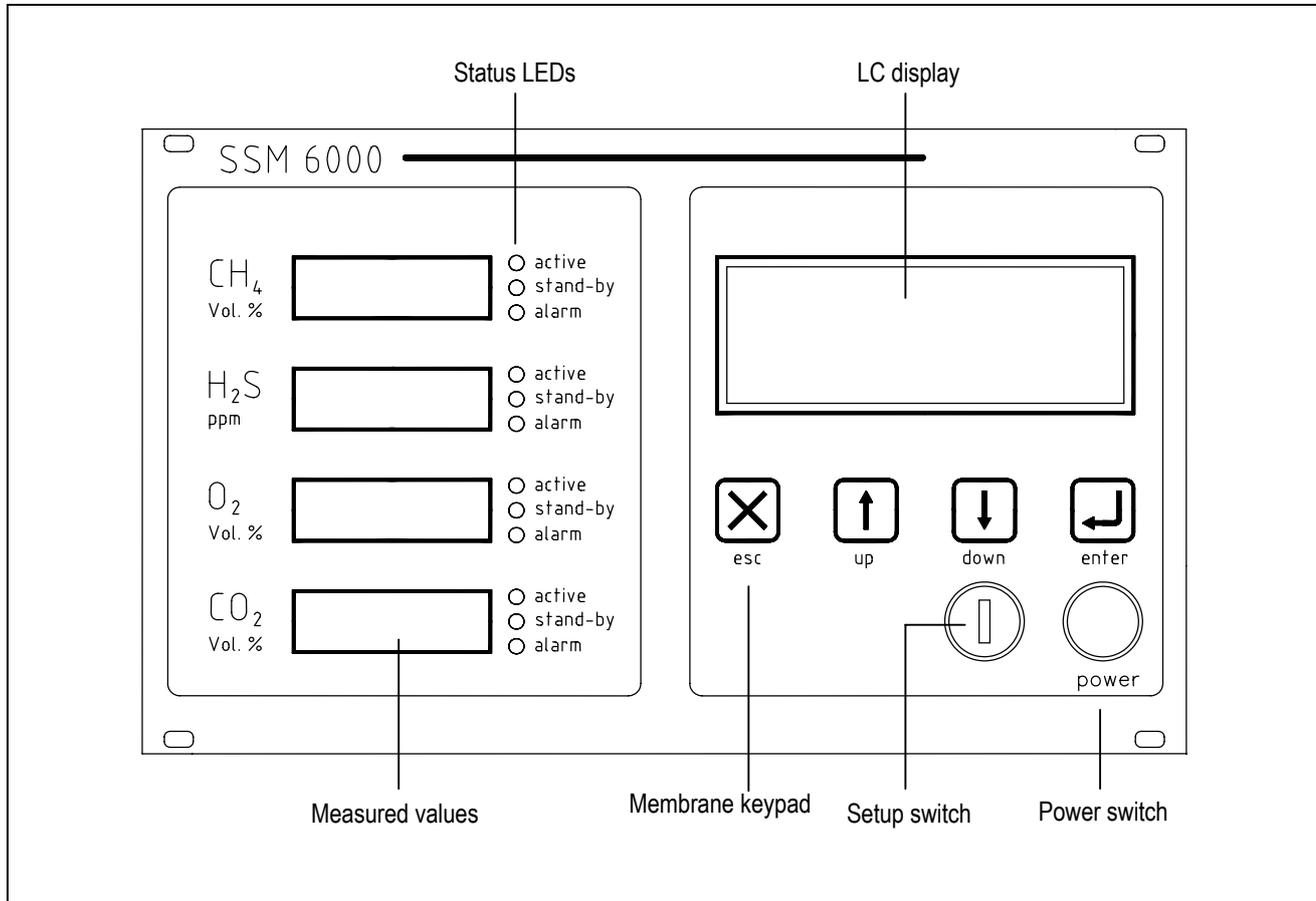

The status LEDs next to the measured values represent the status of the respective gas channel.

active	(green)	This gas type is currently being measured.
stand-by	(yellow)	The device is ready for operation, but the gas type in question is currently not being measured.
alarm	(red)	The last value measured was outside the set limits and hence triggered an alarm.

Settings and operating parameters of the analyzer can be entered and changed via the control panel. The user menus are displayed on the four-line, backlit LC display.

Navigation through the user menus is possible in setup mode via the membrane keypad (esc, up, down, enter). The setup mode is activated via the key-operated switch. Withdrawing the access key prevents changes in analyzer settings by unauthorized persons.

The analyzer is switched on and off via the "power" button.


2.2.3 Measuring-gas filter

Several filters are integrated into the gas path of the SSM 6000 in order to protect the sensors and other components of the system. The filters clean the biogas and the ambient air drawn in, thereby increasing both the service life of the sensors and the measuring precision of the system.

Filter type	Function
Aerosol filter	Eliminates aerosols and larger dirt particles from the gas sample. Replacement is only necessary if filter contamination is visible. (Material: glass and steel wool)
Air filter	Filters the ambient air for zero-point determination of the H ₂ S-channel. The zero-gas filter should be replaced at least once a year. (Material: activated carbon)
Chemical filter	The chemical filter is also used to filter the zero gas. The filter is slowly used up which can be easily seen by gray discoloration of the filter material. The filter must be replaced by a new one at the latest when the pink color of the filter material has vanished.

Fine-dust filters are additionally located at the downstream end of the filter cartridges. These fine dust filters must also be replaced when strong contamination of the filter is found.

2.2.4 Flow rate display and control

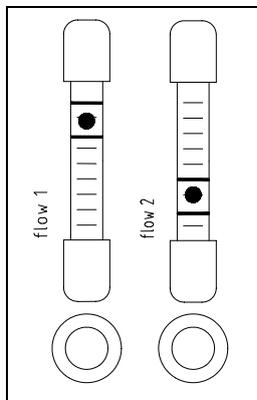

The measuring precision depends, amongst other things, on the measuring-gas volume flows. The measuring-gas volume flows are measured by the two flowmeters on the front panel of the SSM 6000 and can be adjusted by means of the needle valves located below the flowmeters.

Adjust the flow rates in such a manner that the floating indicators are located between the upper and lower marks during measurement.

Flowmeter	"flow 1" (left)	50 ... 65 liters per hour
	"flow 2" (right)	15 ... 30 liters per hour



"Flow 2" adjustment is only possible during an H₂S measuring cycle because the measuring-gas pump is inactive in "stand-by" mode.


2.2.5 Measuring gas cooler (option)

The SSM 6000 Classic analyzer version comes with a serial measuring-gas cooler. The SSM6000 LT is available with an optional measuring-gas cooler.

Measuring-gas coolers are used in analyzer systems to process contaminated and humid measuring gases and to lower their dew point. This reliably rules out the generation of condensate as well as the accumulation of dirt particles in the analyzer and other system components. Adjusting a stable measuring-gas starting dew point avoids water vapor cross-sensitivity and volumetric errors.

The gas cooler works with an electronically controlled Peltier cooler. The design of the heat exchanger made of Duran glass favors ideal flow conditions and ensures optimum lowering of the dew point to a stable value of 5°C.

A hose pump discharges the condensate produced into an external collecting tank. Status LEDs on the front panel indicate the operating status of the gas processing unit. An alarm is generated when the set temperature is exceeded by 3°C.

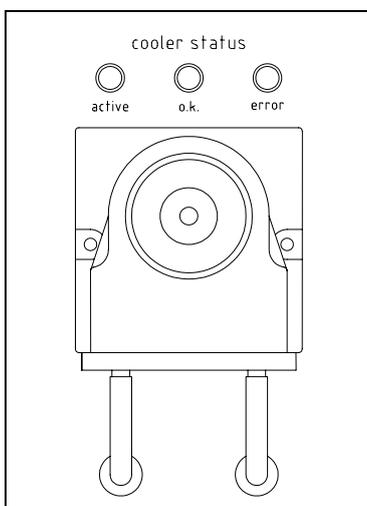

The status LEDs indicate the current operating status of the cooler. When lit, the individual status LEDs have the following meanings.

- | | |
|-----------------|--|
| cooler "o.k." | The measuring-gas cooler is ready for operation. The actual temperature of the cooler is within the pre-set temperature range of $5 \pm 3^\circ\text{C}$. |
| cooler "active" | The Peltier element is active. The frequency provides an indication of the load exposure of the cooler. |
| cooler "error" | The actual temperature of the cooler is outside the pre-set range of $5 \pm 3^\circ\text{C}$. |

Fig.: Status LEDs and hose pump on the front panel

The error LED can be activated for several reasons.

- After power-on, the measuring-gas cooler is not yet ready for operation. The cooler should have reached its operating temperature and the "error" LED should go off after around 15 minutes.
- A measuring-gas cooler overload condition exists during operation as a result of the excessively high dew point of the inflowing gas, or as a result of an excessive volume flow or ambient temperature.
- The device is defective. Contact the manufacturer of the device in such a case.

During the measuring process, the hose pump transports the condensate produced to the "condensate out" outlet of the device.

2.2.6 Housing rinsing

In connection with the option measuring cooler the SSM6000 has got available additionally comes with a fan unit that discharges the heat of the measuring-gas cooler and rinses the housing with ambient air. The flow rate of the fan totals around 56 cubic meters per hour, so that the generation of a flammable gas mixture within the analyzer is safely prevented.

In order to avoid dirt accumulation inside the device, a particle filter at the air intake opening on the right side panel of the analyzer ensures reliable filtering of dust and other contaminants. The housing filter must be checked at process-dependent intervals and must be replaced when visible contamination is found.

2.2.7 Gas connections / safety features

All gas connections are located on the underside of the analyzer. The connections are clearly marked and may not be exchanged. The gas-carrying pipes are connected to the device by means of clamping-ring screw connections.

The following connections must be made:	1x	Measuring gas in *
	2x	Measuring gas out
	1x	Condensate out

* Up to four measuring points with an automatic switching function are optionally available (refer to section 2.2.8).

The delivery includes 20 meters of PVC hose (an additional 10m per measuring point with the measuring-point switch option) and the required connections.

In order to protect the biogas plant against flashback, a safety unit is installed at the measuring-gas input of the analyzer which prevents flashback into the gas-carrying system of the plant in the case of pipe leakage.

The device is at present fitted with the F 510 detonation protection system according to EN 12874 / PTB 02 ATEX 4012X made of stainless steel. The manufacturer's conformity declarations and test certificates for the safety and protection equipment are shown in the appendix to this manual.

2.2.8 Measuring-point switch (option)

Depending on equipment enables the implementation of up to four measuring-gas inlets with detonation protection and 3/2-way solenoid valves for switching between the measuring points.

The solenoid valves are controlled and the measuring points selected by the SSM 6000. A measuring process can be triggered manually via the digital inputs at port 1 or the (optional) Profibus interface.

With the device in "MANUAL" mode, a measuring process can be started in stand-by mode at any time by pressing the <enter> key. You are first prompted to select the measuring point via the <up> and <down> keys. Thereafter, press the <enter> key once again in order to confirm the start of the measuring process.

The Analyzer comes with four digital inputs at Port 1 which are used to start the H₂S measuring process and at the same time to select the measuring point. The digital optocoupler inputs are assigned as follows and must be activated for around 1.5 seconds:

DI 01	-	measuring point 1
DI 02	-	measuring point 2 / valve 1
DI 03	-	measuring point 3 / valve 2
DI 04	-	measuring point 4 / valve 3

After the start of the measuring process, the analyzer simultaneously activates the corresponding measuring-point valve and/or the pertinent digital output at plug connector PORT2. The digital inputs are not read again until a H₂S measuring process has been completed. After an H₂S measuring cycle, the continuous measuring mode of the other components continues to be active until another measuring point is selected or until the <esc> key is pressed in order to terminate the measuring cycle.

If the device is controlled via the digital inputs or via the Profibus interface, an H₂S measuring interval of "9999" should be set in order to avoid conflicts with the automatic measuring interval.

2.2.9 Automatic shut-off valve (option)

The SSM6000 with the "continuous measurement" option is designed for pressures between -200 and $+200$ hPa at the measuring-gas inlets in measuring mode. During measuring breaks and/or with the analyzer switched off, an overpressure of more than 5 hPa at the measuring-gas inlet of **measuring point 1** causes a continuous flow through the analyzer. Since the condensate pump is inactive in stand-by mode, condensate can accumulate in the cooler during longer measuring breaks. When a measuring process starts, this condensate would then be drawn into the gas system and could damage the analyzer. This means that the measuring-gas supply for **measuring point 1** must be interrupted during measuring breaks with admission pressures of more than 5 hPa, using suitable means, such as an automatic stop valve.

The solenoid valve can be controlled via the "Measurement active" status output of the SSM 6000 on the underside of the analyzer (port 2).

At the customer's request, the manufacturer can install a suitable stop valve (16) in the analyzer. The valve is then automatically controlled by the analyzer. This feature is explicitly mentioned in the test and calibration certificate.

The measuring-gas inlets of measuring points 2 to 4 are closed during measuring breaks and when the analyzer is switched off, and hence do not require an additional shut-off device.

2.2.10 Electrical connections

All electrical connections are located on rear side of the analyzer.

Voltage supply

The analyzer system requires up to standard a voltage supply of 230VAC / 50Hz and features a maximum power consumption of 85VA. On option the instrument could be ordered with initial voltage for 115VAC / 60Hz. A 1.5m long power cable with earthed-contact plug (3x0,75mm²) serves as a supply cable. The power supply does have a multi-pin with each precision-backup of 4x20 mm 1 A. The main switch on the front panel is used to turn the system on and off. For further information, please refer to the terminal diagrams in the appendix.

We recommend installing a mains disconnect switch or a switched receptacle in the power supply circuit near the gas analyzer in order to be able to disconnect all poles of the gas analyzer from the power supply, if necessary. The mains disconnect switch must be marked in a manner that clearly shows the equipment to be disconnected.

Signals and interfaces

The SSM 6000 analyzer comes with the following connections for communicating with peripheral equipment.

Plug connector	Description
Port 1	Analog measured-value outputs 4-20mA, one output per component measured Digital inputs for starting a measuring process and controlling up to four measuring points 12VDC voltage output for controlling the digital inputs
Port 2	Digital status outputs and limit-value alarms Digital outputs for controlling up to three solenoid valves for the measuring-point switch 12VDC voltage output – for reading/driving the digital outputs
RS 232	RS 232 interface for the output of measured values with time stamp on a PC and/or data logger
Profibus (option)	Interfaces for the output of measuring data and status messages, as well as initialization of a measuring process and controlling the measuring-point switch via a Profibus system.
CAN bus (option)	Interfaces for the output of measured values and status messages, as well as initialization of a measuring process and controlling the measuring-point switch via a CAN bus system. This interface is not yet supported by the software.

For further information, please refer to the terminal diagrams in the appendix and to the "Installation" section.

3 Hardware installation

3.1 Requirements for the plant of installation, power supply

All major system components are installed in a wall-mounted housing with IP20 protection. The device is hence designed for installation in closed, air-conditioned rooms. The device should be typically installed on a vertical wall in the central machinery room of the biogas plant as close as possible to the point of sampling.

Air inlet and air outlet openings may not be obstructed by objects or walls in order to ensure sufficient air circulation and to avoid heat accumulation.

The analyzer system must be protected against adverse ambient conditions, such as:

- extreme cold,
- exposure to heat radiation, for example, sunlight, furnaces, boilers or gas motors,
- strong temperature fluctuations,
- accumulation and penetration of dust,
- aggressive atmosphere and
- shock/vibration.

Climatic conditions	Air pressure	850...1100 hPa
	Relative humidity	75 % max.
	Ambient temperature	during storage and transport during operation
		-25...+50 °C +10...+40 °C
Power supply*	Input voltage	230 VAC 50 Hz 115 VAC 60Hz (Option)
	Power consumption	85 VA max.

* specification is written onto/look at label specification quod vide appliance rating plate

3.2 Measuring input and output conditions, calibration gases

Measuring input conditions	Input dew point of the gas to be measured
Instruments with measuring cooler	Instruments with measuring cooler max. 40°C
Instruments without measuring cooler	Instruments without measuring cooler min. 5°C ambient temperature limit
below	Measuring-gas temperature at the input 80°C max. Pressure at the measuring-gas input ** -200 ... +200 hPa
Measuring output conditions	The measuring gas must be discharged into the outside atmosphere in a non-pressurized condition using hoses which should be as short as possible. 5m max. / separated

* Ingress of condensate into the analyzer, for example, in the form of droplets in the biogas pipe/hose, must be avoided under all circumstances. If necessary, a pre-separator must be installed.

** In the case of an excess pressure of more than 5 hPa at the measuring-gas inlet of **measuring point 1**, the customer is responsible for installing a stop valve in order to close the measuring-gas inlet during longer measuring breaks. An automatic stop valve is also optionally offered by the manufacturer and directly integrated into the measuring-gas inlet of the analyzer. The measuring-gas inlets of measuring points 2 to 4 are automatically closed during measuring breaks and when the analyzer is switched off, and hence do not require an additional shut-off device.

Corrosive gases	The gas analyzer may not be used to measure corrosive gases. Certain gases, such as chlorine (Cl ₂) or hydrogen chlorides (such as moist HCl), and chlorine-containing gases or aerosols must be cooled or pre-absorbed.
Calibration gases for calibration	For information concerning the calibration gases for calibrating the gas analyzer, please refer to the "Calibration" section.

3.3 Scope of delivery, rating plate and test certificates

Scope of delivery	Quantity	Description
	1	SSM 6000 gas analyzer
	1	Setup key
	1	Housing key
	20 m	PVC hose 4x1mm (plus an additional 10m per measuring point with the measuring-point switch option)
	2	Replacement fuse for SSM 6000 (miniature fuse, 1A slow-blow, 4x20mm)
	1	Data cable for RS232 interface (length: 3m)
	1	User manual (German or English)
	1	CD-ROM with operating manually (pdf format) with gsd file for Profibus connection
	1	Test and calibration certificate of the SSM 6000 analyzer

Identification plate

SSM 6000 (B) CONT	
CH ₄ / H ₂ S / O ₂ / CO ₂	
S No.:	80025000 - 375
Mains:	230 VAC / 50 Hz 85 VA max.

The rating plate is located on the underside and on the door of the device.

It contains the following information:

- Analyzer identification
- Measuring components
- Manufacturing and serial number
- Power supply voltage, frequency and power consumption

Test and calibration certificate

The test and calibration certificate contains the following information

- Manufacturing and serial number
- Measuring components and options
- Software version
- Calibration and result of test measurements
- Result of the function test
- Test result, including test date

3.4 Dimension drawing of the SSM 6000 system

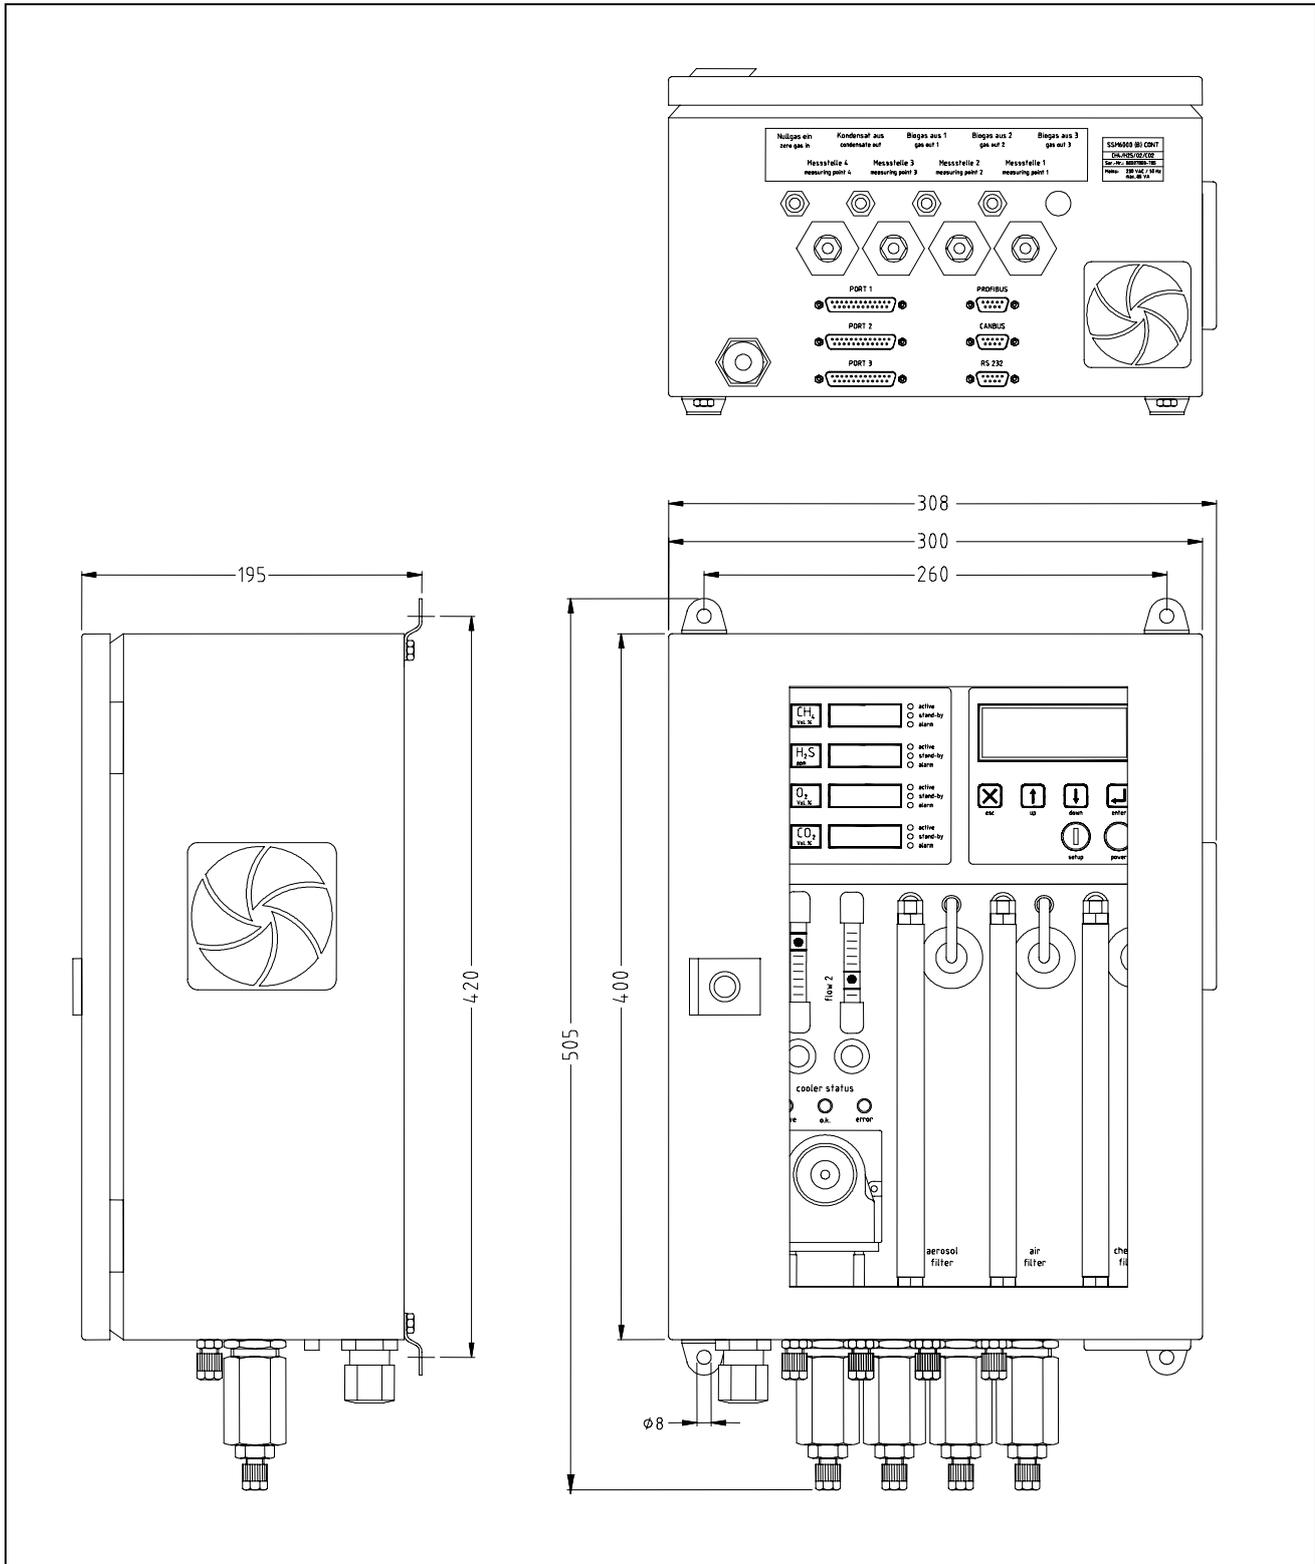


Fig.: Connection dimensions of the SSM 6000



During installation, free space of at least 15 cm must be left on the right hand side of the analyzer and at least 25 cm underneath the analyzer.

3.5 Installing the gas analyzer

3.5.1 Unpacking and assembling the gas analyzer

Unpacking the gas analyzer

Step	Action
1	Carefully remove the transport packaging of the analyzer, and store the analyzer in a clean place.
2	Remove the rubber foam parts from the analyzer system.
3	Visually check the analyzer system for transport damage before assembling.

The analyzer was carefully packed for shipment. Before installing and setting into operation, check for possible transport damage. In the case of transport damage with signs of incorrect handling, have the damage recorded by the carrier (rail, post, mover) within seven days.

Make sure not to lose the accessories enclosed (refer to the "Scope of delivery" section).

The transport box and the rubber foam parts should be kept for future shipment of the analyzer (calibration and analyzer inspection).

The analyzer should be mounted on a vertical, stable wall using sufficiently sized fastening elements. When selecting the place of installation, please remember that free space of at least 25 cm is required underneath the device for electrical connections and hoses. A distance of at least 15 cm should be maintained between the right hand side of the device and the nearest wall in order to ensure sufficient air circulation and to enable the replacement of the housing filter.

3.5.2 Electrical connections

All electrical connections are located on the underside of the analyzer.

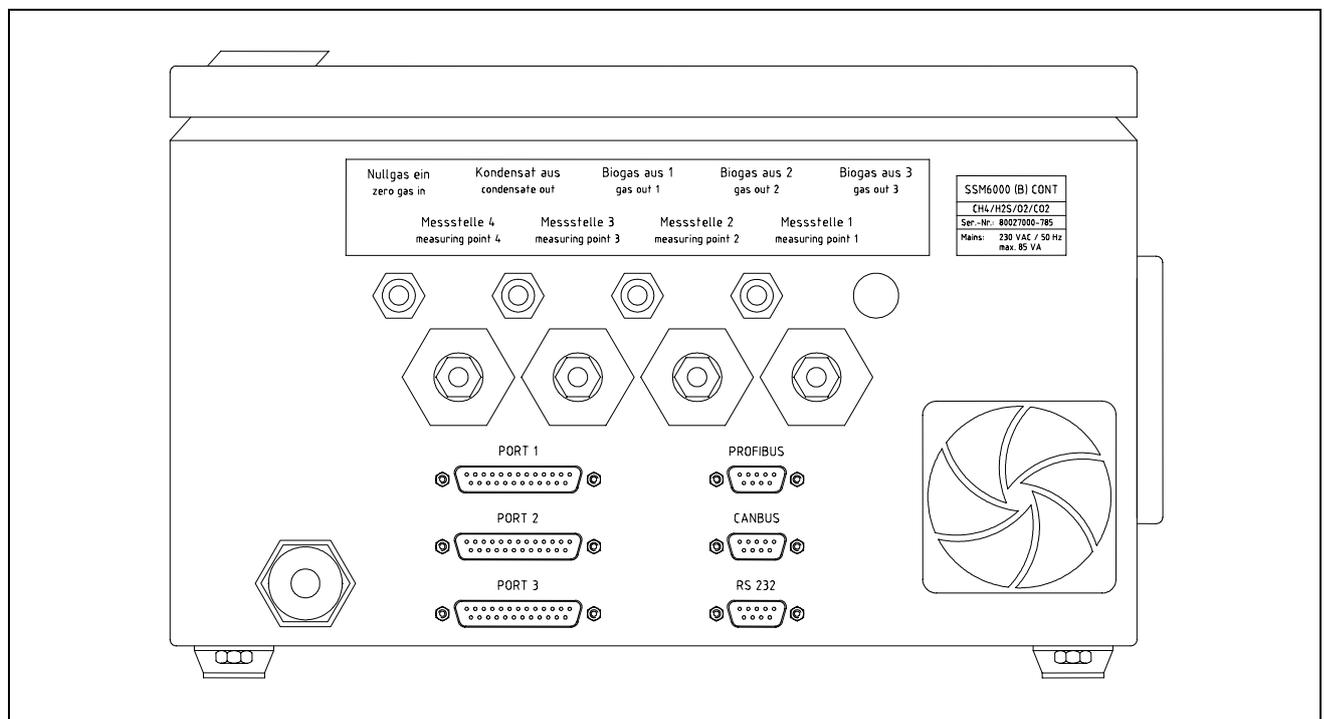


Fig.: Analyzer view from below (standard)



Proceed in accordance with the applicable national safety regulations for the construction and operation of electrical systems as well as the safety information below!

The connection between a protective earth connection and a protective earth conductor must be made before any other connections are made!

The gas analyzer can become a hazard if the protective earth conductor is interrupted inside or outside the gas analyzer or if the protective conductor connection is disconnected!

Live parts can be exposed when covers are opened or when parts are removed unless this can be carried out without the use of tools. Furthermore, connection points can also be live.

Voltage supply

The device comes with a power cable with earthed-contact plug and may only be connected to an earthed-contact receptacle. The protective effect may not be rendered ineffective by using an extension cable without PE conductor.

We recommend installing a mains disconnecter switch or a switched receptacle in the power supply circuit near the gas analyzer in order to be able to disconnect all poles of the gas analyzer from the power supply, if necessary. The mains disconnecter switch must be marked in a manner that clearly shows the equipment to be disconnected.

Mains voltage: 230 VAC / 50 Hz (option 115VAC / 60 Hz), quod vide appliance rating plate
Power consumption: 85 VA max.

A QUICKON type cable screw connection is foreseen for the power supply for the analyzer. In the case of installation without an earthed-contact plug, the analyzer is connected directly using the screw connection according to the following installation instructions.

The screw-type cable connection is suitable for the following power cables:


Cable specifications: Light to medium conduits, such as. H03VV-F / H05VV-F, number of poles = 3 (L/N/PE)
Flexible cross-section 0.75 to 1.5 mm² / conductor configuration according to VDE 0295 = class 2 to 5
Wire diameter, including insulation, up to 3mm / outside diameter 5.6 to 9 mm



Connecting the voltage supply within the device by the customer is not permitted by the manufacturer and will render the guarantee invalid.

Fitting the power cable using QUICKON*QUICKON components*

- | | |
|---|-----------------|
| 1 | Union nut |
| 2 | Crown |
| 3 | Rubber seal |
| 4 | Splice ring |
| 5 | Contact support |

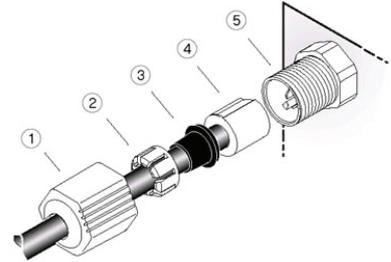**1. Remove power cable**

- Open screw connection.
- Pull the cable in order to separate the wires from the terminals.
- Remove residues of insulating material before re-connecting.

2.. Preparation and installation

- Strip a section of around 15mm of the cable sheath.
- Assemble union nut, crown and rubber seal.

**3. Install QUICKON components**

- Push wire ends into the openings of the splice ring. In order to ensure correct assignment, the conductors are marked with numbers and may not be interchangeable!
- Identification of the individual conductors:

1	→	N	(neutral)	blue
2	→	L	(phase)	brown
3	→	PE	(protective earth)	green/yellow
- Cut off excess wire ends (the wire ends may not project from the splice ring by more than 2mm).

**4. Tighten**

- Insert the prepared cable into the contact support.
- Tighten the union nut. During tightening, QUICKON automatically establishes the contact and the strain relief function.

*Re-connecting the power cable*

- Cut off wire ends approx. 20mm.
- Erneute Montage wie zuvor beschrieben.

Port 1 - analog measured-value outputs / digital inputs

One analog measured-value output is available at the plug connector, port 1. The maximum burden totals 550Ω. Furthermore, up to four digital inputs are available at port 1, depending on the analyzer version and its features.

This instrument comes with active 4-20 mA current outputs without galvanic isolation with a common reference potential, so that galvanic isolation against the analyzer is not absolutely necessary.

Via the digital inputs at port 1, the higher-level system controller can control up to four measuring points individually and trigger analyses.

The layout of the port 1 plug connector and detailed signal specifications are shown in the terminal diagrams in the appendix. Optional ready-to-connect control cables (refer to appendix) measuring 10 and 20m in length, or D-sub plug connectors with screw-type terminals are available for simple and easy installation.

Connector module at the analyzer: D-sub 25-pole, socket

Port 2 - digital outputs

The following digital outputs are available on the port 2 plug connector:

Status outputs	(3):	Measurement active, ready mode, stand-by and setup mode
Limit-value alarms	(6):	Violation of upper limit for all gas types as well as violation of lower limit for CH ₄ and O ₂
Measuring-point switch	(3)	Control of up to three externally installed solenoid valves (measuring points 2 to 4)
Test gas valve	(1):	Control of an externally installed test gas valves

The "open collector" transistor outputs are short-circuit resistant and can be read and/or used to control the solenoid valves either by using the 12-V supply voltage of the analyzer or by an external voltage supply of 35VDC max.

The layout of the port 2 plug connector and detailed signal specifications are shown in the terminal diagrams in the appendix separately for the different analyzer versions. Optional ready-to-connect control cables (refer to appendix) measuring 10 and 20m in length, or D-sub plug connectors with screw-type terminals are available for simple and easy installation.

Connector module at the analyzer: D-sub 25-pole, socket

RS 232 interface

The RS 232 interface is used for the digital output of measured values with time stamp on a PC or an external data logger. An IBM-compatible PC with serial R232 interface and a suitable terminal program are required for transmission. The terminal is a standard feature included in Microsoft operating systems, Windows 95 and higher.

Note that without additional amplifiers transmission via an RS232 interface only works perfectly with cable lengths of up to a maximum length of 20 meters.

Connector module at the analyzer: D-sub 9-pole, socket

PROFIBUS interface (option)

A suitable interface is available on the underside of the analyzer for the output of measuring data, limit-value alarms and status messages and for controlling the analyzer via a Profibus system. The test certificate contains a note stating whether this interface is activated / enabled. A detailed description of the interface, including installation information, is available in the appendix to this documentation.

Connector module at the analyzer: D-sub 9-pole, socket

CAN interface (option)

The CAN interface for the output of measured data via a CAN bus system is not yet supported by the software in its current version.

Connector module at the analyzer: D-sub 9-pole, plug connector

3.5.3 Connecting the gas pipes

All gas connections are located on the underside of the analyzer. The connections are clearly marked and may not be exchanged. The gas-carrying pipes are connected to the device by means of clamping-ring screw connections.

The following connections must be made:

- 1x Measuring gas in / 2 .. 4x (with measuring-point switch option)
- 2x Measuring gas out
- 1x Condensate out

The delivery includes 20 meters of PVC hose (an additional 10m per measuring point with the measuring-point switch option) and the required connections.

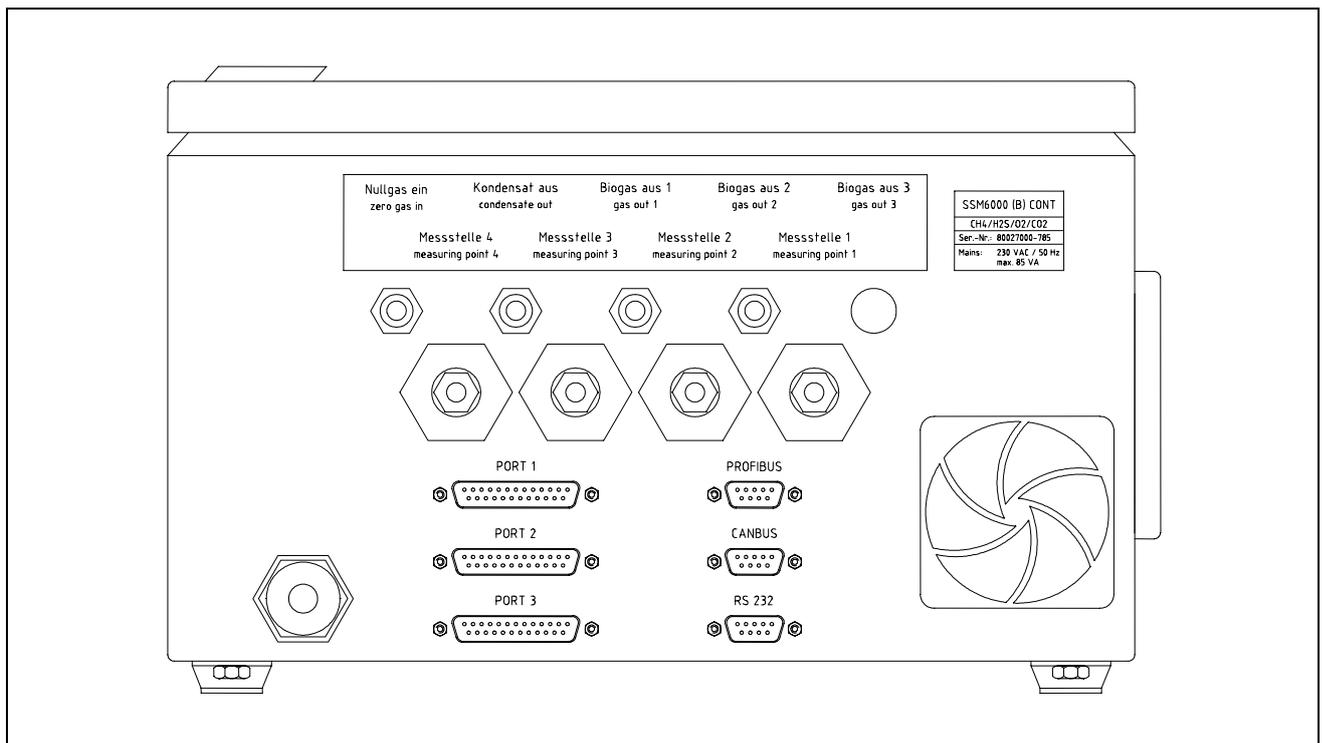


Fig.: Analyzer view from below

In order to connect the gas pipes and hoses, proceed as follows:

Connecting the gas pipes	Step	Action
	1	Cut hose at a right angle.
	2	Push knurled nut and clamping ring over the end of the hose.
	3	Push the end of the hose fully onto the sleeve.
	4	Screw on the knurled nut and tighten by hand.

Measuring-gas input:

The length of the biogas pipe should not exceed 50m. Stop valves should be installed at the sampling points of the biogas plant in order to prevent biogas from escaping when the measuring-gas hoses are disconnected. The measuring-gas pipe should, if possible, slope towards the sampling point, so that any condensate produced can flow back into the process. The pipes must, on all accounts, be definitely protected against frost.

If the measuring-gas inlet of **measuring point 1** is not fitted with an internal stop valve (option), the customer is responsible for installing a stop valve in the case of admission pressures of more than 5 hPa in order to close the inlet during longer measuring breaks.

In order to protect the biogas plant against flashback, a safety unit is installed at the measuring-gas input of the analyzer which prevents flashback into the gas-carrying system of the plant in the case of pipe leakage. The device is at present fitted with the F 510 detonation protection system according to EN 12874 / PTB 02 ATEX 4012X. Its gas connection is identical to the other screw-type connections.

Exhaust air pipes:

Make sure that the length of the exhaust air pipes does not exceed 5 m in each case in order to ensure almost pressureless discharging of the measuring gas. The exhaust air pipes must extend **separately** into the open. Make sure that the pipes are laid in such a manner that they are protected against frost and that the outlets cannot freeze.



The exhaust air contains biogas that generates a flammable gas mixture with air oxygen!
Make sure that this does not cause any hazards!

Condensate pipe:

The condensate produced during gas processing must be directed through a hose into a suitable collecting tank, and must be disposed of in accordance with the applicable laws and regulations. Make sure that the condensate pipe and the collecting tank cannot freeze.



Important - aggressive condensate is possible!
Therefore proceed with care when handling condensate, and wear appropriate protective clothing.

→ Installation of the system is now complete, and the system can be set into operation as described in section 6.

4 Using the gas analyzer

This section contains a brief description of how to use the analyzer in order to enable users to quickly start working with the device. For a detailed description of the individual functions and menu items, please refer to the following "Menu and function description" section.

4.1 Function keys

The functions keys on the control panel activate the different user menus in order to select device settings. The user menus can be accessed in setup mode after operation of the key switch.

The function keys have the following meanings:


Symbol	Description	Function
 esc	esc	Return from the current menu to the next higher menu
 up	up	Forward in the current selection (up or left, depending on the context)
 down	down	Back in the current selection (down or right, depending on the context)
 enter	enter	Call current selection or confirm changed value

In order to change the settings in a menu, proceed as follows:

- Operate the key switch in order to activate the setup mode.
- Press the <up> and <down> keys in order to select the desired entry.
- Press <enter> in order to open the selected menu.

Example: Changing the measuring interval

Operate the key switch in order to access the setup mode. The cursor flashes in front of the sub-menu titled **MEASURING PARAMETERS**. In order to access this menu, press <enter> in order to confirm the selection. The LC display now shows the **MEASURING PARAMETERS** menu and the cursor is positioned in front of the first entry, i.e. **MEASURING INTERVAL**. Press the <enter> key once again in order to access the **MEASURING INTERVAL** editing level.



Press <down> and <up> in order to select the desired parameter (such as H₂S). The cursor flashes in front of the respective entry.

Press <enter> in order to confirm the selection. The cursor moves to the first digit of the value that is currently adjusted (such as the numeral 1 of the value 1440).

Use the <down> and <up> keys in order to set the desired value, and press the <enter> key to confirm your entry. The cursor advances by one position that can now be changed.

After the last numeral of the input field, the cursor moves to the input field (for example, in front of the text H₂S) when you press the <enter> key. The changed value was saved. If you press <esc> in order to cancel the entry before the cursor is positioned in front of the input field, the changes made so far are not saved.



Not every interval is permitted. The interval must be a divisor of 1440, i.e. the number of minutes of a day. If the value entered does not fulfill this requirement, the **SSM 6000** automatically uses the nearest setting. With the setting selected above, H₂S is measured every 480 minutes and hence three times a day at 4:00 a.m., 12:00 noon, and 8:00 p.m, for example.

Press the <esc> key in order to access the next higher menu.

In the same way, further sub-menus can be accessed by pressing these keys until the desired parameterization level is reached. Once all settings are made, you can operate the key switch in order to exit the setup mode.

4.2 Starting a measurement

Measurements can be started in different ways.

Manual start of a measuring cycle

In stand-by mode, a measuring cycle can be started at any time by pressing the <enter> key. You are first prompted to select the measuring point via the <up> and <down> keys. Thereafter, press the <enter> key once again in order to confirm the start of the measuring process. The unit starts continuous measurements of the CH₄, O₂ and CO₂ components. When the set measuring interval has expired, H₂S measurement starts automatically.

Single measurement

Via the menu item MEASURING PARAMETERS -> SINGLE MEASUREMENT, a manual measurement can be performed at any time while the device is in automatic mode without having to vary the measuring interval or the reference time. Press the <enter> key in order to confirm the start of the measuring process after you have selected the measuring point. When prompted, operate the key switch in order to exit the setup mode. The measuring process starts immediately. On completion of the measuring process, the current measured values are display and the device returns to stand-by mode.

External start via the digital inputs

At plug connector PORT1, the analyzer features four digital inputs which can be used to start an H₂S measurement and at the same time to select the measuring point. The digital optocoupler inputs are assigned as follows and must be activated for around 1.5 seconds:

DI 01	-	measuring point 1
DI 02	-	measuring point 2 / valve 1
DI 03	-	measuring point 3 / valve 2
DI 04	-	measuring point 4 / valve 3

After the start of the measuring process, the analyzer simultaneously activates the corresponding measuring-point valve and/or the pertinent digital output at plug connector PORT2. The digital inputs are not read again until a H₂S measuring process has been completed. After an H₂S measuring cycle, the continuous measuring mode of the other components continues to be active until another measuring point is selected or until the <esc> key is pressed in order to terminate the measuring cycle.

If the device is controlled via the digital inputs or via the Profibus interface, an H₂S measuring interval of "9999" should be set in order to avoid conflicts with the automatic measuring interval.


External start via the PROFIBUS interface

A H₂S measuring process can also be started via the PROFIBUS interface. If the measuring-point switch option is implemented, the measuring-point to be analyzed is additionally selected. After the H₂S measuring cycle has been completed, the continuous measuring mode of the other components continues to be active until another measuring point is selected.

Further details concerning the PROFIBUS interface can be found in the appendix to this documentation.

If the device is controlled via the digital inputs or via the Profibus interface, an H₂S measuring interval of "9999" should be set in order to avoid conflicts with the automatic measuring interval.

4.3 Menu structure

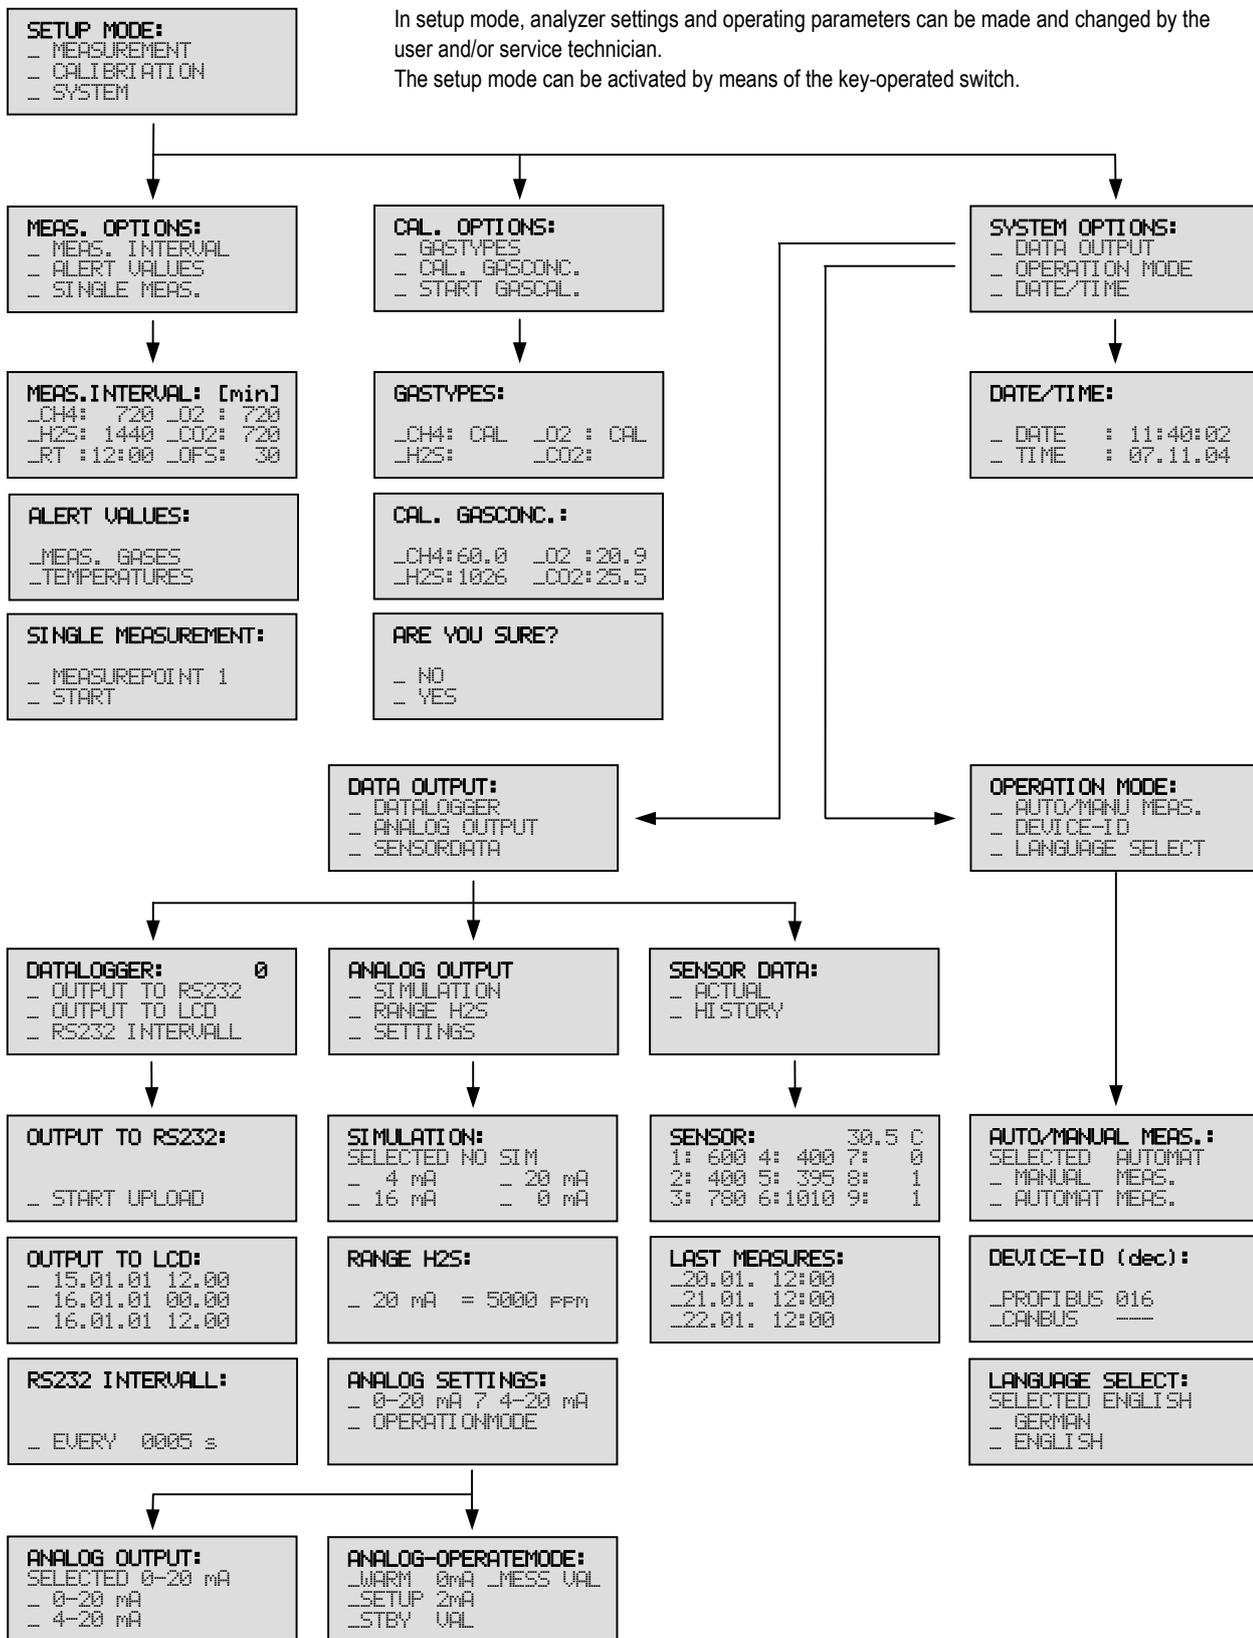

5 Menu and function overview

The following section describes the functions of all user menus that are available for adjusting the analyzer system to the conditions of the biogas plant.

The individual user menus can be accessed in setup mode. The setup mode, for its part, is accessed via the key switch.

```

SETUP MODE:
- MEASUREMENT
- CALIBRATION
- SYSTEM
  
```

The different menu items can now be selected via the membrane keypad. For further details concerning operation, please refer to the "Using the gas analyzer" section.

5.1 Measuring parameters

The MEASURING PARAMETERS menu contains the following sub-menus.

MEASURING INTERVAL	- Setting the measuring interval for every component to be measured.
ALARM VALUES	- Setting the limit-value concentrations for the different gas types.
SINGLE MEASUREMENT	- Performing one manual measurement.

5.1.1 Measuring interval

```

MEAS.INTERVAL: [min]
_CH4: 720 _O2 : 720
_H2S: 480 _CO2: 720
_RT : 12:00 _OFS: 30
  
```

The measuring interval for H₂S is edited in this menu. The settings for the other gas components are irrelevant because these other gas components are measured continuously.

In automatic measuring mode, the reference time determines the time when the first measuring process starts. After this measuring process, the next measuring process is then started xxx minutes later, depending on the set measuring interval.

The "offset" selection (_OFS: 0000) enables the automatic starting of measuring processes in the intervals defined for the day with the "minutes" entry edited to this effect.

With the setting selected above, H₂S are measured every 480 minutes = three times a day at 4:00 a.m., 12:00 noon, and 8:00 p.m. If a value of 30 minutes is selected for the offset, the measuring processes are carried out as follows:

1st day	4:00 / 12:00 / 20:00
2 nd day	4:30 / 12:30 / 20:30
3 rd day	5:00 / 13:00 / 21:00



Not every interval is permitted. The interval must be a divisor of 1440, i.e. the number of minutes of a day. If the value entered does not fulfill this requirement, the SSM 6000 automatically uses the nearest setting. However, the measuring interval should not be set at a value of less than 120 minutes. This corresponds to 12 measurements a day.

If the device is controlled via the digital inputs or via the Profibus interface, an H₂S measuring interval of "9999" should be set in order to avoid conflicts with the automatic measuring interval.

5.1.2 Alarm values

```
ALERT VALUES:
_MEAS. GASES
_TEMPERATURES
```

The **MEASURING GASES** and **TEMPERATURES** menu selections for setting limit-value alarms can be accessed via the **MEASURING PARAMETES / ALARM SETTINGS** menus.

```
ALARM VALUES:
_CH4< 50 _O2 < 0.5
_CH4> 70 _O2 > 5
_H2S> 250 _CO2> 55
```

In the **ALARM VALUES** menu, separate concentration alarm thresholds can be set for each gas type. The alarms are made available as digital transistor outputs at the plug connector, port 2, on the underside of the analyzer. Furthermore, the "Alarm" status LED on the display panel next to the measured value concerned is lit up in the case of a violation of the upper or lower limit.

The values for CH₄, O₂ and CO₂ are expressed in percent by volume, whilst the H₂S value is expressed in ppm. Violation of an upper limit can be edited for all gas types; in the case of CH₄ and O₂, violation of a certain lower concentration limit can be additionally edited.



The ex-works settings are non-binding recommendations. The manufacturer does not assume any liability for the alarm values set! Please contact the supplier of your plant in order to identify the values to be set in order to avoid damage to the equipment!

```
DEVICE INSIDE-TEMP:
_MAXWERT: 40.0
_MINWERT: 08.0
```

Additionally measures the temperature inside the device and makes this information available via the interfaces. The **INTERNAL TEMP** menu selection enables editing of an alarm which is transmitted via the interfaces in the case of a violation of the upper or lower limit value.

5.1.3 Single measurement

```
SINGLE MEASUREMENT:
_MEASUREPOINT 1
_START
```

Via the **SINGLE MEASUREMENT** menu, a manual H₂S measurement can be performed at any time without having to vary the measuring interval or the reference time. If the measuring-point switch (option) is implemented, the measuring point must be selected using the <up> and <down> keys before starting a measuring process. Press the <enter> key in order to confirm the start of the measuring process. When prompted, operate the key switch in order to exit the setup mode.

```
SINGLE MEASUREMENT:
PLEASE LEAVE
SETUP
```

The measuring process starts immediately. On completion of the measuring process, the current measured values are displayed.

```
STAND-BY
Meas. with <enter>
```

After the single measurement, the device is again in stand-by mode. Press the <enter> key in order to set the device at normal measuring mode again.

```
CONT. MEASUREMENT
H2S IN 285 MIN
```

The continuous measurement cycle is started. The display shows the point in time when the next automatic H₂S measurement will be performed. If the H₂S measurement is triggered externally (H₂S measuring interval set at = 9999), the message "H₂S external start" is displayed.

5.2 Calibration parameters



Proceed with utmost care when using the "START GASCAL" function! Inappropriate or thoughtless calibration can completely misadjust the analyzer. Please proceed in strict conformity with the information in the "Calibration" section.

The **CALIBRATION PARAMETERS** menu includes the following options:

GAS TYPES	- Determining the gas types to be calibrated.
CALGASCONC	- Editing the calibration gas concentrations of the individual gas types.
START GAS CAL	- Starting the gas calibration process.

5.2.1 Gas types

GASTYPES:

```
_CH4: CAL  _O2 : CAL
_H2S:      _CO2:
```

In the **GAS TYPES** menu, determine the measuring components to be calibrated. If a suitable calibration gas mixture is available, we recommend calibrating all existing measuring components at the same time.



If the oxygen channel only is selected, the sensor sensitivity is calibrated using ambient air only. Calibration gas is not required in this case, so that the system user himself can periodically perform an oxygen calibration process.

5.2.2 Calibration gas concentrations

CAL. GASCONC.:

```
_CH4:60.0  _O2 :20.9
_H2S:1026  _CO2:40:0
```

In the **CAL GAS CONCENTRATION** menu, enter the calibration gas concentrations of the individual gas types according to the calibration gas supplier's analysis certificate. The concentrations for CH₄, O₂ and CO₂ are expressed in percent by volume, whilst the H₂S concentration is expressed in ppm.



For oxygen, set a calibration gas concentration of 20.9 percent by volume because the sensitivity of the sensor is calibrated using ambient air.

5.2.3 Start calibration

ARE YOU SURE?

```
_ NO
_ YES
```

In the **START GASCAL** menu, you are once again asked whether you are sure. When you confirm this, the calibration process starts. Only those gases that were activated in the **GAS TYPES** menu are considered. The settings in the **CAL GAS CONCENTRATION** menu are used as reference values.

5.3 Device options

```
SYSTEM OPTIONS:
- DATA OUTPUT
- OPERATION MODE
- DATE/TIME
```

The **DEVICE OPTIONS** menu item contains the following options.



```
DATA OUTPUT:
- DATA LOGGER
- ANALOG OUTPUT
- SENSOR DATA
```

DATA LOGGER → Digital output of measured values with time stamp
ANALOG OUTPUT → Editor level for analog measured-value outputs
SENSOR DATA → Display of sensor signals

```
OPERATION MODE:
- AUTO/MANU MEAS.
- DEVICE-ID
- LANGUAGE SELECT
```

AUTO/MAN MEASUREMENT → Menu inactively
DEVICE ID → Profibus/CANBUS: setting the device address
SELECT LANGUAGE → Setting the menu language (German or English)

```
DATE/TIME:
- DATE : 11:40:02
- TIME : 07.11.04
```

DATE/TIME → Setting time and date

5.3.1 Datalogger

Output on LCD

Besides output of measured values via the RS232 interface, the **OUTPUT ON LCD** menu item additionally enables the display of the contents of the data logger on the device. The <down> and <up> keys can be used to select and display all H₂S measurements. When you press the <enter> key, the device temperature is displayed instead of [CH₄], the air pressure instead of [H₂S], and the measuring point of the selected measurement instead of [O₂]. The status LEDs flash yellow / red in this mode. The status LEDs flash green / yellow when the gas concentration values are displayed.

```
DATALOGGER: 3265
- OUTPUT TO RS232
- OUTPUT TO LCD
- RS232 INTERVALL
```



```
OUTPUT TO LCD:
- 15.01.01 12.00
- 16.01.01 00.00
- 16.01.01 12.00
```

Output on RS232

Via the serial interface, the measured values, including a time stamp, can be transmitted to a PC or to the general system controller and evaluated using a suitable program. In this way, trends and dependencies between the individual measured values can be identified.

The values of the last measuring process, including date and time information, are continuously output via the interface, depending on the **RS232 interval** selected, or can be exported as a block at a later point in time from the data logger of the analyzer. The data logger of the SSM 6000 can store around 4096 measurements / data records.



The measuring data is output in the csv/txt format via the RS232 interface as follows:

Date Time / CH₄ / H₂S / O₂ / CO₂ / Device temperature / Air pressure / Measuring-point No.

```

16.07.03 11:50;60,6;0282;00,0;40,4;23,4;1013;1;
16.07.03 11:59;60,6;0284;00,0;40,4;23,6;1013;2;
16.07.03 12:52;00,0;0019;00,0;00,0;23,7;1014;1;
16.07.03 13:02;00,0;0001;20,8;00,0;23,8;1014;4;
  
```

As a precondition for the transmission of data from the SSM 6000 to the PC, the terminal program must first be configured. This procedure is described here using the "HyperTerminal" program under MS Windows as an example. However, the properties of the serial interface can also be transferred to other terminal programs.

Configure HyperTerminal

The terminal program is accessed via the start bar **Programs** → **Accessories** → **Communication** → **HyperTerminal**. Click the **HyperTerminal** icon whereupon you can now set up a new connection.




In this dialog field, enter a name (such as **SSM 6000**) for the new connection and select any icon you like.

Thereafter, click **OK** to confirm.



In the **Establish connection via:** list box, select the serial interface of the PC to which you wish to connect the **SSM 6000**, for example, **COM1**.

Thereafter, click **OK** to confirm.

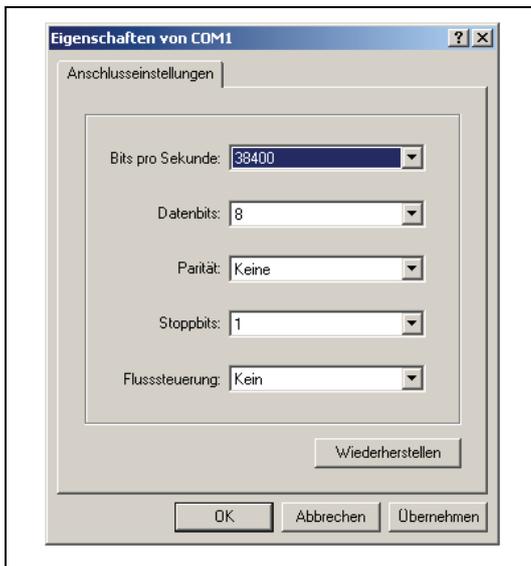


In this dialog, you must now configure the interface.

Edit the following parameters and subsequently click **OK** to confirm:

Bits per second	38400
Data bits	8
Parity	none
Stop bits	1
Protocol / flow control	none

The HyperTerminal is now completely configured and is opened.

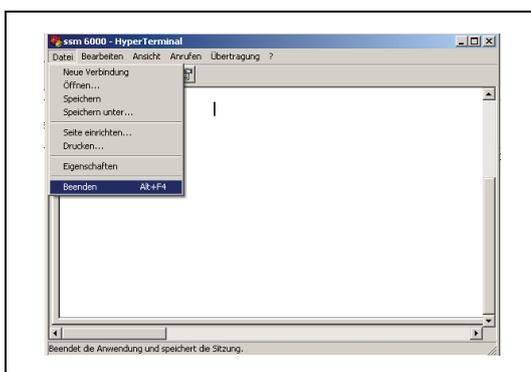

Now select the **Exit** command in the **File** menu in order to exit and save the program.



Click **Yes** to confirm. Your HyperTerminal is now completely configured for data transmission. We recommend creating a link on the desktop in order to find the newly created connection more easily.


Transmitting measured data

As a precondition for transmitting measured values from the SSM 6000, the analyzer must be connected via the RS232 interface to the serial interface (COM1 or COM2) of the PC.

Note: Use a suitable serial cable (1:1 connector layout) for this connection. The exact connector layout of the interface is shown in the terminal diagrams in the appendix. Do not use a null modem cable because these cables feature an incorrect connector layout, so that data transmission is not possible.

At first, open the previously configured HyperTerminal connection from the start menu: **Programs** → **Accessories** → **Communication** → **HyperTerminal** → **SSM 6000** or via the link on the desktop.

The HyperTerminal window **SSM 6000** is opened:

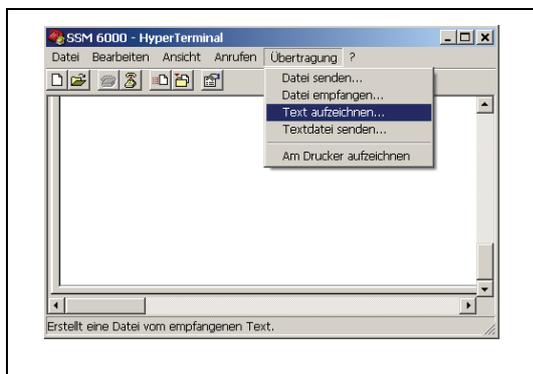

HyperTerminal immediately and automatically establishes the connection to the **SSM 6000**.

Select the "Transmission – Record text" menu item.

During the next step, enter any file name, such as measurement_050322, and select the target directory in which the measured-value file is to be stored.


Click **Start** in order to confirm the entry.



In order to avoid a major loss of data in the case of a defect of the device, we recommend exporting the data at regular intervals. The measured data is also exported and archived by the manufacturer each time service work is carried out. This data is then available on demand.

In order to export the stored measured data from the data logger, select **DEVICE OPTIONS – DATA OUTPUT – DATA LOGGER – OUTPUT TO RS232** and press <enter> in order to start the data transmission process.

The progress of the transmission process can be monitored on the screen of the PC and on the LC display.

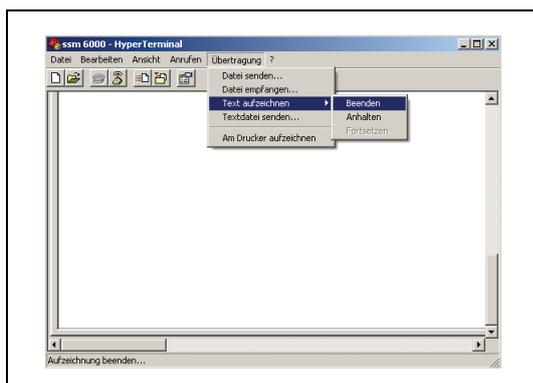

In order to terminate the transmission process and save the data, select the **Transmission – Record text – Exit** menu item.

The stored data can now be imported to a suitable program and evaluated there.


We recommend selecting a new file name for the transmission of new measuring data.

Importing the measured data to MS Excel


In order to import the transmitted measuring data, for example, to MS Excel, proceed as follows.

- Open the MS Excel spreadsheet program.
- Select the **File – Open** command in order to import the measured-value file (*.txt).
- (Important! Select "All files (*.*)" for the file type in order to have the txt file displayed.)


MS Excel starts a text wizard which performs the import operation.

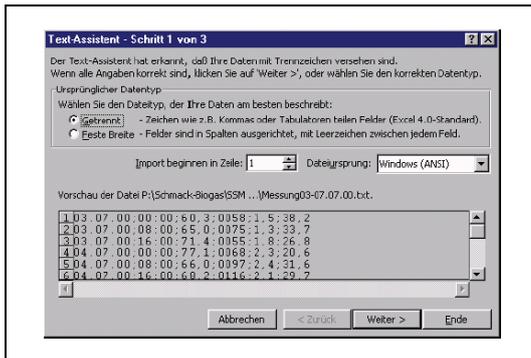


Select the **"Separate"** option and continue with **Continue >**.

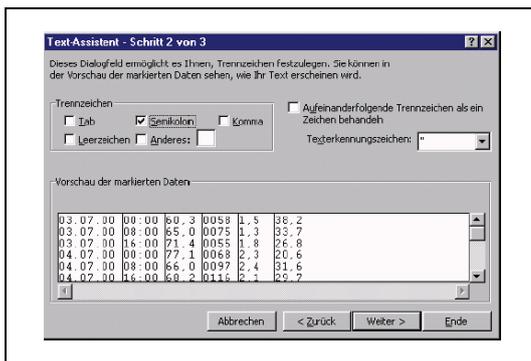

Select the **colon** as separator, and click **Exit** in order to terminate the import process.

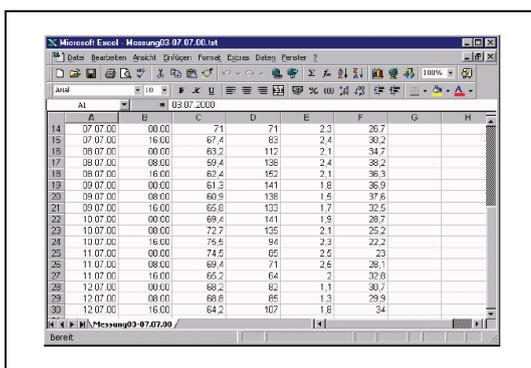

The measured values are imported to an Excel chart and can now be evaluated.

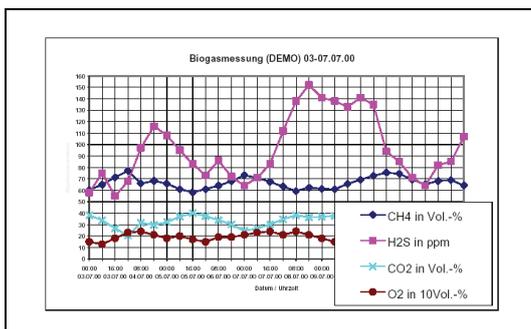

The measured data can be presented in diagrams and used for other calculations.

5.3.2 Analog measured-value outputs

```

ANALOG OUTPUT
- SIMULATION
- RANGE H2S
- SETTINGS
  
```

In the **ANALOG OUTPUT** menu item, different settings can be made for the analog measured-value outputs. The parameterization level can be accessed in setup mode via **Device options** → **Data output** → **Analog output**.

Simulation

```

SIMULATION:
SELECTED NO SIM
- 4 mA      - 20 mA
- 16 mA     - 0 mA
  
```

The analyzer can simulate four analog values (0, 4, 16 and 20 mA) in order to adjust the analog output signals to external equipment. Downstream isolation amplifiers are usually fitted with potentiometers for adjusting the zero and end points, so that adjustment can be performed quickly and easily.

H2S measuring range

```

RANGE H2S:
SELECTED 5000
- 500      - 2000
- 1000     - 5000
  
```

The standard measuring range for H₂S totals of SSM6000Classic is 0-5000 ppm and of SSM6000LT it is 0-1000 ppm which is represented by 0-20 mA or 4-20 mA, respectively, depending on the setting. Given an output range of 4-20 mA, the resolution is as low as 0.0032 mA/ppm.

If the expected H₂S concentrations are significantly lower, the upper limit of the analog output can be lowered from 5000 ppm H₂S to 2000, 1000 ppm or to 500 ppm H₂S. This enables better resolution of the analog signal (0.008 / 0.016 mA/ppm or 0.032 mA/ppm, respectively).

This setting only changes the resolution of the analog output. The H₂S measuring system additionally includes an automatic measuring-range switching function which is not affected by this setting. The measured-value display and the output of measured values via the RS232 interface continue to cover the range from 0 to 5000 ppm H₂S.

Analog settings

```

ANALOG SETTINGS:
- 0-20 mA / 4-20 mA
- OPERATIONMODE
  
```



```

ANALOG OUTPUT:
SELECTED 0-20 mA
- 0-20 mA
- 4-20 mA
  
```

The 0-20 mA / 4-20 mA menu item permits toggling between the two output ranges of the analog interfaces.

```

ANALOG-OPERATEMODE:
_WARM 0mA _MESS VAL
_SETUP 2mA
_STBY VAL
  
```

In this menu, the analog measured-value output is considered for the different operating states.

Operating states: **_WARM** = warm-up phase / **_MESS** = measurement active /
_STBY = Stand-by / **_SETUP** = configuration mode

The following values can be set:

- 0 / 2 / 4 mA or VAL (analog value of the last measuring process)
- XmA (0 or 4mA, zero value of the edited output range 0-20 / 4-20mA)

5.3.3 Sensor data

SENSOR DATA:

— ACTUAL
— HISTORY

The **Sensor data** menu serves the functional checking of the sensors and thereby supports remote diagnosis by the manufacturer.

The current sensor signals and the signals of the last three measurements (HISTORY) can be displayed.


Selecting the **Sensor data** → **Actual** activates the measuring-gas pumps in the analyzer whereupon the gas currently available at the measuring-gas input starts flowing through the CH₄ gas system. The display shows the current sensor signals in number blocks from 0 to 1023 dig.

The theoretical display can hence be calculated as follows at a defined calibration gas concentration.

$$\text{Display [dig]} = \frac{\text{Gas concentration}}{\text{Measuring range}} \cdot 1023 \text{ dig}$$

The measuring range totals 100 percent by volume for CH₄ and CO₂. The display of the sensor signal for H₂S depends on the dilution stage. With the 1:40 dilution stage, the measuring range totals 1000 ppm.


The above equation does not have to be fulfilled exactly. The equation neglects, for example, the fact that the signal should feature a slight offset with zero gas (living zero point). The actual sensor signals should be within the limits shown below.

Actual sensor signals [dig]		Ambient air ¹⁾	Calibration gas ²⁾	
	1	Sensor signal CH ₄	0001 - 0010	
	2	Sensor signal H ₂ S	0001 - 0075	
	3	Sensor signal O ₂	0650 - 1020	
	4	Sensor signal CO ₂	0001 - 0010	
		Sensor signal H ₂ (instead of CO ₂)	0001 - 0060	
	5	Cooler temperature		390
	6	Pressure sensor [mbar]	0950 - 1050	0950 - 1050

1) In order to determine the zero point of the sensor, the biogas hose must be disconnected from the detonation protection unit, so that ambient air is drawn in through the measuring-gas input.

2) A calibration gas / biogas with the following composition was used as a basis for the sensor signals indicated: 59.9 percent by volume of CH₄, / 300 ppm H₂S, / 850 ppm H₂ / 0 percent by volume of O₂ / 40 percent by volume of CO₂.


By selecting the **Sensor data** → **History** menu item, you can check the sensor signals of the last three measurements.

History – sensor signals of the last measurements [dig]			Sensor signals ²⁾
	A	Sensor signal CH ₄	Zero gas
	B		Biogas / calibration gas
	C	Sensor signal H ₂ S	Zero gas
	D		Biogas / calibration gas
	E	Dilution stage H ₂ S	Biogas / calibration gas
	F	Sensor signal O ₂	Test gas
	G		Zero gas
	H	Sensor signal CO ₂	Zero gas
	I		Biogas / calibration gas
	H	Sensor signal H ₂ (instead of CO ₂)	Zero gas
	I		Biogas / calibration gas

5.3.4 Operation mode AUTO/MANUELL

In the case of a configuration of the SSM6000 system with function cycle No. 04, no distinction is made between automatic and manual measuring cycles. If the device is controlled via the digital inputs or via the Profibus interface, an H₂S measuring interval of "9999" should be set in order to avoid conflicts with the automatic measuring interval.

5.3.5 DEVICE ID



This menu is used to set the device address for the PROFIBUS or CANBUS interface, respectively. The ex-factory device address settings are "110" for the PROFIBUS and "16" for the CANBUS. The "DEVICE ID" menu is only active if the corresponding interface was activated by the manufacturer. For further details, please refer to the appendix to this documentation.

5.3.6 Select language

```
LANGUAGE SELECT:
SELECTED ENGLISH
- GERMAN
- ENGLISH
```

The menu language, i.e. German or English, is selected here.

5.3.7 Date/Time

```
DATE/TIME:
- DATE   : 11:40:02
- TIME   : 07.11.04
```

In the device options → DATE/TIME menu, the current time can be set in the HH:MM:SS format and the current date in the DD:MM:YY format.

Note that the clock of the SSM 6000 does not automatically switch to daylight saving time and winter time. Leap years are, however, considered.

6 Setting into operation

When all the activities described in the "Installation" section have been completed and after all electrical connections and hose connections have been once again checked, the analyzer can be set into operation.

6.1 Switching the gas analyzer on

In order to set the **SSM 6000** into operation, proceed as follows:

- Connect voltage supply.
- Press the power button on the front panel in order to switch the analyzer on.

After power-on, the display of the analyzer shows the version number for around 5 seconds. This is followed by a warm-up phase of around 30 minutes which ends automatically on expiration of this time.


Since the only initial operations carried out on the device are settings, the warm-up phase can be terminated by pressing the **esc** key. The device is now in stand-by mode and parameterization can start in setup mode after operation of the key switch.

6.2 Setting operating parameters

In order to adjust the analyzer to the requirements of the biogas plant, certain settings must first be made with the analyzer in setup mode. This mode is activated by operating the key switch on the control panel of the analyzer.


6.2.1 Setting date and time

First check and, if necessary, adjust the date and time. This setting is important for future activities which must be regularly triggered at a certain point in time.



6.2.2 Setting alarm values

In this menu item, you can edit the alarm thresholds for the individual gas types which are specified in the operating instructions issued by the plant manufacturer.




The values for CH₄, O₂ and CO₂ are expressed in percent by volume, whilst the H₂S value is expressed in ppm/vpm.



The ex-works settings are non-binding recommendations. The manufacturer does not assume any liability for the alarm values set! Please contact the supplier of your plant in order to identify the values to be set in order to avoid damage to the equipment!

6.2.3 Setting the measuring interval

For the purpose of discontinuous H₂S measurement, the measuring interval and the reference time must be set when the analyzer is set into operation. In the case of the other gas types to be measured, the only important point is to edit an interval other than zero because these gases are measured continuously.



Not every interval is permitted. The interval must be a divisor of 1440, i.e. the number of minutes of a day. If the value entered does not fulfill this requirement, the **SSM 6000** automatically uses the nearest setting. With the setting selected above, H₂S is measured every 480 minutes = three times a day at 4:00 a.m., 12:00 noon, and 8:00 p.m.

However, the measuring interval should not be set at a value of less than 120 minutes. This corresponds to 12 measurements a day.

The reference time, "BZ", determines the time when the first H₂S measuring process starts. After this measuring process, the next measuring process is then started xxx minutes later, depending on the set H₂S measuring interval. The "Offset" selection (_OFS: 0000) enables the automatic starting of measuring processes in the intervals defined for the day with the "minutes" entry edited to this effect.

If the device is controlled via the digital inputs or via the Profibus interface, an H₂S measuring interval of "9999" should be set in order to avoid conflicts with the automatic measuring interval.

6.2.4 Other settings

If required, further device configuration settings can be made as required. For a more detailed description, please refer to the "Menu and function overview" section.

- | | |
|---|---|
| - Select the menu language, i.e. German / English | Default setting: German |
| - Configuration of analog outputs 0 – 20 mA / 4 – 20 mA | Default setting: 4 – 20 mA |
| - Setting the analog operating modes | Default setting: warm-up phase = XmA / rest = VAL |
| - Measuring range of the analog output for H ₂ S | Default setting: 0 – 5000 / 0 – 1000 ppm H ₂ S |
| - Setting the RS232 interval | Default setting: 1 second |

6.3 Checking the interface functions

The analyzer can simulate three analog output values in order to check the analog data output functionality and to adjust this to the higher-level plant control system, if necessary. This enables adjustment of external isolating switching amplifiers or arithmetic correction by the controller.



The data output via the RS232 interface is described in more detail in the "Menu and function overview" section.


Further possible function tests:

- Profibus interface
- CANBUS interface
- RS232 interface

6.4 Performing a test measurement

The analyzer was calibrated and tested by the manufacturer prior to shipment (refer to test certificate). In order to rule out any risk of transport damage to the analyzer, one measurement should, if possible, be performed with calibration gas and another measurement with ambient air when the unit is set into operation. Proceed as follows:

- Connect calibration gas with a maximum admission pressure of 0.2 bar to the calibration-gas inlet.
- Start of a single measurement as described in the following.



Press the <enter> key in order to confirm the start of the measuring process. When prompted, operate the key switch in order to exit the setup mode.


During the measuring process, check and, if necessary, readjust the volume flows at the analyzer. On completion of the measuring process, the current measured values are displayed and the device returns to stand-by mode.

In order to check the zero points for CH₄, H₂S and CO₂ as well as the sensitivity of the O₂ channel, you should subsequently perform one measurement with ambient air. For this purpose, disconnect the calibration-gas hose from the measuring-gas input.

If the values measured are within the specified ranges, the system can be used for normal measurements. In the case of larger deviations, the analyzer should be re-calibrated using a suitable calibration gas as described in the "Calibration" section.

6.5 Starting normal measuring operations

After all functions of the device are checked and if the test measurements indicate correct operation of the system, the analyzer can be switched to normal measuring mode.



After the start of the measuring process, the CH₄, O₂ and CO₂ gas types are continuously measured and the values measured are displayed. The LC display shows the time for the next H₂S measurement. As soon as the set interval has expired, an H₂S measurement is also started and the result is displayed at the end of the measuring cycle.

7 Calibration

7.1 General information

In order to ensure correct measuring results within the specified tolerances, analyzers and systems must be calibrated at regular intervals. With the SSM 6000, the individual gas types are calibrated using certified calibration gases and/or calibration gas mixtures.



Note that incorrect calibration leads to incorrect results during subsequent measurements!



Before any service or maintenance intervention, the higher-level system (plant control system) must be notified of any such work in advance in order to avoid emergency shut-down of the motor in response to incorrect measuring values.

The calibration procedure in general:

- Recording the actual condition
- Use calibration gas in order to calibrate the device.
- Perform a test measurement in order to check the calibration.
- Resume normal measuring operations.

7.2 Calibration setup and calibration gases

Certified calibration gases or calibration gas mixtures and a suitable cylinder pressure reducing valve with a setting range of the output / back pressure of equal to or less than 3 bar are required for calibration. During measurement / calibration, the inlet pressure at the device should range from 10 up to a maximum of 100 mbar. An output or back pressure of < 0.2 bar at the cylinder pressure reducing valve without flow is usually sufficient for this purpose.



Please note that too high an admission pressure at the measuring input can cause damage to the device!

Furthermore, a hose with the appropriate connections is required in order to transport the gas to the analyzer.

Recommended calibration gas mixtures:

- 40 Vol.% of CO₂, 300 ppm H₂S, balance: CH₄ (60Vol.%)
- 40 Vol.% of CO₂, 850ppm H₂, rest CH₄ (60 Vol.%) ← analyzers with the "hydrogen" option



The IR sensors must always be calibrated using a test gas mixture of methane and carbon dioxide. Other gas mixtures, such as methane in nitrogen, are unsuitable for calibration. This also applies to the "hydrogen" option.

With regard to calibrating the oxygen channel, it is important that the calibration gas used does **not** contain **any oxygen** because this would mean that it is not possible to determine the zero point of the sensor. The O₂ sensitivity is determined during the rinsing process using filtered ambient air.

Standard calibration gases usually feature a manufacturing accuracy of $\pm 2\%$ for gases expressed in percent by volume and $\pm 3\%$ for H₂S. When the calibration gas cylinder is changed, this can lead to display deviations of up to 4% or 6%, respectively, under worst-case conditions.

The process of calibrating the SSM 6000 consists of the following steps:

- Rinsing the gas ducts and pipes with ambient air in order to record the sensor zero points
- Determining the sensor sensitivity values using biogas / calibration gas
- Rinsing the system using filtered ambient air.

The calibration gas is applied through the biogas inlet. The hose must be disconnected from the inlet of the analyzer for this purpose. In order to prevent biogas from escaping, the biogas outlet of the plant should be closed.


Before starting the calibration / span gas check a span gas cylinder with pressure reducer has to be ready and adjusted to a maximum outlet pressure of 0.2bar. The pressure has to be readjusted during calibration in order to keep the floating body of the flow metre "flow1" within the mark (50...65l/h). Ensure to have a little positive pressure (10...100mbar) at the back pressure gauge of the span gas cylinder when feeding the span gas.

7.3 Recording the actual condition

In order to be able to assess the precision of the last biogas measurements, the actual condition of the device should be recorded prior to calibration. At least one calibration gas measurement must be performed for this purpose.

Proceed as follows for a single measurement using calibration gas.

- Disconnect the biogas hose from the measuring-gas inlet.
- Close the biogas outlet of the plant.
- Connect calibration gas with a maximum admission pressure of 0.2 bar to the calibration-gas inlet.
- Start a single measuring process.



- Check and, if necessary, readjust flow rates.

The single measurement is now performed automatically.

Since calibration of the analyzer only makes sense if the sensors are working properly, the digitized sensor signals should be checked using calibration gas and ambient air after a single measurement. The results should then be checked for plausibility as described in the "Sensor data" section.

```

  SENSOR:      30.0.C
  1: 600 4: 400 7: 0
  2: 400 5: 434 8: 0
  3: 700 6: 1010 9: 0
  
```


For this purpose, select the **Device options** → **Data output** → **Sensor data** → **Actual** menu item in setup mode. Connect the calibration gas to the measuring input, read the values displayed after around 2 minutes, and record these values in the calibration report.

Thereafter, disconnect the calibration gas hose, so that ambient air is drawn in through the inlet. After around 2 minutes, read the values and record these too in the calibration report.

Larger deviations, such as a zero value of 1023, indicate a defect of the respective gas channel. Calibration of the gas type in question does not help in such a case. Please contact the manufacturer in cases like this.

7.4 Calibration procedure

Calibration of the system can start after you have determined the ACTUAL condition and checked the sensor signals. The calibration menus are accessed after operation of the key switch via the selection level **SETUP MODE → CALIBRATION PARAMETERS**.



Select gas types

```

GASTYPES:
.CH4: CAL  _O2 : CAL
.H2S:      _CO2:
  
```

First select the gas types to be calibrated from the **GAS TYPES** editing level. The display shows the letters "CAL" behind the gas selected. If a suitable calibration gas mixture is available, we recommend calibrating all existing measuring components at the same time.



If the oxygen channel only is selected, the sensor sensitivity is calibrated using ambient air only. Calibration gas is not required in this case. Since the oxygen calibration process differs from the normal calibration process, the oxygen calibration process is separately described in the section titled "Calibrating the oxygen sensor".

Edit calibration gas concentrations

```

CAL. GASCONC.:
.CH4:60.0  _O2 :20.9
.H2S:1026  _CO2:40.0
  
```

In the next step, enter the concentrations of the individual calibration gas components as shown in the supplier's analysis certificate. Enter the values in percent by volume for the CH₄, O₂ and CO₂ gases and in ppm / vpm for H₂S. The sensitivity of O₂ is determined during the rinsing process using filtered ambient air, so that, in deviation from the calibration gas concentration, a value of 20.9 percent by volume must be set for oxygen.

Zero-gas supply

If this has not yet been carried out, then disconnect the hose from the measuring-gas inlet of the analyzer, so that ambient air is drawn in through the measuring-gas inlet. In order to prevent biogas from escaping, the biogas outlet of the plant must be closed.

Start calibration

```

ARE YOU SURE?
- NO
- YES
  
```

When all necessary settings are completed, the calibration process can be started by confirming the "Are you sure" prompt by replying "Yes".

```

CALIBRATION
CONNECT ZERO GAS!
<enter> TO PROCEED
  
```

To feed zero gas to the analyzer the sample line has to be disconnected from the sample gas inlet for sample point 1. After pressing the <enter> key the calibration process will proceed. The flow has to be checked and readjusted if necessary.

CALIBRATION

```
CONNECT SPAN GAS!  
<enter> TO PROCEED
```

When the zero points are accepted the request „CONNECT SPAN GAS!“ is displayed. Connect the span gas to the sample inlet for sample point 1 with a maximum pressure of 0.4bar and confirm the request by pressing the <enter> key.

The flow rate must be checked and, if necessary, the output pressure at the pressure reduced must be readjusted.

Following completion of the test-gas steps, the analyzer is once again purged with ambient air. During this purging phase, the test gas supply can be interrupted by disconnecting the test-gas hose. Continuation of the test-gas supply has no influence on calibration.

CALIBRATION END

```
<esc>
```

Completion of the calibration process must be confirmed once again by pressing the <esc> key. The device returns to **stand-by** mode on operation of the key switch.

7.5 Check measurement

Calibration of the device should be followed by at least one check measurement using calibration gas and ambient air in order to check whether the calibration process was performed correctly.

The single measurement must be performed and recorded in the calibration report in the same manner as during the determination of the ACTUAL condition. If the values measured are within the specified ranges, the device can be used for normal measurements again.



Close the calibration gas cylinder on completion of the calibration gas measurements!

7.6 Resuming measuring operations

On completion of the test measurements, the device can be used for normal measurements again. For this purpose, connect the biogas hose to the measuring-gas inlet of the analyzer and open the stop valve. Thereafter, a single measuring cycle with biogas should be once again performed. During the measuring cycle, the flow rates at the SSM6000 analyzer should be checked and, if necessary, readjusted. A leakage test of the system can be performed by briefly kinking the biogas hose. The flow rate meter reading should drop to zero in this case. Record the values measured in the calibration report.

On completion of the measuring cycle, press the <enter> key in order to reactivate the normal measuring mode.

7.7 Calibrating the oxygen sensor

Besides the normal calibration routine, it is also possible to adjust the sensor sensitivity of the oxygen channel **even without test gas** because the sensor sensitivity is calibrated using ambient air and because the zero point of the oxygen sensor features long-time stability. This calibration process can also be performed by the user of the equipment at regular intervals.

In order to calibrate the oxygen sensor without test gas, proceed as follows:


- Disconnect the biogas hose from the measuring-gas inlet, so that ambient air is drawn in.
- In order to prevent biogas from escaping, the biogas outlet of the plant should be closed.
- Select the GAS TYPES menu option and select "CAL" for oxygen.

IMPORTANT! Selection of the other gas components is not permitted during this procedure!



Thereafter, confirm the START GASCAL prompt by pressing the <enter> key.

The display now once again shows the prompt to supply zero gas (ambient air) – press the <enter> key to confirm.



The calibration cycle is started. Press the <esc> key at the end to confirm.

Thereafter, perform one measurement with ambient air as a check. The analyzer should display an oxygen concentration of around 20.9% by volume.

Thereafter, re-connect the biogas hose to the measuring-gas inlet and open the stop valve.

When the system is in stand-by mode, the normal measuring mode can be reactivated by pressing the <enter> key.

8 Maintenance, repair, customer service

The SSM 6000 is a complex electronic measuring device and must hence be handled with care. The manufacturer is solely responsible for the original safety characteristics and features of the device. Any guarantee becomes void if the device is modified in any manner not performed or approved by the manufacturer.

Before performing any maintenance or repair work, observe the safety measures and precautions applicable to the specific plant and process!

Certain activities – such as replacing hardware components or internal settings – may only be carried out by qualified personnel. The only exception to this is changing parts subject to consumption, wear and tear in as far as this is explicitly stated in this manual.



Before any service or maintenance intervention, the higher-level system (plant control system) must be notified of any such work in advance in order to avoid emergency shut-down of the motor in response to incorrect measuring values.

Checking the measuring-gas volume flows

Check and, if necessary, readjust the flow rates at the analyzer at regular intervals. Note that a flow rate is displayed at the "flow 2" flowmeter during H₂S measurement only. However, checking is possible at any time by starting a single measurement.

Replacing the measuring-gas filters

The measuring-gas filters must be checked and, if necessary, replaced at regular intervals. The following maintenance intervals should be observed for the individual filters.

Aerosol filter	Replacement is only necessary if filter contamination is visible. (Material: glass and steel wool)
Air filter	The zero-gas filter should be replaced at least once a year. (Material: activated carbon)
Chemical filter	The filter must be replaced by a new one at the latest when the pink color of the filter material has vanished.
Fine dust filter	The fine dust filters must be replaced when strong contamination is visible.

After a filter change, check and, if necessary, readjust the flow rate.

Changing the housing filter / filter cartridges

The filter mat on the right hand side wall must be checked at process-dependent intervals and replaced when strong contamination is found on the exterior side. Filter elements are disposal elements!

Condensate pump

Although the Novoprene hose is highly resistant to mechanical and chemical influences, we recommend replacing this hose at least once a year. The hose can be replaced very easily in just a few minutes using hose sets with pre-assembled connection elements. The measuring-gas processing unit must be switched off before replacing the hose.



Important - aggressive condensate is possible!
Therefore proceed with care when handling condensate, and wear appropriate protective clothing.

The analyzer should be checked and calibrated by the manufacturer or qualified technical personnel once a year. Defective devices must be taken out of operation and returned to the manufacturer after prior agreement.

Pronova Analystechnik GmbH & Co. KG
Groninger Straße 25
13347 Berlin, Germany

Telephone +49 (0)30 / 455 085 -0
Fax +49 (0)30 / 455 085 -90
E-mail info@pronova.de
Web www.pronova.de

9 Status messages, trouble-shooting

9.1 Limit-value alarms

When the set limit value for one or more gas types is exceeded during measurement, the red status LED is lit up on the measured-value display for the respective gas type. The alarm messages at port 2 are also output as digital outputs and via the Profibus / CAN interface.

The top priority with each alarm – stay calm!



The ex-works settings are non-binding recommendations. The manufacturer does not assume any liability for the alarm values set! Please contact the supplier of your plant in order to identify the values to be set in order to avoid damage to the equipment!

9.2 Trouble-shooting

Measured values are not plausible

When the values measured are not plausible, you should first start a single measurement and check the flow rates.

The system can be checked for leakage by closing the stop valve at the biogas plant or kinking the biogas hose. The flow rate of the measuring-gas processing unit should drop to zero in this case. If this is not the case, leakage air is probably drawn into the system. This leads to elevated O₂ values and lower values for the other components measured.

If the analyzer supplies strange values even though it was checked for leakage and correct flow rates, proceed as follows:

- (1) Switch the analyzer off and disconnect it from the voltage supply for around 5 seconds (turn main switch off or operate the miniature circuit breaker). The warm-up phase cannot be interrupted by pressing the <esc> key until the analyzer has restarted. Thereafter, a new measuring cycle must be performed.
- (2) Check the sensor signals and calibrate the analyzer with correct sensor function with test gas.
If the sensor signals are outside the ranges specified (for example, 1023dig), calibrating the device does not remedy the situation. Please contact the manufacturer in this case.

Low or lacking measured-gas flow

In order to obtain correct measuring values, the floating indicators must be contained within the marked ranges during measurement.

Flowmeter	"flow 1" (left)	50 ... 65 liters per hour
	"flow 2" (right)	15 ... 30 liters per hour

If it is not possible to set the flow rates, this can be due to the following reasons:

- The device is currently in stand-by mode. – Start a measurement!
- The needle valve below the flowmeter is closed.
- The flame protection unit and/or the measuring-gas pipe is/are clogged, or the stop valve of the biogas plant is closed. A simple and quick check is possible by removing the aerosol filter on the front panel during a measuring process.
- The exhaust air duct is clogged or frozen. Diagnosis is possible by disconnecting the exhaust air hose.
- The device is defective.

Measuring-gas cooler / cooler status "error"

- After power-on, the measuring-gas cooler is not yet ready for operation. The cooler should have reached its operating temperature and the "error" LED should go off after around 10 minutes.
- A measuring-gas cooler overload condition exists during operation as a result of the excessively high dew point of the inflowing gas, or as a result an excessive volume flow or ambient temperature.
- The device is defective.

If it is not possible to solve the problem, please contact the manufacturer.

Pronova Analystechnik GmbH & Co. KG
Groninger Straße 25
13347 Berlin, Germany

Telephone	+49 (0)30 / 455 085 -0
Fax	+49 (0)30 / 455 085 -90
E-mail	info@pronova.de
Web	www.pronova.de

10 Warranty conditions

The manufacturer assumes a 24-month guarantee for the SSM6000 Classic and a 12-month guarantee for the SSM6000 LT, i.e. beyond the statutory guarantee period for electric devices, if the following conditions are fulfilled:

- The device must at all times have been handled properly and with the care necessary for an electronic device.
- All instructions and information contained in this manual must have been adhered to.
- The system must have been operated within the specified temperature range.
- No more than 24 H₂S-measurements may have been performed per day.
- The measuring gas must be free from any other corrosive components.

No guarantee is assumed for parts subject to consumption, wear and tear, such as measuring-gas filters.

Appendix

11.1 Technical specifications

Analyzer SSM6000							
Gas type	Measuring range		Resolution		Precision	Measuring method	Other
CH ₄	0 ... 100	Vol.%. ppm	0,1	Vol.%. ppm	±2% FS	Two-beam IR	Temperature and pressure
H ₂ S	0 ... 5.000	ppm	1 / 5	ppm	±5% FS	Electrochemical	Dilution stages 1:200/40/10/0 (MP4)
	0 ... 1.000	ppm	1	ppm	±5% FS	Electrochemical	Without Dilution (MP5)
H ₂	0 ... 1000	ppm	1	ppm	±5% FS	Electrochemical	Without Dilution (MP5) ,Instead of CO ₂
O ₂	0 ... 25	Vol.%. ppm	0.1	Vol.%. ppm	±2% FS	Electrochemical	
CO ₂	0 ... 100	Vol.%. ppm	0.1	Vol.%. ppm	±2% FS	Two-beam IR	Temperature and pressure
Display and measured-value displays			4-digit LED measured-value display, status displays for each channel 4-line LC display, illuminated				
Analog outputs			4–20 mA (1 output oper measuring component, linearized) aktiv, common reference potential, max. burden 550Ω				
Digital outputs			Status signals: stand-by / measurement active / setup mode Limit-value alarms: violation of upper limit 1x per measuring component + violation of lower limit for CH ₄ and O ₂ Valve outputs: measuring-point switch / test gas valve transistor, open collector type, external supply 35VDC / 750mA max.				
Digital inputs			external start-up of measuring / choice of the measuring point optocoupler, typ. switching threshold 10VDC, external supply 24VDC max.				
Interfaces			RS 232, digital output of measured values and program updates Profibus / CAN bus (option)				
Flowmeter / control valve			Rotmater 7-70 l/h, gas connections Viton / needle valve , PA				
Measuring-gas pump / valves			once installed, quantity refers to specification				

Housing/dimensions	
System housing	Steel sheet housing with front door and inspection window
Housing dimensions (WxHxD) - without	300 x 400 x 185 mm
Build-in dimensions (WxHxD)	500 x 700 x 500 mm
Weight	Approx. 11-15 kg (abhängig von der Geräteausführung)
Protection	IP 20
Housing color / door frame	RAL 7035
Forced ventilation / housing rinsing	Housing fan 12VDC / 56 m ³ /h free-blowing - only if option measuring cooler

Requirements for the place of installation	
Operating temperature	+10 to +40°C
Lagertemperatur	-25 to +50°C
Rel. humidity	<=75% annual mean; minor and seldom condensation in de-energized condition
Air pressure	850 ... 1100 hPa

Measuring input and output conditions, calibration gases	
Input dew point of the gas to be measured	max. 40°C (with measuring cooler) min. 5°C below ambient temperature limit (without measuring cooler)
Measuring-gas temperature	80°C max.
Pressure at the measuring-gas input	-200 ... +200 hPa
Measuring-gas output pressure	Exhaust air must be discharged into the outside atmosphere in a non-pressurized condition / discharge hoses should be as short as possible
Test gas mixture for calibration (example)	40Vol.% of CO ₂ / 300ppm H ₂ S / 0 Vol.% of O ₂ / 800ppm H ₂ / rest CH ₄

Electrical connection values	
Electrical connection, voltage supply	Power cable 3x0.75 mm ² with earthed-contact plug
Supply / incoming supply	230 VAC 50 Hz / 115VAC 60Hz option
Power consumption	85 VA max.
Fuses / overload protection	Miniature fuse 4x20mm / 1 A slow-blow

Gas connections	
Position of gas connections	Underside of control cabinet
Gas inlet / safety equipment	F 501 detonation protection according to EN 12874 V2A stainless steel
Gas and condensate connections, type / design	Clamping-ring screw connection PA for hoses d _a x s = 6 x 1 mm

Measuring-gas processing option																																														
Cooler type	Peltier cyclone cooler, Duran glass																																													
Input dew point / inlet temperature	40°C / 80°C max.																																													
Outlet dew point	5°C (ex-works setting)																																													
Condensate pump	Hose pump, 16ml/min, Novoprene hose																																													
System monitoring	Status displays (LED), alarm at ±3°C																																													
Characteristic of measuring-gas cooler	<p style="text-align: center;">Ausgangstaupunkt in Abhängigkeit vom Eingangstaupunkt und Volumenstrom</p> <p>The graph plots the outlet dew point (Ausgangstaupunkt in °C) on the y-axis (ranging from 4 to 10) against the measuring gas flow rate (Messgasvolumenstrom in l/h) on the x-axis (ranging from 20 to 160). Four curves are shown for inlet temperatures of 20°C, 30°C, 40°C, and 50°C. All curves show that the outlet dew point increases with both inlet temperature and flow rate. The 50°C curve reaches approximately 9.5°C at 160 l/h, while the 20°C curve remains below 5°C across the entire flow range.</p> <table border="1"> <caption>Approximate data points from the graph</caption> <thead> <tr> <th>Messgasvolumenstrom (l/h)</th> <th>20°C Inlet</th> <th>30°C Inlet</th> <th>40°C Inlet</th> <th>50°C Inlet</th> </tr> </thead> <tbody> <tr> <td>20</td> <td>4.8</td> <td>4.8</td> <td>4.8</td> <td>4.8</td> </tr> <tr> <td>40</td> <td>4.8</td> <td>4.9</td> <td>5.0</td> <td>5.1</td> </tr> <tr> <td>60</td> <td>4.8</td> <td>4.9</td> <td>5.1</td> <td>5.3</td> </tr> <tr> <td>80</td> <td>4.8</td> <td>5.0</td> <td>5.3</td> <td>5.6</td> </tr> <tr> <td>100</td> <td>4.9</td> <td>5.1</td> <td>5.5</td> <td>5.9</td> </tr> <tr> <td>120</td> <td>4.9</td> <td>5.2</td> <td>5.8</td> <td>6.3</td> </tr> <tr> <td>140</td> <td>5.0</td> <td>5.3</td> <td>6.1</td> <td>6.8</td> </tr> <tr> <td>160</td> <td>5.1</td> <td>5.4</td> <td>6.4</td> <td>7.2</td> </tr> </tbody> </table>	Messgasvolumenstrom (l/h)	20°C Inlet	30°C Inlet	40°C Inlet	50°C Inlet	20	4.8	4.8	4.8	4.8	40	4.8	4.9	5.0	5.1	60	4.8	4.9	5.1	5.3	80	4.8	5.0	5.3	5.6	100	4.9	5.1	5.5	5.9	120	4.9	5.2	5.8	6.3	140	5.0	5.3	6.1	6.8	160	5.1	5.4	6.4	7.2
Messgasvolumenstrom (l/h)	20°C Inlet	30°C Inlet	40°C Inlet	50°C Inlet																																										
20	4.8	4.8	4.8	4.8																																										
40	4.8	4.9	5.0	5.1																																										
60	4.8	4.9	5.1	5.3																																										
80	4.8	5.0	5.3	5.6																																										
100	4.9	5.1	5.5	5.9																																										
120	4.9	5.2	5.8	6.3																																										
140	5.0	5.3	6.1	6.8																																										
160	5.1	5.4	6.4	7.2																																										

11.2 Parts subject to wear and tear; spare parts

Article No.	Description
800 - 0001	Filter set for SSM 6000 (3x 0007 / 1x 0003, 0005 and 0006 / 2x 0002 each)
800 - 0002	Filter mat for housing, 2-layer
800 - 0003	Chemical filter (quantity: 1)
800 - 0004	Chemical filter (1 set = 3 pieces)
800 - 0005	Air filter (quantity: 1)
800 - 0006	Aerosol filter (quantity: 1)
800 - 0007	Fine dust filter (quantity: 1)
800 - 0410	F 501 detonation protection according to EN 12874 / ATEX V2A stainless steel
800 - 0703	Hose DN 4/6, PVC (for external hose connections only)
800 - 0708	Hose DN 4/6, PTFE (for external hose connections only)
800 - 0134	Fitting connection DN 4/6, PA (knurled nut + clamping ring)
800 - 0711	Port connection of extraction point - G1/2" (external thread) / tube DN 4/6, PP
800 - 0712	Port connection of extraction point - G1/2" (internal thread) / tube DN 4/6, PP
800 - 606	Ready-to-connect control cable PORT 1, length: 10m
800 - 607	Ready-to-connect control cable PORT 1, length: 20m
800 - 608	Ready-to-connect control cable PORT 2, length: 10m
800 - 609	Ready-to-connect control cable PORT 2, length: 20m
800 - 610	SUB-D-plug connector, 9-pole with bolts clamp and one lead
800 - 611	SUB-D-plug connector, 25-pole with bolts clamp and one lead
800 - 1003	Setup key
800 - 1002	Control cabinet key
800 - 0114	Electric miniature fuse 1A slow-blow
800 - 5009	SSM 6000 V01.07 User Manual - German
800 - 5010	SSM 6000 V01.07 User Manual - English

Further spare parts on request.

11.3 Declarations of conformity***EG-Konformitätserklärung***
Declaration of conformity

Manufacturer: Pronova Analystechnik GmbH & Co. KG
Groninger Straße 25
13347 Berlin Germany

Product description: SSM 6000 / SSM 6000 LT / SSM 6000 C
Determination of CH₄, H₂S, O₂, CO₂ and H₂ concentration

Manufacturer No.: 8002x000-xxx

The manufacturer herewith declares that the above-stated analysis systems is in conformity with the requirements in the following regulations, laws or other specifications:

EC-Directive 89/336/EWG	EMC
EC-Directive 2006/95/EG	Low voltage

The following harmonized standards have been used:

	EN 61010 Teil1/A2:1995 Overvoltage category III, pollution degree 2
Electromagnetic susceptibility:	EN 61000-6-3:2001
Electromagnetic disturbances:	EN61326:1997+A1:1998-A2:2001 Industry request

Berlin, date: 10 January 2007

Signature:

This declaration confirms conformity with the above-stated directive, but does not constitute any warranty of properties in the legal sense.

The safety information of the product documentation supplied must be adhered to.

ZERTIFIKAT ♦ CERTIFICATE ♦ 認証証書 ♦ СЕРТИФИКАТ ♦ CERTIFICADO ♦ CERTIFICAT

MSD/10.05



Management Service

ZERTIFIKAT

Die Zertifizierungsstelle
der TÜV SÜD Management Service GmbH
bescheinigt, dass das Unternehmen

**PRONOVA Analysetechnik
GmbH & Co.KG**
Groninger Straße 25
D-13347 Berlin

für den Geltungsbereich

**Vertrieb, Entwicklung, Planung, Herstellung,
Inbetriebnahme und Service von Analysetechnik**

ein Qualitätsmanagementsystem
eingeführt hat und anwendet.

Durch ein Audit, Bericht-Nr. **70010504**
wurde der Nachweis erbracht, dass die Forderungen der

ISO 9001: 2000

erfüllt sind. Dieses Zertifikat ist gültig bis **2009-03-14**

Zertifikat-Registrier-Nr. **12 100 11234 TMS**



M. Vogel

München, 2006-03-29



QMS-TGA-ZM-07-92

TÜV SÜD Management Service GmbH • Zertifizierungsstelle • Ridlerstraße 65 • 80339 München • Germany

Physikalisch-Technische Bundesanstalt

Braunschweig und Berlin



EG-Baumusterprüfbescheinigung

- (1)
 (2) Geräte und Schutzsysteme zur bestimmungsgemäßen Verwendung in explosionsgefährdeten Bereichen - **Richtlinie 94/9/EG**
 (3) EG-Baumusterprüfbescheinigungsnummer



PTB 02 ATEX 4012 X

- (4) Schutzsystem: Detonationssicherung Typ "F 501/.."
 (5) Hersteller: Firma SBG Sicherungsgerätebau GmbH
 (6) Anschrift: Hofstr.10, 57076 Siegen
 (7) Die Bauart dieses Schutzsystems sowie die verschiedenen zulässigen Ausführungen sind in der Anlage zu dieser Baumusterprüfbescheinigung festgelegt.
 (8) Die Physikalisch-Technische Bundesanstalt bescheinigt als benannte Stelle Nr. 0102 nach Artikel 9 der Richtlinie des Rates der Europäischen Gemeinschaften vom 23. März 1994 (94/9/EG) die Erfüllung der grundlegenden Sicherheits- und Gesundheitsanforderungen für die Konzeption und den Bau von Geräten und Schutzsystemen zur bestimmungsgemäßen Verwendung in explosionsgefährdeten Bereichen gemäß Anhang II der Richtlinie.

Die Ergebnisse der Prüfung sind in dem vertraulichen Prüfbericht PTB Ex 02-40019 festgehalten.

- (9) Die grundlegenden Sicherheits- und Gesundheitsanforderungen werden erfüllt durch Übereinstimmung mit

EN 12874 "Flammendurchschlagsicherungen"

- (10) Falls das Zeichen „X“ hinter der Bescheinigungsnummer steht, wird auf besondere Bedingungen für die sichere Anwendung des Schutzsystems in der Anlage zu dieser Bescheinigung hingewiesen.
 (11) Diese EG-Baumusterprüfbescheinigung bezieht sich nur auf Konzeption und Bau des festgelegten Schutzsystems gemäß Richtlinie 94/9/EG. Weitere Anforderungen dieser Richtlinie gelten für die Herstellung und das Inverkehrbringen dieses Schutzsystems.
 (12) Die Kennzeichnung des Schutzsystems muß die folgenden Angaben enthalten:

II G IIB3

Zertifizierungsstelle Explosionsschutz
 Im Auftrag

Braunschweig, 2002-04-18

Dr. H. Förster
 Regierungsdirektor



Seite 1/2

EG-Baumusterprüfbescheinigungen ohne Unterschrift und ohne Siegel haben keine Gültigkeit.
 Diese EG-Baumusterprüfbescheinigung darf nur unverändert weiterverbreitet werden.
 Auszüge oder Änderungen bedürfen der Genehmigung der Physikalisch-Technischen Bundesanstalt.
 Physikalisch-Technische Bundesanstalt • Bundesallee 100 • D-38116 Braunschweig

Physikalisch-Technische Bundesanstalt

Braunschweig und Berlin



Anlage

(14) EG-Baumusterprüfbescheinigung PTB 02 ATEX 4012 X

(15) Beschreibung des Schutzsystems

Detonationssicherung Typ "F 501/.." für den Einsatz im Zuge von Rohrleitungen \leq DN 15 ($G^{1/2}$) zur Verhinderung eines Flammendurchschlages bei Deflagrationen und stabilen Detonationen von explosionsfähigen Dampf-Luft- bzw. Gas-Gemischen.

Die Bauart, Werkstoffe und Abmessungen sind durch die im Prüfbericht PTB Ex 02-40019 aufgeführten Zeichnungen und Betriebsanleitung festgelegt.

Anforderungen an den Explosionsschutz:

Flammendurchschlagsicher im Zuge von Rohrleitungen \leq DN 15 bei Deflagrationen und stabilen Detonationen brennbarer Gase und Flüssigkeiten, die der Explosionsgruppe IIA, IIB1, IIB2 und IIB3 mit einer Normspaltweite \geq 0,65 mm angehören, bei einem max. absoluten Betriebsdruck von 110 kPa und einer max. Betriebstemperatur von 60 °C.

(16) Prüfbericht PTB Ex 02-40019 (bestehend aus 4 Seiten, 4 Zeichnungen und 1 Betriebsanleitung)

Ergebnis: Das Baumuster entspricht den Bestimmungen der Richtlinie 94/9/EG für Schutzsysteme (Unterteilung IIA, IIB1, IIB2 und IIB3 nach EN 50014). Die Sicherung erfüllt die Anforderungen an den Explosionsschutz, wie unter Punkt (15) beschrieben.

(17) Besondere Bedingungen

Beim Einsatz der Detonationssicherung Typ "F 501/.." müssen folgende Bedingungen eingehalten, bzw. erfüllt werden:

- Die Rohrleitung der ungeschützten Seite zwischen der möglichen Zündquelle und der Sicherung darf nicht größer als DN 15 ($G^{1/2}$) sein.
- Die im Betrieb anfallenden brennbaren Gase bzw. brennbaren Flüssigkeiten müssen der Explosionsgruppe IIA, IIB1, IIB2 oder IIB3 mit einer Normspaltweite \geq 0,65 mm angehören.
- Der max. Betriebsdruck darf nicht höher als 110 kPa (absoluter Druck) sein.
- Die Betriebstemperatur darf 60 °C nicht überschreiten.

Die genannten Bedingungen sind in die Betriebsanleitung jeder Detonationssicherung mit aufzunehmen und sind vom Betreiber zu erfüllen bzw. zu beachten.

Zertifizierungsstelle Explosionsschutz

Braunschweig, 2002-04-18

Im Auftrag

Dr. H. Förster
Regierungsdirektor



Seite 2/2

EG-Baumusterprüfbescheinigungen ohne Unterschrift und ohne Siegel haben keine Gültigkeit.
Diese EG-Baumusterprüfbescheinigung darf nur unverändert weiterverbreitet werden.
Auszüge oder Änderungen bedürfen der Genehmigung der Physikalisch-Technischen Bundesanstalt.

Physikalisch-Technische Bundesanstalt • Bundesallee 100 • D-38116 Braunschweig

11.4 Accessory connection cables

11.4.1 PORT 1 connection cable

Ready-to-connect control cable, 10m or 20m long, for transmitting the signals to the general system controller. Other lengths on request.

PIN	Color code (DIN 47100)	Signals
1	white	AO 1 -
2	brown	AO 2 -
3	green	AO 3 -
4	yellow	AO 4 -
5	gray	
6	pink	DI 1 - low
7	blue	DI 2 - low
8	red	DI 3 - low
9	black	DI 4 - low
10	violet	GND
11	gray/pink	
12	red/blue	
13	white/green	
14	brown/green	AO 1 +
15	white/yellow	AO 2 +
16	yellow/brown	AO 3 +
17	white/gray	AO 4 +
18	gray/brown	
19	white/pink	DI 1 - high
20	pink/brown	DI 2 - high
21	white/blue	DI 3 - high
22	brown/blue	DI 4 - high
23	white/red	12VDC
24	brown/red	
25		

Connection cable specifications:

Control cable

Type: LiYCY, common shield

Cross-section 0.25mm² / 80Ohm/km max.

Max. operating voltage 250V_{RMS}.

Nominal current 2.5A max.

Connection 1 (SSM6000)

D-sub plug connector, 25-pole

D-sub metal housing

Connection 2

Open cable ends, length: 150 mm

Color-coded wires / wire end sleeves 0.25mm²

- Shield connected to D-sub housing

- At connection 2, the shield is made available via a green/yellow wire 0.5mm² with wire end sleeve (length: 200mm)

- Cable ends not connected must be insulated individually!

11.5 PORT 2 connection cable

Ready-to-connect control cable, 10m or 20m long, for transmitting the signals to the general system controller. Other lengths on request.

PIN	Color code (DIN 47100)	Signals
1	white	12VDC
2	brown	DO-02
3	green	DO-04
4	yellow	DO-06
5	gray	DO-08
6	pink	DO-10
7	blue	DO-12
8	red	GND
9	black	
10	violet	
11	gray/pink	
12	red/blue	
13	white/green	
14	brown/green	DO-01
15	white/yellow	DO-03
16	yellow/brown	DO-05
17	white/gray	DO-07
18	gray/brown	DO-09
19	white/pink	DO-11
20	pink/brown	DO-13
21	white/blue	
22	brown/blue	
23	white/red	
24	brown/red	
25		

Connection cable specifications:

Control cable

Type: LiYCY, common shield

Cross-section 0.25mm² / 80Ohm/km max.

Max. operating voltage 250V_{RMS}.

Nominal current 2.5A max.

Connection 1 (SSM6000)

D-sub plug connector, 25-pole

D-sub metal housing

Connection 2

Open cable ends, length: 150 mm

Color-coded wires / wire end sleeves 0.25mm²


- Shield connected to D-sub housing

- At connection 2, the shield is made available via a


green/yellow wire 0.5mm² with wire end sleeve (length: 200mm)

- Cable ends not connected must be insulated individually!

Connection diagrams

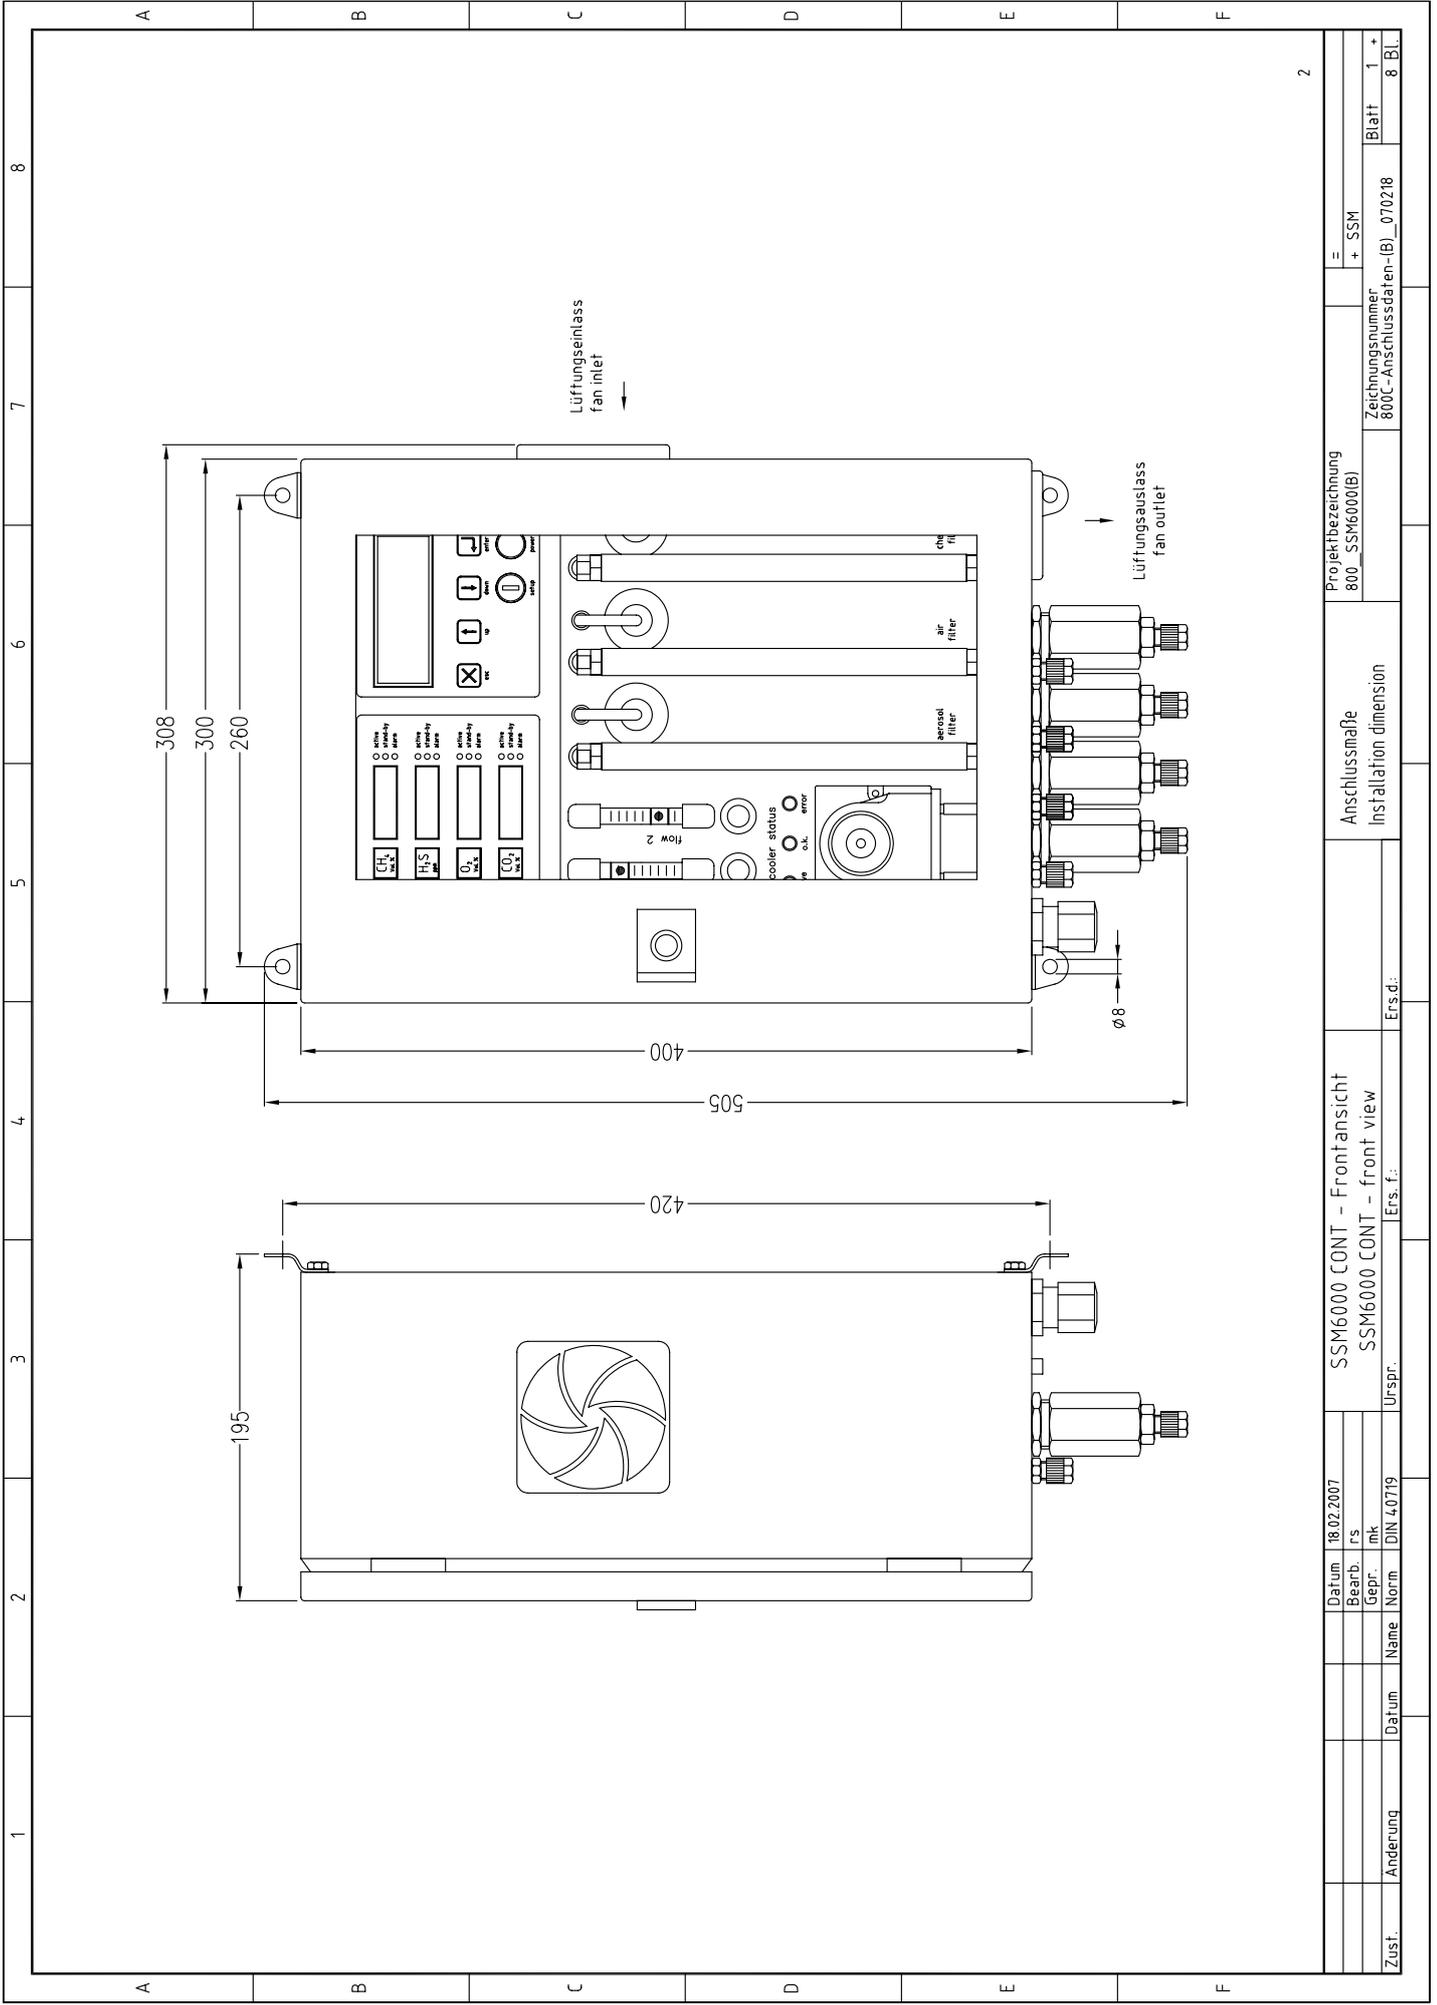

Zust.	Änderung	Datum	Name	Norm	DIN 40719	Urspr.	SSM6000 CONT - Frontansicht		SSM6000 CONT - front view		Ers.d.:	Anschlussmaße		Installation dimension		Projektbezeichnung		800_SSM6000(B)		= SSM		Zeichnungsnummer		800C-Anschlussdaten-(B)_070218		Blatt		1 +		8 Bl.	
		18.02.2007	rs	mk			SSM6000 CONT - Frontansicht		SSM6000 CONT - front view			Anschlussmaße		Installation dimension		Projektbezeichnung		800_SSM6000(B)		= SSM		Zeichnungsnummer		800C-Anschlussdaten-(B)_070218		Blatt		1 +		8 Bl.	

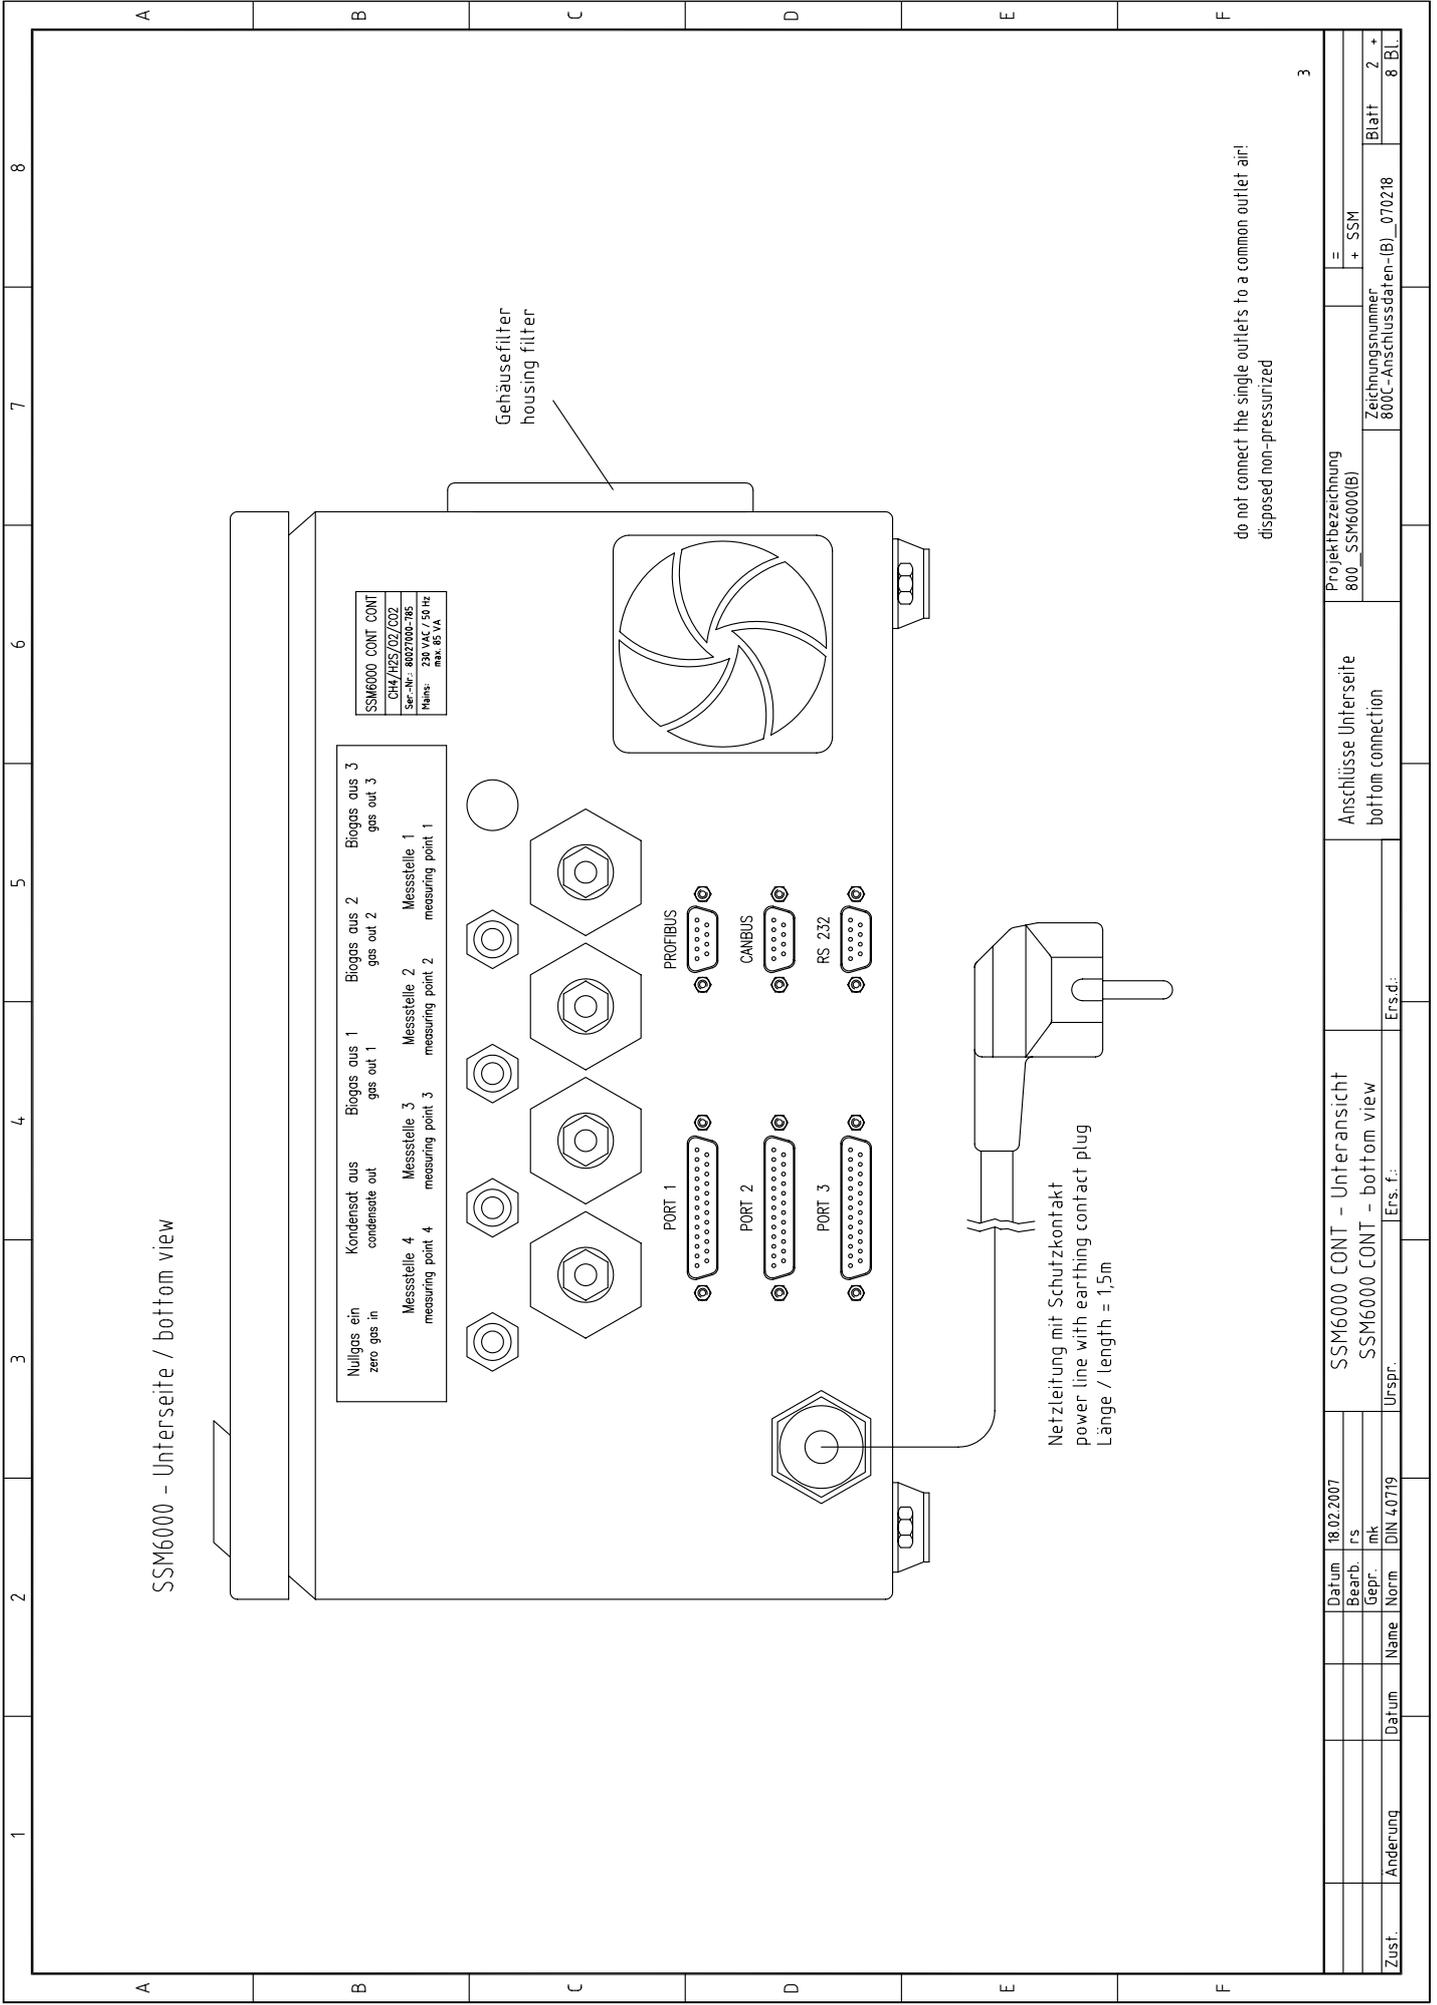

SSM6000 - Unterseite / bottom view

SSM6000 CONT CONT	
CH ₄ /H ₂ S/O ₂ /CO ₂	
Ser.-Nr. 8002000-185	
Platz:	230 V, 50 Hz
	max. 185 VA


Nullgas ein zero gas in	Biogas aus 1 gas out 1	Biogas aus 2 gas out 2	Biogas aus 3 gas out 3
Messstelle 4 measuring point 4	Messstelle 3 measuring point 3	Messstelle 2 measuring point 2	Messstelle 1 measuring point 1

Gehäusefilter
housing filter


Netzleitung mit Schutzkontakt
power line with earthing contact plug
Länge / length = 1,5m

do not connect the single outlets to a common outlet air!
disposed non-pressurized

Zust.	Änderung	Datum	18.02.2007	SSM6000 CONT - Unteransicht		Anschlüsse Unterseite bottom connection	Projektbezeichnung 800_SSM6000(B)	= SSM	Blatt	2
		Bearb.	rs	SSM6000 CONT - bottom view						
		Gepr.	mk	Urspr.		Ers.d.:				
		Norm	DIN 40719							

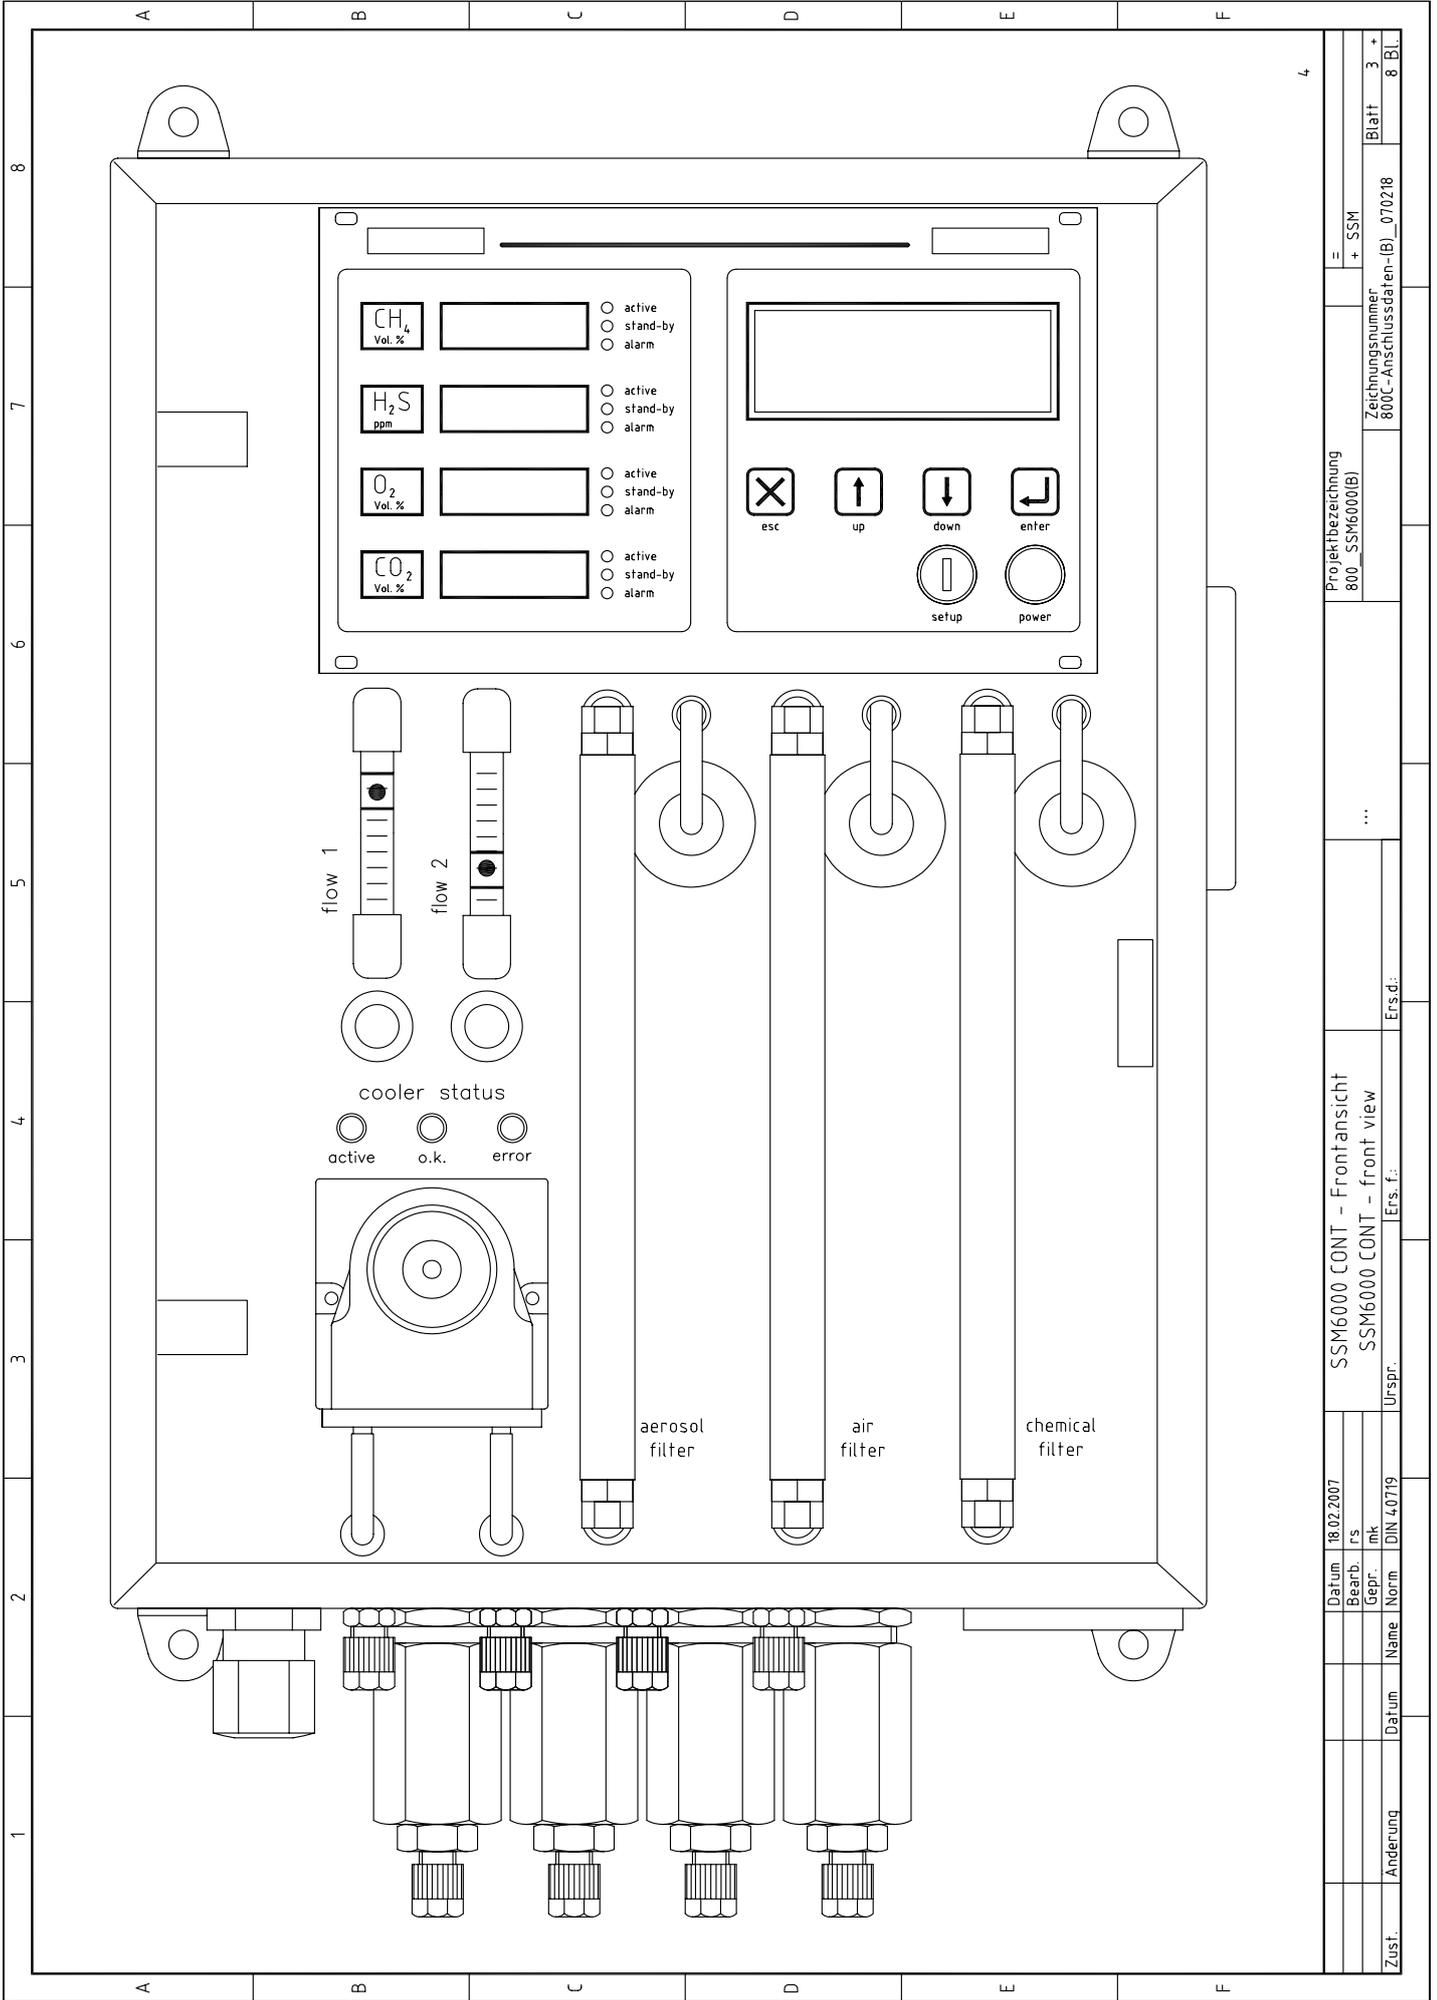

Projektbezeichnung 800_SSM6000(B)		= SSM		Blatt 3 +	
Zeichnungsnummer 800C-Anschlussdaten-(B)_070218				8 Bl.	
SSM6000 CONT - Frontansicht		...		4	
SSM6000 CONT - front view		Ers.d.:		Ers.f.:	
Datum	18.02.2007	Urspr.			
Bearb.	rs				
Gepr.	mk				
Norm	DIN 40719				
Name					
Datum					
Änderung					
Zust.					

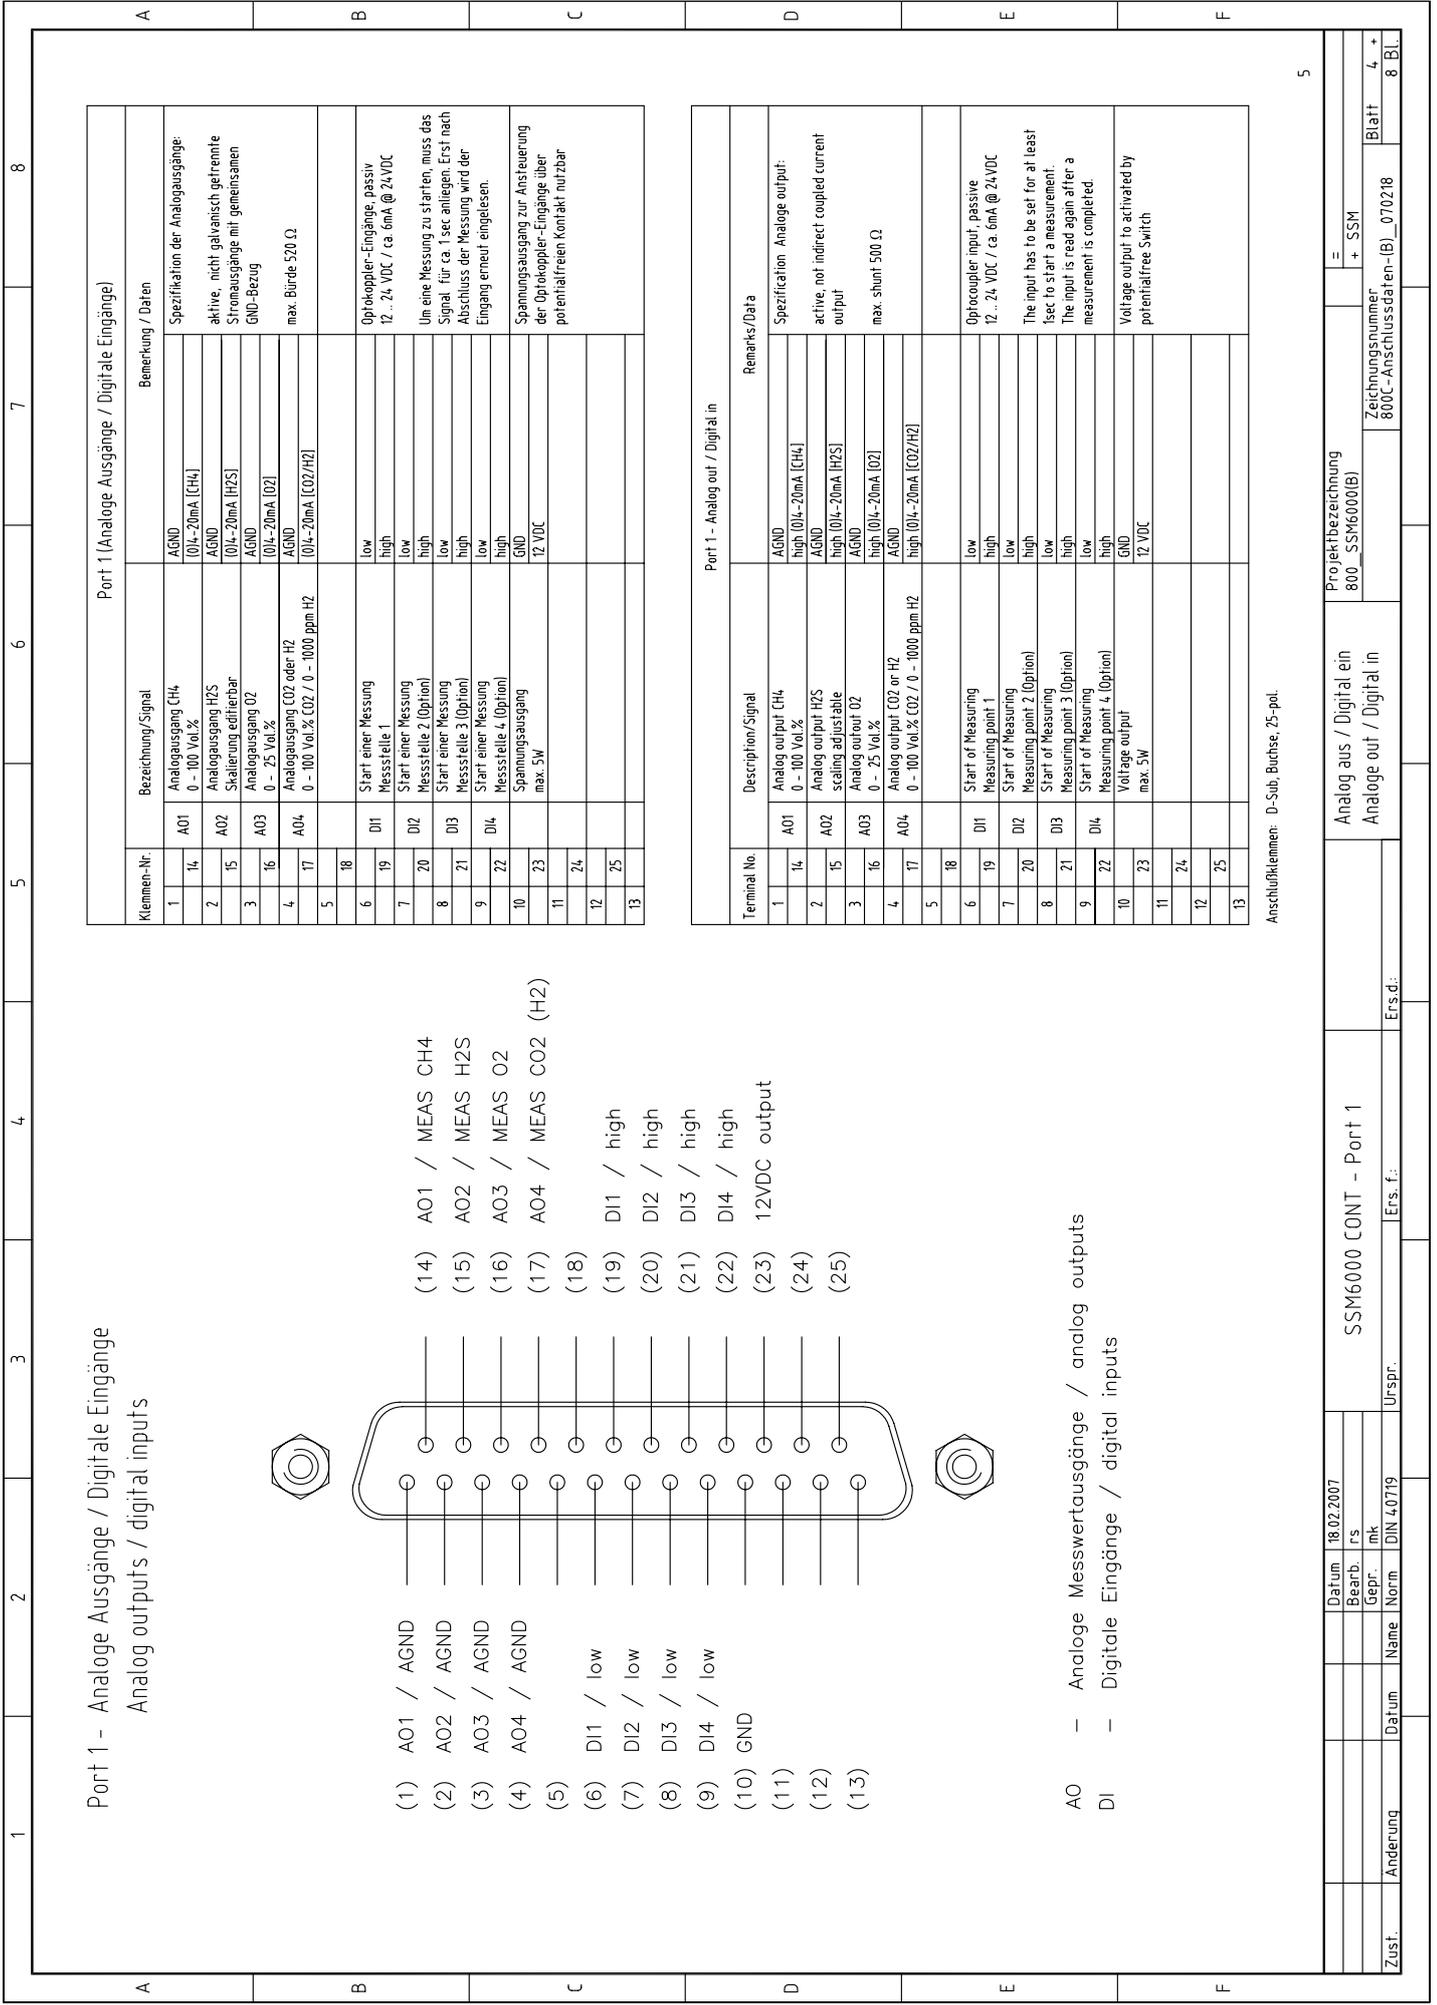

Port 1 - Analoge Ausgänge / Digitale Eingänge
Analog outputs / digital inputs

- (1) AO1 / AGND
- (2) AO2 / AGND
- (3) AO3 / AGND
- (4) AO4 / AGND
- (5)
- (6) DI1 / low
- (7) DI2 / low
- (8) DI3 / low
- (9) DI4 / low
- (10) GND
- (11)
- (12)
- (13)

- (14) AO1 / MEAS CH4
- (15) AO2 / MEAS H2S
- (16) AO3 / MEAS O2
- (17) AO4 / MEAS CO2 (H2)
- (18)
- (19) DI1 / high
- (20) DI2 / high
- (21) DI3 / high
- (22) DI4 / high
- (23) 12VDC output
- (24)
- (25)

- AO - Analoge Messwertausgänge / analog outputs
- DI - Digitale Eingänge / digital inputs

Port 1 (Analoge Ausgänge / Digitale Eingänge)

Klemmen-Nr.	Bezeichnung/Signal		Bemerkung / Daten
1	A01	Analogausgang CH4 0 - 100 Vol. %	AGND Spezifikation der Analogausgänge: aktive, nicht galvanisch getrennte Stromausgänge mit gemeinsamen GND-Bezug max. Bürde 520 Ω
2	A02	Analogausgang H2S Skalierung editierbar	AGND
3	A03	Analogausgang O2 0 - 25 Vol. %	AGND
4	A04	Analogausgang CO2 oder H2 0 - 100 Vol. % CO2 / 0 - 1000 ppm H2	AGND
5			(0)4-20mA [CO2/H2]
6			
7	D11	Start einer Messung Messstelle 1	low
8	D12	Start einer Messung Messstelle 2 (Option)	low
9	D13	Start einer Messung Messstelle 3 (Option)	high
10	D14	Start einer Messung Messstelle 4 (Option)	low
11			high
12			GND
13			12 VDC

Port 1 - Analog out / Digital in

Terminal No.	Description/Signal		Remarks/Data
1	A01	Analog output CH4 0 - 100 Vol. %	AGND Spezifikation Analoge output: active, not indirect coupled current output max. shunt 500 Ω
2	A02	Analog output H2S scaling adjustable	AGND
3	A03	Analog output O2 0 - 25 Vol. %	AGND
4	A04	Analog output CO2 or H2 0 - 100 Vol. % CO2 / 0 - 1000 ppm H2	AGND
5			high (0)4-20mA [CO2/H2]
6			
7	D11	Start of Measuring Measuring point 1	low
8	D12	Start of Measuring Measuring point 2 (Option)	low
9	D13	Start of Measuring Measuring point 3 (Option)	high
10	D14	Start of Measuring Measuring point 4 (Option)	low
11			high
12			GND
13			12 VDC


Anschlussklemmen: D-Sub, Buchse, 25-pol.

Zust.		Änderung		Datum		Name		Norm		Urspr.		Ers. f.:		Ers. d.:	
				18.02.2007		rs		mk		DIN 40719					
				Bearb.		Gepr.									
				SSM6000 CONT - Port 1		Analoge out / Digital in		Analoge out / Digital in		Projektbezeichnung 800_SSM6000(B)		Zeichnungsnummer 800C-Anschlussdaten-(B)_070218		Blatt 4 + 8 Bl.	

1	2	3	4	5	6	7	8																																																																														
Port 2 - Digitale Ausgänge / Digital outputs																																																																																					
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 10%;">Klemmen-Nr.</th> <th style="width: 40%;">Bezeichnung/Signal</th> <th style="width: 40%;">Bemerkung / Daten</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>12 VDC</td> <td></td> </tr> <tr> <td>2</td> <td>Grenzwertalarm CH4 +</td> <td>max. 5W schaltet nach GND</td> </tr> <tr> <td>3</td> <td>Grenzwertalarm CH4 -</td> <td>schaltet nach GND</td> </tr> <tr> <td>4</td> <td>Grenzwertalarm H2S +</td> <td>schaltet nach GND</td> </tr> <tr> <td>5</td> <td>Grenzwertalarm H2S -</td> <td>schaltet nach GND</td> </tr> <tr> <td>6</td> <td>Grenzwertalarm O2 +</td> <td>schaltet nach GND</td> </tr> <tr> <td>7</td> <td>Grenzwertalarm O2 -</td> <td>schaltet nach GND</td> </tr> <tr> <td>8</td> <td>Grenzwertalarm CO2 +</td> <td>schaltet nach GND</td> </tr> <tr> <td>9</td> <td>Grenzwertalarm CO2 -</td> <td>schaltet nach GND</td> </tr> <tr> <td>10</td> <td>Status "Messung aktiv"</td> <td>schaltet nach GND</td> </tr> <tr> <td>11</td> <td>Status "Stand-by"</td> <td>schaltet nach GND</td> </tr> <tr> <td>12</td> <td>Status "Konfigurationsmodus"</td> <td>schaltet nach GND</td> </tr> <tr> <td>13</td> <td>Messstelle 2</td> <td>schaltet nach GND</td> </tr> <tr> <td>14</td> <td>Messstelle 3</td> <td>schaltet nach GND</td> </tr> <tr> <td>15</td> <td>Messstelle 4</td> <td>schaltet nach GND</td> </tr> <tr> <td>16</td> <td>Prüfgasventil</td> <td>schaltet nach GND</td> </tr> <tr> <td>17</td> <td>GND</td> <td></td> </tr> <tr> <td>18</td> <td></td> <td></td> </tr> <tr> <td>19</td> <td></td> <td></td> </tr> <tr> <td>20</td> <td></td> <td></td> </tr> <tr> <td>21</td> <td></td> <td></td> </tr> <tr> <td>22</td> <td></td> <td></td> </tr> <tr> <td>23</td> <td></td> <td></td> </tr> <tr> <td>24</td> <td></td> <td></td> </tr> <tr> <td>25</td> <td></td> <td></td> </tr> </tbody> </table>								Klemmen-Nr.	Bezeichnung/Signal	Bemerkung / Daten	1	12 VDC		2	Grenzwertalarm CH4 +	max. 5W schaltet nach GND	3	Grenzwertalarm CH4 -	schaltet nach GND	4	Grenzwertalarm H2S +	schaltet nach GND	5	Grenzwertalarm H2S -	schaltet nach GND	6	Grenzwertalarm O2 +	schaltet nach GND	7	Grenzwertalarm O2 -	schaltet nach GND	8	Grenzwertalarm CO2 +	schaltet nach GND	9	Grenzwertalarm CO2 -	schaltet nach GND	10	Status "Messung aktiv"	schaltet nach GND	11	Status "Stand-by"	schaltet nach GND	12	Status "Konfigurationsmodus"	schaltet nach GND	13	Messstelle 2	schaltet nach GND	14	Messstelle 3	schaltet nach GND	15	Messstelle 4	schaltet nach GND	16	Prüfgasventil	schaltet nach GND	17	GND		18			19			20			21			22			23			24			25		
Klemmen-Nr.	Bezeichnung/Signal	Bemerkung / Daten																																																																																			
1	12 VDC																																																																																				
2	Grenzwertalarm CH4 +	max. 5W schaltet nach GND																																																																																			
3	Grenzwertalarm CH4 -	schaltet nach GND																																																																																			
4	Grenzwertalarm H2S +	schaltet nach GND																																																																																			
5	Grenzwertalarm H2S -	schaltet nach GND																																																																																			
6	Grenzwertalarm O2 +	schaltet nach GND																																																																																			
7	Grenzwertalarm O2 -	schaltet nach GND																																																																																			
8	Grenzwertalarm CO2 +	schaltet nach GND																																																																																			
9	Grenzwertalarm CO2 -	schaltet nach GND																																																																																			
10	Status "Messung aktiv"	schaltet nach GND																																																																																			
11	Status "Stand-by"	schaltet nach GND																																																																																			
12	Status "Konfigurationsmodus"	schaltet nach GND																																																																																			
13	Messstelle 2	schaltet nach GND																																																																																			
14	Messstelle 3	schaltet nach GND																																																																																			
15	Messstelle 4	schaltet nach GND																																																																																			
16	Prüfgasventil	schaltet nach GND																																																																																			
17	GND																																																																																				
18																																																																																					
19																																																																																					
20																																																																																					
21																																																																																					
22																																																																																					
23																																																																																					
24																																																																																					
25																																																																																					
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 10%;">Terminal No.</th> <th style="width: 40%;">Description/Signal</th> <th style="width: 40%;">Remarks/Data</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>12 VDC</td> <td></td> </tr> <tr> <td>2</td> <td>limit value alarm CH4 +</td> <td>max. 5W switch to GND</td> </tr> <tr> <td>3</td> <td>limit value alarm CH4 -</td> <td>switch to GND</td> </tr> <tr> <td>4</td> <td>limit value alarm H2S +</td> <td>switch to GND</td> </tr> <tr> <td>5</td> <td>limit value alarm H2S -</td> <td>switch to GND</td> </tr> <tr> <td>6</td> <td>limit value alarm O2 +</td> <td>switch to GND</td> </tr> <tr> <td>7</td> <td>limit value alarm O2 -</td> <td>switch to GND</td> </tr> <tr> <td>8</td> <td>limit value alarm CO2 +</td> <td>switch to GND</td> </tr> <tr> <td>9</td> <td>limit value alarm CO2 -</td> <td>switch to GND</td> </tr> <tr> <td>10</td> <td>Status "Measurement active"</td> <td>switch to GND</td> </tr> <tr> <td>11</td> <td>Status "Stand-by"</td> <td>switch to GND</td> </tr> <tr> <td>12</td> <td>Status "Configuration mode"</td> <td>switch to GND</td> </tr> <tr> <td>13</td> <td>Measuring point 2</td> <td>switch to GND</td> </tr> <tr> <td>14</td> <td>Measuring point 3</td> <td>switch to GND</td> </tr> <tr> <td>15</td> <td>Measuring point 4</td> <td>switch to GND</td> </tr> <tr> <td>16</td> <td>Calibration gas valve</td> <td>switch to GND</td> </tr> <tr> <td>17</td> <td>GND</td> <td></td> </tr> <tr> <td>18</td> <td></td> <td></td> </tr> <tr> <td>19</td> <td></td> <td></td> </tr> <tr> <td>20</td> <td></td> <td></td> </tr> <tr> <td>21</td> <td></td> <td></td> </tr> <tr> <td>22</td> <td></td> <td></td> </tr> <tr> <td>23</td> <td></td> <td></td> </tr> <tr> <td>24</td> <td></td> <td></td> </tr> <tr> <td>25</td> <td></td> <td></td> </tr> </tbody> </table>								Terminal No.	Description/Signal	Remarks/Data	1	12 VDC		2	limit value alarm CH4 +	max. 5W switch to GND	3	limit value alarm CH4 -	switch to GND	4	limit value alarm H2S +	switch to GND	5	limit value alarm H2S -	switch to GND	6	limit value alarm O2 +	switch to GND	7	limit value alarm O2 -	switch to GND	8	limit value alarm CO2 +	switch to GND	9	limit value alarm CO2 -	switch to GND	10	Status "Measurement active"	switch to GND	11	Status "Stand-by"	switch to GND	12	Status "Configuration mode"	switch to GND	13	Measuring point 2	switch to GND	14	Measuring point 3	switch to GND	15	Measuring point 4	switch to GND	16	Calibration gas valve	switch to GND	17	GND		18			19			20			21			22			23			24			25		
Terminal No.	Description/Signal	Remarks/Data																																																																																			
1	12 VDC																																																																																				
2	limit value alarm CH4 +	max. 5W switch to GND																																																																																			
3	limit value alarm CH4 -	switch to GND																																																																																			
4	limit value alarm H2S +	switch to GND																																																																																			
5	limit value alarm H2S -	switch to GND																																																																																			
6	limit value alarm O2 +	switch to GND																																																																																			
7	limit value alarm O2 -	switch to GND																																																																																			
8	limit value alarm CO2 +	switch to GND																																																																																			
9	limit value alarm CO2 -	switch to GND																																																																																			
10	Status "Measurement active"	switch to GND																																																																																			
11	Status "Stand-by"	switch to GND																																																																																			
12	Status "Configuration mode"	switch to GND																																																																																			
13	Measuring point 2	switch to GND																																																																																			
14	Measuring point 3	switch to GND																																																																																			
15	Measuring point 4	switch to GND																																																																																			
16	Calibration gas valve	switch to GND																																																																																			
17	GND																																																																																				
18																																																																																					
19																																																																																					
20																																																																																					
21																																																																																					
22																																																																																					
23																																																																																					
24																																																																																					
25																																																																																					
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Anschlussvariante 1</p> </div> <div style="text-align: center;"> <p>Anschlussvariante 2</p> </div> </div>																																																																																					
<p>Connection Terminal: D-Sub, Burchse, 25-pol.</p>																																																																																					

1	2	3	4	5	6	7	8
Port 3 - Analoge Eingänge / analog inputs							
Port 3 - (Analoge Eingänge)							
Klemmen-Nr.	Bezeichnung/Signal	Bemerkung / Daten					
1	AI 06	Analoger Eingang	Spezifikation: - passive, differentielle 4-20 mA Eingänge				
2	AI 08	Analoger Eingang	- AD-Wandler 10 bit (1000 dig) - Offset 7...10 dig				
3	AI 05	Analoger Eingang ...	Spannungsausgang				
4		Spannungsausgang	12 VDC, max. 5W				
5			GND				
6			Ausgabe der Messwerte				
7			- Anzeige (dig) auf LC-Display unter "Sensordaten aktuell" und Ausgabe über Profibus-Schnittstelle (dig)				
8							
9			- Spezifische Auflösung (z.B.) AI 6 pH-Wert 0,06 pH/dig AI 8 Redox-Potential 1,00 mV/dig AI 5 -				
10							
11			- Profibus-Zuordnung INPUT-6 AI5 INPUT-7 AI6 INPUT-9 AI8				
12							
13							

Anschlussbeispiel 01: Sensorenversorgung erfolgt über den 12V-Ausgang des SSM6000		Anschlussbeispiel 02: Externe Sensorversorgung mit aktivem 4...20mA-Ausgang	
<p>SSM6000 Port 3</p> <p>12VDC (04)</p> <p>AI06 (high) (14)</p> <p>AI06 (low) (01)</p> <p>GND (17)</p>		<p>SSM6000 Port 3</p> <p>12VDC (04)</p> <p>AI06 (high) (14)</p> <p>AI06 (low) (01)</p> <p>GND (17)</p>	
<p>Datum: 05.07.06</p> <p>Bearb.: rs</p> <p>Gepr.: mk</p> <p>Name: Norm</p> <p>DIN 40719</p> <p>Urspr.:</p>		<p>Datum: 05.07.06</p> <p>Bearb.: rs</p> <p>Gepr.: mk</p> <p>Name: Norm</p> <p>DIN 40719</p> <p>Urspr.:</p>	
<p>Änderung</p>		<p>Änderung</p>	
<p>Projektbezeichnung 800_SSM6000(B)</p>		<p>Projektbezeichnung 800_SSM6000(B)</p>	
<p>Analog ein / Analog in</p>		<p>Analog ein / Analog in</p>	
<p>Blatt: 6 +</p>		<p>Blatt: 6 +</p>	
<p>8 Bl.</p>		<p>8 Bl.</p>	

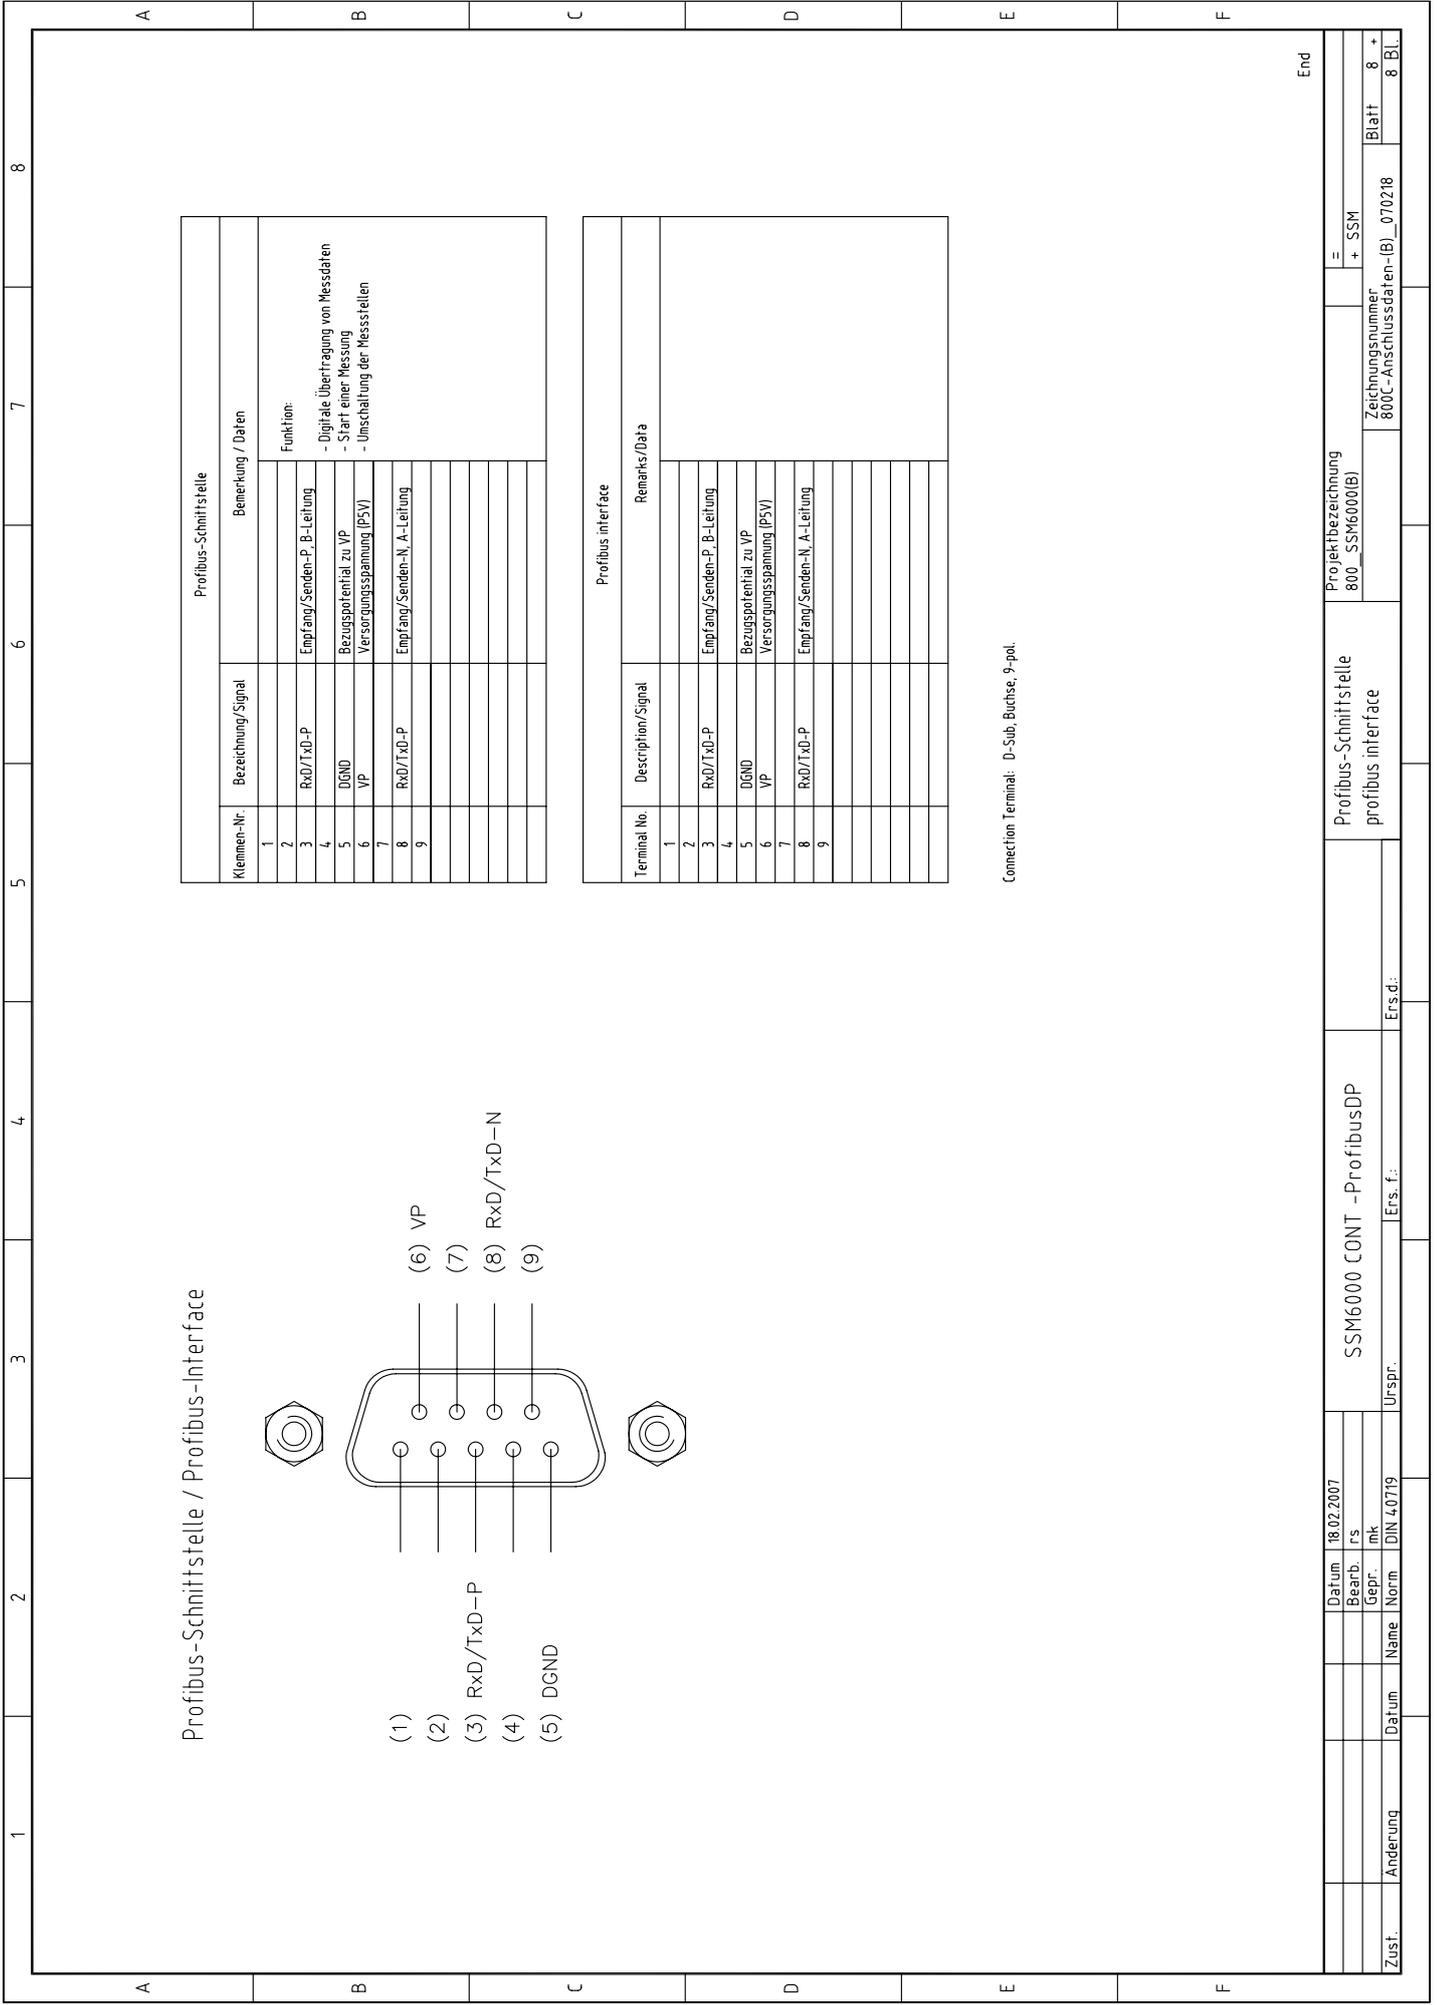

Profibus-Schnittstelle / Profibus-interface

Profibus-Schnittstelle		
Klemmen-Nr.	Bezeichnung/Signal	Bemerkung / Daten
1		
2		
3	RxD/TxD-P	Empfang/Senden-P, B-Leitung
4	DGND	Bezugspotential zu VP
5	VP	Versorgungsspannung (P5V)
6		
7		
8	RxD/TxD-P	Empfang/Senden-N, A-Leitung
9		

Funktion:
 - Digitale Übertragung von Messdaten
 - Start einer Messung
 - Umschaltung der Messstellen

Profibus interface		
Terminal No.	Description/Signal	Remarks/Data
1		
2		
3	RxD/TxD-P	Empfang/Senden-P, B-Leitung
4	DGND	Bezugspotential zu VP
5	VP	Versorgungsspannung (P5V)
6		
7		
8	RxD/TxD-P	Empfang/Senden-N, A-Leitung
9		

Connection Terminal: D-Sub, Buchse, 9-pol.

End

Zust.	Änderung	Datum	Name	Norm	Urspr.	Ers.f.	SSM6000 CONT -ProfibusDP	Profibus-Schnittstelle profibus interface	Projektbezeichnung 800_SSM6000(B)	= SSM	Blatt	8 +
				DIN 40719				profibus interface	Zeichnungsnummer 800C-Anschlussdaten-(B)_070218		8	8 Bl.

SSM6000 Biogas Analyzer

Description of the Profibus Interface



1	INTRODUCTION	5
2	ELECTRICAL TRANSMISSION EQUIPMENT	5
2.1	INTERFACE PROPERTIES OF THE SSM6000	5
2.2	BUS CABLE	5
2.3	SHIELDING	5
2.4	CONNECTOR	5
2.5	BUS TERMINATION	6
2.6	CONNECTOR LAYOUT	6
3	DATA TRANSMISSION	6
3.1	PARAMETER DATA	6
3.2	CONFIGURATION DATA	7
3.3	CYCLIC MODE	8
3.4	ACYCLIC MODE	8
3.4.1	READ ACCESS	8
3.4.2	WRITE ACCESS	8
3.5	DATA MODULES OF THE SSM6000	9
3.6	DATA TYPES AND DATA FORMAT	11
3.6.1	FLOAT	11
3.6.2	WORD	11
3.6.3	BYTE	11
4	DEVICE ADDRESS AND ID NUMBER	12
4.1	DEVICE ADDRESS	12
4.2	ID NUMBER	12
5	GSD FILE	13

1 Introduction

This technical description deals with the Profibus DP (DP Decentralized Periphery) slave interface of the SSM6000.

The correct description is as follows:

Profibus-DP: Compliance to IEC 61784 Ed.1:2002 CPF 3/1

2 Electrical transmission equipment

2.1 Interface properties of the SSM6000

The SSM6000 comes with a galvanically (optically) isolated Profibus interface according to IEC61784 Ed.1:2002 CPF3/2 (formerly EN50170). The output driver has a bus capacity of less than 10pF. The galvanic isolation offers overvoltage protection for up to 2500Vrms (1min.). The maximum data rate achieved totals 12Mbit.

2.2 Bus cable

All devices are connected in a line bus structure. Up to 32 stations (masters, slaves or repeaters) can be connected in one segment. The bus cable to be used should have the following properties:

	Permissible values	Units
Wave resistance	135..165	Ohm
Capacitance per unit length	< 30	pF/m
Loop resistance	110	Ohm/km
Line cross-section	> 0.34	mm ²

Example: Schuricht, article: 6XV1830-3BH10(1X2X0.25MM2)

Example: Profichip, article: FCC 2xAWG22 PB

2.3 Shielding

In order to achieve a high degree of system resistance to electromagnetic interference, the shield should be connected to protective earth at both ends, if possible, and in a highly conductive manner using large-surface shield clamps. This additionally serves as equipotential bonding for the devices.

2.4 Connector

A 9-pole D-SUB plug connector is preferably used for PROFIBUS networks with protection according to IP20. The SSM6000 comes with a 9-pole D-SUB socket. A supply voltage of 5V is made available via this plug connector for active Profibus connectors.

Example: VIPA, EasyConn PB

Description PROFIBUS interface

2.5 Bus termination

The PROFIBUS interface of the SSM6000 does not terminate the PROFIBUS at the device end. The SSM6000 does not set the open-circuit level of the bus at the device end. If this is required, the necessary measures must be implemented in the PROFIBUS connector. "EasyConn PB" plug connectors from VIPA offer these possibilities. The required auxiliary voltage is made available by the SSM6000 interface via the plug connector.

2.6 Connector layout

The 9-pole D-SUB socket features the following layout

Pin No.	Signal name	Description	Status
1	Shield	Shield	Not used
2	M24	24V reference potential	Not used
3	RxD/TxD-P	Bitbus B line (send data plus)	Used
4	CNTR-P	Repeater control signal	Used
5	DGND	5V reference potential	Used
6	VP (5V+)	5V supply voltage	Used
7	P24	24V supply voltage	Not used
8	RxD/TxD-N	Bitbus A line (send data minus)	Used
9	CNTR-N	Repeater control signal	Used

3 Data transmission

The PROFIBUS interface of the SSM6000 supports the **DPV0** and **DPV1** protocol extensions. This means that cyclic and/or acyclic data exchange is possible.

3.1 Parameter data

Since the SSM6000 DP slave features a modular design, each data module of the SSM6000 must be explicitly parameterized by the DP master. This means that following the seven parameter data bytes mandatory under the Profibus standards it is also necessary to write the three DPV1 bytes. The third byte must contain 08_h (bit3 set) as a precondition for transmission of the user-specific data. For each module selected, 5 bytes of parameter data are added to the telegram with the following structure:

Structure_Length	Structure_Type	Slot_Number	reserved	Module_No. (Pos.)
------------------	----------------	-------------	----------	-------------------

Example of module position1: 05_h 81_h 00_h 00_h 01_h

Example of module position2: 05_h 81_h 00_h 00_h 02_h

Example of module position8: 05_h 81_h 00_h 00_h 08_h and so forth.

Description

PROFIBUS interface

In the parameter data telegram, the following pattern can appear for example 1:

Param.	DPV1-1	DPV1-2	DPV1-3	Module parameter				
P1..P7	80 _h	60 _h	08 _h	05 _h	81 _h	00 _h	00 _h	01 _h

3.2 Configuration data

The configuration data is transmitted in the "special format". The following example refers to CH4: 42_h, 83_h, 00_h, 01_h

The first byte with the contents of 42_h is made up as follows:

7	6	5	4	3	2	1	0	
		0	0					Header for special format
0	1							The length byte for inputs follows
				0	0	1	0	Number of manufacturer-specific bytes at the end

The second byte with the contents of 83_h is made up as follows:

7	6	5	4	3	2	1	0	
1								Consistency over the entire module
	0							=> Following length specification in byte
		0	0	0	0	1	1	Number (of bytes) = contents + 1 (3+1 = 4)

00_h = manufacturer-specific => reserve
 01_h = manufacturer-specific => module 1

Default configuration of the SSM6000 DP slave:

```
static const BYTE Config[40] = {
    0x42,0x83,0x00,0x01, // CH4
    0x42,0x83,0x00,0x02, // H2S
    0x42,0x83,0x00,0x03, // O2
    0x42,0x83,0x00,0x04, // CO2
    0x42,0x83,0x00,0x05, // P
    0x42,0x83,0x00,0x06, // T
    0x42,0x00,0x00,0x07, // AL
    0x42,0x00,0x00,0x08, // ST
    0xC1,0x00,0x00,0x09, // MESS
    0x42,0x4A,0x00,0x0A,}; // AI
```

3.3 Cyclic mode

The SSM6000 DP slave features a modular design. The data modules can be combined in any order for cyclic operation. It is not necessary to insert blank modules, and it is possible to select several modules at the same time. The only restriction is that the maximum number of inputs and outputs (as specified in the GSD file) may not be exceeded.

The data modules selected for cyclic operation are communicated to the SSM6000 during initialization via the parameter telegram. These additional parameters are manufacturer-specific.

3.4 Acyclic mode

The SSM6000 also enables acyclic data exchange and/or access. Acyclic reading of all input data is generally possible.

Write access to output data is only possible as long as the module to be written has not yet started the cyclic exchange of data with the master.

If the master starts an acyclic write attempt to a data module parameterized as cyclic, the following error message is generated: "DPV1_ERRCL_ACC_INV_SLOT" (error code: 0B2h).

3.4.1 Read access

Two possibilities exist for acyclic read access to SSM6000 DP slave; these can be selected via the "index":

DS_Read telegram:

0x5E	Slot_number	Index	Request length
------	-------------	-------	----------------

The module to be read is selected via the slot number.

Index 2:

The modules selected for cyclic operation correspond to the readable slots for acyclic operation. Modules not selected for cyclic operation cannot be read in acyclic mode either.

Index 3:

The data modules can be read in the order of their basic configuration. All existing modules can be read as a corresponding slot, irrespective of the configuration of cyclic operation.

3.4.2 Write access

The data modules (the only module that can currently be written is the "Measurement" module) correspond to one slot each in the order of their basic configuration.

The current version permits writing of slot 9 only and corresponds to the "Measurement" module. In the case of an attempt to write other slot numbers, the master receives the "DPV1_ERRCL_ACC_INV_SLOT" error message (error code: 0B2h).

Description

PROFIBUS interface

The same error message is generated if the "Measurement" data module was selected (parameterized) for cyclic data exchange. Otherwise the output value which is output in acyclic mode would be cyclically overwritten.

Write access is possible via index 2 only. Write access attempts with another index trigger the "DPV1_ERRCL_ACC_INV_INDEX" error message (error code: 0B0_h).

DS_Write telegram:

0x5F	Slot_number	02 _h	Data length	Data
------	-------------	-----------------	-------------	------

3.5 Data modules of the SSM6000

The SSM6000 provides the following data modules:

Description	Data type / function	Data length (bytes)	Position (module)
CH4 (measuring gas)	Float / Input	4	1
H2S (measuring gas)	Float / Input	4	2
O2 (measuring gas)	Float / Input	4	3
CO2 (measuring gas)	Float / Input	4	4
Pressure	Float / Input	4	5
Temperature (inside)	Float / Input	4	6
Alarm	Word / Input	1	7
Status	Byte / Input	1	8
Measurement	Byte / IO	1	9
Analog Input 1..11	Word / Input	22	10

CH4 measuring gas:

The measuring range is from 0.0 to 99.9 % by volume. The measured value is updated after each measuring process and is then maintained until polled.

H2S measuring gas:

The measuring range is from 0 to 5000 ppm. The measured value is updated after each measuring process and is then maintained until polled.

O2 measuring gas:

The measuring range is from 0.0 to 25.0 % by volume. The measured value is updated after each measuring process and is then maintained until polled.

CO2 measuring gas:

The measuring range is from 0.0 to 99.9 % by volume. The measured value is updated after each measuring process and is then maintained until polled.

Pressure measured value:

The pressure value is updated every second and made available for polling.

Temperature (inside) measured value:

The temperature inside the unit is measured after each discontinuous measuring process or, during continuous measurement, every 2 seconds. Furthermore, the temperature is measured each time the key-operated switch is changed between measuring mode and setup mode.

Description

PROFIBUS interface

Analyzer status

The analyzer status indicates whether the SSM6000 is in setup or measuring mode. The values transmitted have the following meanings:

Value transmitted	Mode
0x01	Setup mode
0x02	Measuring mode

Alarms

Table as an overview for the bit-coded alarms

B7	B6	B5	B4	B3	B2	B1	B0	Alarm type
							1	CH4 over
						1		CH4 under
					1			H2S over
				1				O2 over
			1					O2 under
		1						CO2 over
	1							Analyzer inside temperature alarm
1								Analyzer malfunction

Measurement

This module can be read or written. It indicates which measuring-gas point is activated and whether a measuring process is currently underway. The H2S measurement is displayed here in continuous mode. A measurement starts when a number is written. After a measuring process is started, the user must write a 0 again in order to prevent repeated measuring. 4 measuring-gas points are currently supported. A written "one" activates measuring-gas point "one" and starts a measuring process, and so forth. Selecting another measuring-gas point during an active measuring process has no effect.

Value of "Measurement"	Response
0	No measurement
1	Measuring-gas point 1 activated, start measurement
2	Measuring-gas point 2 activated, start measurement
3	Measuring-gas point 3 activated, start measurement
4	Measuring-gas point 4 activated, start measurement

AI 1..11 – Analog inputs

Layout on request.

3.6 Data types and data format


The data transmitted via the Profibus is assigned to specific data types which, for their part, are stored in a specific data format.

3.6.1 FLOAT

The "float" data type is transmitted as a 32-bit float value. 4 data bytes are required for this purpose. The bytes are stored as follows:

Example:

Float value: 1234.56

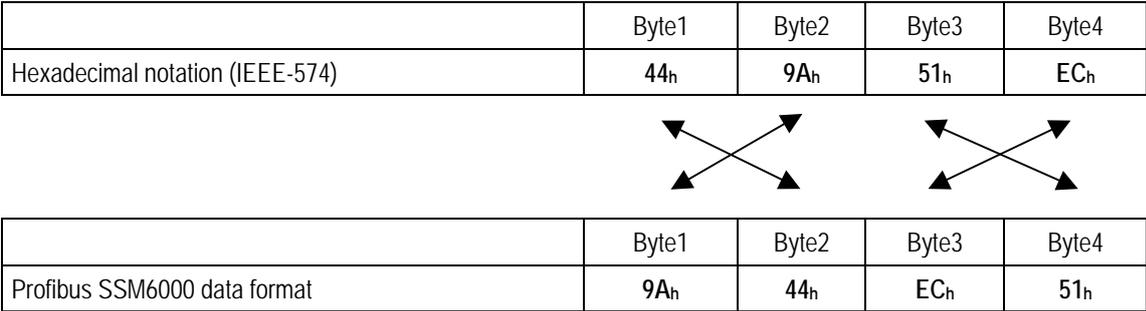


3.6.2 WORD

The "WORD" data type is transmitted as a 16-bit value. 2 data bytes are required for this purpose. The bytes are stored as follows:

Example:

Float value: 1234h

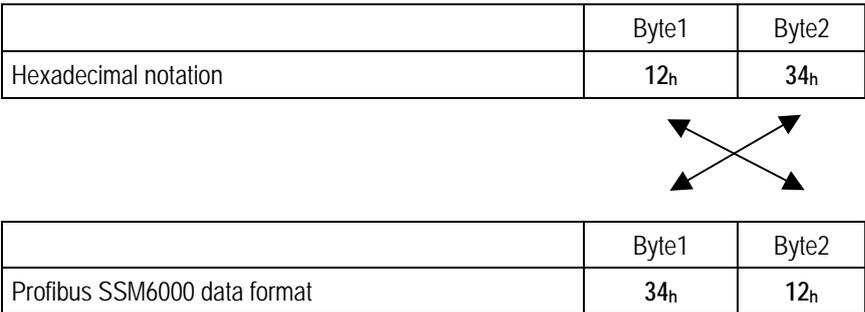

3.6.3 BYTE

The "BYTE" data type is transmitted as an 8-bit value. 1 data byte is required for this purpose.

4 Device address and ID number

4.1 Device address

The device address is used to distinguish between the different devices within a Profibus network. Each device must have a distinct address and all devices must have different addresses. Address changes via the Profibus in the "Wait-Parameter" (WPRM) state are currently not supported by the SSM6000.

The default device address of the SSM6000 is **device address "110"**. This setting can be varied between the values "1" and "126" via the device control menu. For this purpose, turn the key-operated switch on the front panel of the device clockwise until the display shows "SETUP MODE". You can then use the "down" key in order to move the flashing cursor to the "MODE" selection. Thereafter, press the <Enter> key to confirm. The "DEVICE ID" menu is accessed in the same manner. The "_PROFIBUS" and "_CANBUS" options are offered. Move the flashing cursor to the "_PROFIBUS" option and press the <Enter> key to confirm. You can then use the "up" and "down" keys in order to set the desired device address. As soon as the cursor is once again positioned in front of the "_PROFIBUS" selection parameter, the Profibus is re-initialized with the changed address and then communicates under this address.

4.2 ID number

The ID number of the device is fixed and cannot be varied from outside. The number is assigned by the Profibus organization or can be freely selected by the manufacturer. The Profibus DP slave accepts only those parameterization telegrams where the ID number transmitted is identical to its own ID number. The ID number is known to the Profibus master from the GSD (device master data) file. The **ID number** of the SSM6000 is **0AFFE_h**.

5 GSD file

```
;* ===== *
;* *
;* Vendor:   Novera Systemtechnik GmbH *
;*           Groninger Str. 25 *
;*           13347 Berlin *
;*           Germany *
;*           Tel.: +49-30-45029354 *
;*           FAX.: +49-30-45029355 *
;* *
;* ===== *
;* *
;* Function:   SSM6K *
;* *
;* *
;* Order Number : 43235000-gsd *
;* *
;* ----- *
;* Author: R. Pandel *
;* *
;*           Tel.: +49-30-45029354 *
;*           FAX.: +49-30-45029355 *
;* ----- *
;* *
;* history *
;* ===== *
;* 25.10.2005 [V1.00] Urversion *
;* ----- *
;* *
;*****
#Profibus_DP

;=====
;==== General DP Keywords =====
;=====

GSD_Revision = 4
Vendor_Name = "Novera Systemtechnik GmbH"
Model_Name = "SSM6K"
Revision = "1.00"
Ident_Number = 0xAFFE
Protocol_Ident = 0
Station_Type = 0
FMS_supp = 0
Hardware_Release = "V1.00"
Software_Release = "V1.00"
Redundancy = 0
Repeater_Ctrl_Sig = 2
24V_Pins = 0

;=====
;==== Supported baudrates =====
;=====

9.6_supp = 1
19.2_supp = 1
93.75_supp = 1
187.5_supp = 1
500_supp = 1
1.5M_supp = 1
3M_supp = 1
6M_supp = 1
12M_supp = 1

MaxTsdr_9.6=15
MaxTsdr_19.2=15
MaxTsdr_93.75=15
MaxTsdr_187.5=15
```

Description

PROFIBUS interface

```
MaxTsd_500=15
MaxTsd_1.5M=20
MaxTsd_3M=35
MaxTsd_6M=50
MaxTsd_12M=95
```

```
=====
;==== Slave specific values =====
=====
```

```
Slave_Family = 3@PRONOVA@SSM6000
Implementation_Type = "VPC3+"
Bitmap_Device = "ssm_AFFE"
```

```
Freeze_Mode_supp=1
Sync_Mode_supp=1
Fail_Safe=1
Auto_Baud_supp=1
Set_Slave_Add_supp=0
```

```
Min_Slave_Intervall=20
```

```
Modular_Station=1
Max_Module=10
Modul_Offset=1
Max_Input_Len=51
Max_Output_Len=1
Max_Data_Len=52
Max_Diag_Data_Len=17
```

```
=====
;==== User-Prm-Data =====
=====
```

```
Max_User_Prm_Data_Len = 50
Ext_User_Prm_Data_Const(0)= 0x00,0x00,0x08
```

```
=====
;==== Module-Definition-List =====
=====
```

```
Module="CH4 (float)          " 0x42,0x83,0x00,0x01
1
Ext_Module_Prm_Data_Len=5
Ext_User_Prm_Data_Const(0)=0x05,0x81,0x00,0x00,0x01
EndModule
```

```
Module="H2S (float)         " 0x42,0x83,0x00,0x02
2
Ext_Module_Prm_Data_Len=5
Ext_User_Prm_Data_Const(0)=0x05,0x81,0x00,0x00,0x02
EndModule
```

```
Module="O2 (float)          " 0x42,0x83,0x00,0x03
3
Ext_Module_Prm_Data_Len=5
Ext_User_Prm_Data_Const(0)=0x05,0x81,0x00,0x00,0x03
EndModule
```

```
Module="CO2 (float)        " 0x42,0x83,0x00,0x04
4
Ext_Module_Prm_Data_Len=5
Ext_User_Prm_Data_Const(0)=0x05,0x81,0x00,0x00,0x04
EndModule
```

```
Module="Druck (float)      " 0x42,0x83,0x00,0x05
5
Ext_Module_Prm_Data_Len=5
Ext_User_Prm_Data_Const(0)=0x05,0x81,0x00,0x00,0x05
EndModule
```

Description

PROFIBUS interface

```
Module="Temp (float)           " 0x42,0x83,0x00,0x06
6
Ext_Module_Prm_Data_Len=5
Ext_User_Prm_Data_Const(0)=0x05,0x81,0x00,0x00,0x06
EndModule
```

```
Module="Status (Byte)         " 0x42,0x00,0x00,0x07
7
Ext_Module_Prm_Data_Len=5
Ext_User_Prm_Data_Const(0)=0x05,0x81,0x00,0x00,0x07
EndModule
```

```
Module="Alarm (Byte)          " 0x42,0x00,0x00,0x08
8
Ext_Module_Prm_Data_Len=5
Ext_User_Prm_Data_Const(0)=0x05,0x81,0x00,0x00,0x08
EndModule
```

```
Module="Messen (Byte)         " 0xC1,0x00,0x00,0x09
9
Ext_Module_Prm_Data_Len=5
Ext_User_Prm_Data_Const(0)=0x05,0x81,0x00,0x00,0x09
EndModule
```

```
Module="AI (WORD)             " 0x42,0x4A,0x00,0x0A
10
Ext_Module_Prm_Data_Len=5
Ext_User_Prm_Data_Const(0)=0x05,0x81,0x00,0x00,0x0A
EndModule
```

```
;=====
;==== DPV1 KEY WORDS =====
;=====
```

```
DPV1_Slave                = 1
C1_Read_Write_supp       = 1
C1_Max_Data_Len          = 44      ;The parameter specifies the maximum length of user
data excluding                               ;Function_Num, Slot_number, Index, Length,
transferred on the                               ;MSAC_1 communication channel.
                                               ;Type: Unsigned8 (0 .. 240)

C1_Response_Timeout      = 300
Diagnostic_Alarm_supp    = 1
Process_Alarm_supp       = 1
Alarm_Type_Mode_supp     = 1
WD_Base_lms_supp        = 1
Publisher_supp           = 1
Prm_Block_Structure_supp = 1
Prm_Block_Structure_req  = 1

C2_Read_Write_supp       = 1
C2_Max_Data_Len          = 48      ;The parameter specifies the maximum length of user
data excluding                               ;Function_Num, Slot_number, Index, Length,
transferred on the                               ;MSAC_2 communication channel.
                                               ;Type: Unsigned8 (0,48 .. 240)

C2_Response_Timeout      = 300
C2_Max_Count_Channels    = 3
Max_Initiate_PDU_Length  = 52      ;The parameter specifies the maximum length of an
Initiate Request                               ;PDU including the Function_Num to the Resource
Manager.                                       ;Type: Unsigned8 (0,52.. 244)

DPV1_Data_Types          = 0
```